



installation and maintenance manual

FOR THE INSTALLER AND THE USER

NESTA
300 kW

FLOOR — STANDING CONDENSING BOILER

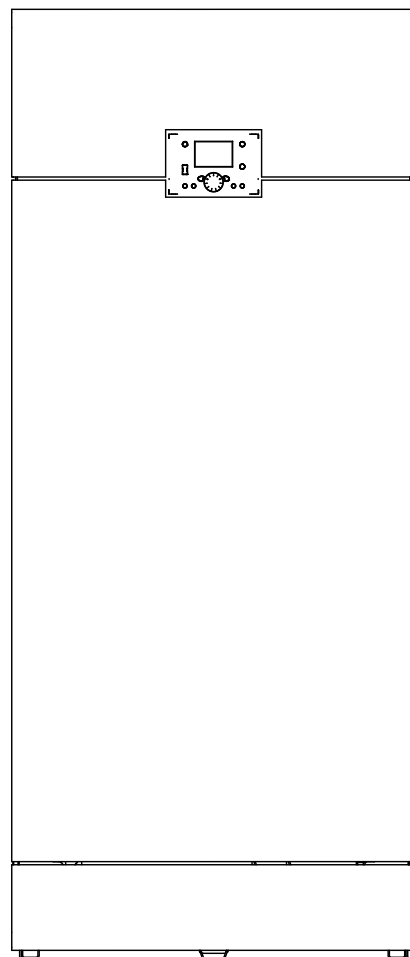


TABLE OF CONTENTS

| | |
|--|-------------|
| INDEX OF ILLUSTRATIONS | G-3 |
| About our Boilers | G-3 |
| Liabilities of the Manufacturer, the Installer and the End user | G-4 |
| About this Manual | G-5 |
| Safety Instructions | G-6 |
| Boiler Marking | G-7 |
| Package Contents | G-7 |
| PRODUCT DESCRIPTION | G-8 |
| Nesta 300 | G-8 |
| General Description | G-8 |
| Frost Protection | G-8 |
| Safety Devices | G-8 |
| Optional equipment | G-8 |
| Control Panel and Main Functions | G-10 |
| Symbols and Messages on the Control Panel | G-11 |
| TECHNICAL SPECIFICATIONS | G-12 |
| Dimensions and Clearances | G-12 |
| Performance and Efficiency Data | G-14 |
| ErP Data | G-14 |
| Combustion Data | G-15 |
| Gas Data | G-16 |
| Electrical Data | G-15 |
| Hydraulic Data | G-17 |
| Pressure Drop Curve | G-17 |
| Flow Rate | G-17 |
| INSTRUCTIONS FOR THE USER..... | G-18 |
| Safety Instructions for the User..... | G-18 |
| Periodic checks | U-19 |
| Starting the Appliance..... | U-20 |
| Stopping the Appliance..... | U-20 |
| What to Do if... .. | U-21 |
| Basic Settings | U-22 |
| Structure of Menus for the End User | U-25 |
| PRODUCT INSTALLATION | I-27 |
| Safety Instructions for the Installation..... | I-27 |
| Handling the Product | I-28 |
| Unpacking the Product | I-28 |
| Installing and Preparing the Boiler | I-28 |
| Removing and Installing the Access Panels ... | I-29 |
| Requirements for the Hydraulic Connections . | I-30 |
| Water Quality Requirements to Prevent Scaling and Corrosion in a Heating System..... | I-31 |
| Typical Hydraulic Connections - Heating CircuitI-33 | |
| Hydraulic Connections - Cascaded boilers, with External Domestic Hot Water Tank and Plate Heat Exchanger | I-34 |
| Hydraulic Connections - Cascaded boilers, with External Domestic Hot Water Tank and Low Loss Header | I-35 |
| Safety Instructions for the Chimney Connections . | I-36 |
| Chimney Connection..... | I-38 |
| Air Intake Grid Installation in Chimney Systems .. | I-39 |
| Engineering the Chimney System | I-40 |
| Accessories | I-40 |
| Safety Instructions for the Gas Connection | I-41 |

| | |
|--|-------------|
| Gas Conversion..... | I-42 |
| Preparing the Boiler for Gas Conversion..... | I-43 |
| Adjustment of Fan Speeds..... | I-44 |
| Combustion Adjustment for Gas Conversion . | I-45 |
| Safety Instructions for the Electrical Connections | I-47 |
| Connections | I-47 |
| Accessing the Low Voltage Terminal Strip and Electronic board..... | I-48 |
| Accessing the High Voltage Terminal Strip | I-49 |
| Routing the Cables..... | I-49 |
| Wiring Diagram..... | I-50 |
| COMMISSIONING | I-52 |
| Safety Instructions Before Start-up..... | I-52 |
| Filling the System | I-52 |
| Start-up and Combustion Adjustments | I-53 |
| MAINTENANCE..... | I-54 |
| Safety Instructions for Maintenance | I-54 |
| Maintenance Requirements | I-55 |
| Shutting Down for Maintenance..... | I-56 |
| Draining the Boiler | I-56 |
| Restarting after Maintenance | I-56 |
| Cleaning the Condensate Pipe and Trap..... | I-57 |
| Removing and Installing the Fan and Air Adapter Assembly | I-58 |
| Removing and Installing the Air-Gas Mixer | I-60 |
| Removing and Installing the Ignition and Ionization Electrodes | I-62 |
| Removing and Installing the Burner | I-63 |
| Checking and Cleaning the Combustion Chamber | I-64 |
| Replacing the Gas Valve Filter..... | I-64 |
| Checking the Flue Gas (FPS) and Air (APS) Pressure Switches operation..... | I-65 |
| ADDITIONAL INFORMATION FOR THE INSTALLER.. | I-66 |
| Optional Modules | I-66 |
| Extension Modules & Cable Hub | I-66 |
| Web Server Module | I-66 |
| Cascading module..... | I-66 |
| Boilers in a Cascade System | I-67 |
| Boiler Settings for the Installer | I-70 |
| Access Levels..... | I-70 |
| Commissioning Menu | I-70 |
| Menus and Settings | I-70 |
| Structure of Menus for the Installer | I-70 |
| Error Codes and Solutions | I-74 |
| Maintenance Messages | I-79 |
| Troubleshooting..... | I-80 |
| Installation Checklist | I-82 |
| Combustion Parameters - Log Sheet..... | I-85 |
| Water Parameters - Log Sheet..... | I-86 |
| Gas conversion - Log Sheet..... | I-87 |
| DECLARATION OF CONFORMITY | I-88 |

INDEX OF ILLUSTRATIONS

| | | | | | |
|----------|--|------|----------|--|------|
| Fig. 1. | Data Plate - Typical..... | G-7 | Fig. 21. | Accessing the High Voltage Terminals..... | I-49 |
| Fig. 2. | Gas Conversion Label - Typical..... | G-7 | Fig. 22. | Routing the Electrical Cables..... | I-49 |
| Fig. 3. | Nesta 300 Boiler Components - Front & Rear Views | G-9 | Fig. 23. | Filling the System - Typical | I-52 |
| Fig. 4. | Control Panel..... | G-10 | Fig. 24. | Draining the Boiler - Typical..... | I-56 |
| Fig. 5. | Typical Display..... | G-11 | Fig. 25. | Cleaning the Condensate Pipe and Trap..... | I-57 |
| Fig. 6. | Single Boiler Clearances..... | G-13 | Fig. 26. | Removing and Installing the Fan and Adapter Assembly..... | I-59 |
| Fig. 7. | Clearances for Cascaded Boilers..... | G-13 | Fig. 27. | Removing and Installing the Air-gas Mixer..... | I-61 |
| Fig. 8. | Boiler transport and Installation | I-28 | Fig. 28. | Removing and Installing the Electrodes | I-62 |
| Fig. 9. | Removing/Installing the Access Panels..... | I-29 | Fig. 29. | Removing and Installing the Burner..... | I-63 |
| Fig. 10. | Typical Heating System | I-33 | Fig. 30. | Cleaning the Combustion Chamber | I-64 |
| Fig. 11. | Cascaded Boilers, with External Domestic Hot Water Tank and Plate Heat Exchanger | I-34 | Fig. 31. | Replacing the Gas Valve Filter | I-64 |
| Fig. 12. | Cascaded Boilers, with External Domestic Hot Water Tank and Low Loss Header | I-35 | Fig. 32. | Testing the Air Pressure Switch and Flue Pressure Switch | I-65 |
| Fig. 13. | Air intake grid removal from storage | I-39 | Fig. 33. | Optional Modules and Cable Hub..... | I-66 |
| Fig. 14. | Air intake grid installation | I-39 | Fig. 34. | Cascading Module..... | I-66 |
| Fig. 15. | Accessing the Gas Valve | I-43 | Fig. 35. | Web Server Module..... | I-66 |
| Fig. 16. | Gas Valve - Pre-adjustments for Propane..... | I-43 | Fig. 36. | Principles of Cascade | I-67 |
| Fig. 17. | Fan Speed Adjustment - Typical Screen..... | I-44 | Fig. 37. | Cascading Module..... | I-67 |
| Fig. 18. | Combustion Adjustment on Gas Valve | I-45 | Fig. 38. | Cascade System with Plate Heat Exchanger .. | I-68 |
| Fig. 19. | Combustion Adjustment - Control Panel | I-46 | Fig. 39. | Cascade System with Low Loss Header..... | I-69 |
| Fig. 20. | Accessing the Low Voltage Terminals and Electronic Board | I-48 | | | |

About our Boilers

Compliance

All our boilers are compliant with the following directives and regulations:

- **GAR 2016/426/EU**
- **BED 92/42/EEC**
- **LVD 2014/35/EU**
- **EMC 2014/30/EU**
- **ErP 2009/125/EC**
- **RoHS 2011/65/EU**

Boiler Naming

In the documentation, products of this range can be designated indifferently using their full name or abbreviated name:

- Nesta 300 or N 300 FS

Liabilities of the Manufacturer, the Installer and the End user

Manufacturer

Our products are manufactured in compliance with the requirements of the applicable European Directives and standards, and are therefore delivered with all the required documentation and markings.

The quality of our products is essential to us, and we aim therefore at improving them continually. To this end, we reserve the right to change the technical characteristics and features of our products without prior notice. Please check for the latest revision of the manual on our website (www.myaic.eu).

The manufacturer shall not be held liable for any malfunction of the product resulting from:

- *The failure to comply with the safety and installation instructions provided herein,*
- *The failure to comply with the safety and operation instructions and recommendations provided herein,*
- *The failure to have the appliance maintained regularly,*
- *A modification of the appliance that is not approved by the manufacturer,*
- *The use the product for any other purpose than its intended use,*
- *The use of components and accessories that are not approved by the manufacturer.*

Installer

The installer is responsible for the correct installation, conversion (as required) and commissioning of the appliance according to:

- *The instructions and recommendations provided herein*
- *The applicable regulations and standards*

The installer shall provide the end-user with:

- *Any relevant explanation about the operation of the appliance and the heating system as well as the safety devices that are provided,*
- *Any instruction regarding periodic checks to be performed and possible anomaly to be reported*
- *All the documentation delivered with the appliance and installed accessories.*

The installer shall also inform the end-user of the necessity to have the appliance checked and maintained regularly by a qualified professional.

End-user

To ensure the best performances and safety of the appliance, the end-user shall:

- *Make sure that the appliance is installed, converted (as required), commissioned and adjusted by a qualified professional,*
- *Make sure that the appliance is checked and maintained regularly by a qualified professional,*
- *Comply with all the instructions and recommendations provided in the appliance documentation,*
- *Make sure to receive from the installer all the necessary explanations related to the operation of the appliance and the safety devices,*
- *Make sure to receive from the installer all the appliance and accessories documentation,*
- *Keep all the appliance documentation in a safe place for future use.*

The end-user shall use the product for its intended use.



- *Should the installer or the end user not comply with the instructions and requirements stated in this manual, the warranty will be void.*
- *For more information on the warranty terms and conditions, please connect to our website: www.myaic.eu.*

About this Manual

This documentation is part of the product. It will be handed over to the end-user who will keep it, with all the other applicable documents, in a safe place and readily available for use.

Before installing, operating or maintaining the appliance, please carefully read this manual and all the applicable documents provided with the components and accessories. They contain essential safety information.

Symbols in this Manual



Indicates an essential instruction which, if not followed, can result in a hazardous situation that can cause serious damage to equipment and/or injuries or death.



Indicates an essential instruction in relation with the presence of electrical power and a danger of electrical shock.




Indicates an important instruction which, if not followed, could result in a hazardous situation that could cause damage to equipment and/or injuries.



Indicates an important piece of information.



The electrical supply to the appliance must be activated/deactivated through the external circuit breaker or the power supply cable must be connected/disconnected.

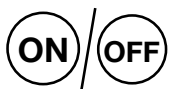


The appliance must be started/stopped using the ON/OFF switch installed on the appliance.



The gas supply to the appliance must be provided/shut down through the external gas tap.



The water circuit of the appliance must be full of water/empty.

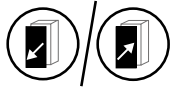

The front and top access panel(s) of the appliance must be removed/installed.



The appliance must have cooled down.



Gas connection.



Heating circuit supply connection.



Heating circuit return connection.

Symbols on the Appliance



High Voltage - danger of electric shock.



Ground / Earth.



Heating circuit connection.



Gas connection.

For an explanation of the symbols on the control panel, refer to **“Symbols and Messages on the Control Panel”** on page G-11.

Symbols on the Packaging



This side up



Keep dry



Fragile



Do not stack



The prefixes used in the page numbering indicate the following:

G- : General information

U- : Pages intended for the End User

I- : Pages intended exclusively for the qualified professional (e.g. Installer)

Safety Instructions



IF YOU SMELL GAS:

→ DO NOT:

- › Use an open flame
- › Smoke
- › Use electrical devices (phones, doorbell, etc.) or switches

→ DO:

- › Close the gas supply
- › Open all doors and windows to ventilate the room
- › Inform the neighbours of the danger by knocking at the doors.
- › Get out of the building
- › Call the gas company



- › This product is intended as a heat generator for heating systems.
- › This appliance must be installed according to the applicable local regulations and standards.
- › This appliance can be used by children who are at least 8 years old and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided that they are under supervision or have been given instructions concerning the use of the appliance in a safe way and that they understand the hazards involved.
- › Cleaning and user maintenance shall not be performed by children without supervision. Children shall not play with the appliance.
- › Any modification to the appliance and its components is strictly forbidden without the prior written consent of the manufacturer.
- › If components need to be replaced, only genuine factory parts or components approved by the manufacturer must be used.



- › When working on the appliance and the system, make sure to use the appropriate tools to avoid damaging the pipes and components.
- › If works need to be performed close to the appliance (e.g. in the boiler room or close to the air inlets), make sure to shut down the appliance to prevent dust from entering and accumulating in the appliance.
- › The appliance contains a frost-protection feature that will protect the appliance against frost, provided that the appliance remains in operation and the radiator valves are open.



- › When unpacking the appliance, check the integrity and condition of the packaging and that all the components and accessories described in the packing list are present. Contact your supplier in case of problem.
- › When discarding the packaging, do not contaminate the environment. Dispose of it according to the applicable local regulations on recycling.

Boiler Marking

The data plate is located at the back of the boiler.

The conversion sticker (yellow), is located under the appliance data plate.



Fig. 1. Data Plate - Typical

Package Contents

- ▶ A NESTA 300 boiler
- ▶ An Installation and Maintenance manual



Refer to **“Unpacking the Product” on page I-28** for the complete unpacking and installation instructions.

Gas conversion label

This appliance was converted on _____ day / _____ month / _____ year

from gas _____ (_____ mbar) to gas _____ (_____ mbar)
gas type (G20 / G20Y20 / G25 / G25.3 / G31) and its pressure

with kit _____
fill in with the kit name or number (if required) or cross it out

by _____
name and address of the organisation carrying out the conversion procedure and validating its correctness

Please read the Gas Conversion Procedure and follow all safety information, warnings and procedures.

! Failure to follow all instructions could cause severe personal injuries, death or property damage!

Place this label **UNDER** the existing data plate. **DO NOT** cover up the existing data plate.

Fig. 2. Gas Conversion Label - Typical

| Symbol | Description |
|--------|--|
| | Electrical data |
| | PMS maximum operating pressure |
| | Tmax maximum primary temperature |
| | V water content |
| | PMS maximum operating pressure (DHW circuit) |
| | Tmax maximum DHW temperature |
| | V water content |
| | Chimney types |
| | NOx class |

| Symbol | Description |
|-----------------------|---|
| Qmin | Minimum heat input |
| Qn | Nominal heat input |
| Pmin (80/60°C) | Minimum heat output (80/60°C) |
| Pn (80/60°C) | Nominal heat output (80/60°C) |
| Pmin (50/30°C) | Minimum heat output (50/30°C) |
| Pn (50/30°C) | Nominal heat output (50/30°C) |
| | CE sign indicating the compliance of the device with CE directives |
| | UKCA sign indicating the compliance of the device with UK regulations |
| | Note about handling electronic equipment waste |



The use of symbols on the data plate depends on the type of product.

PRODUCT DESCRIPTION

Nesta 300

General Description

This floor-standing Nesta boilers consist of compact, low-emission condensing appliances with a pre-mix burner and a stainless steel heat exchanger. The housing of the boiler is made of aluminium.

The fully radial burner ensures a high modulation ratio, combustion stability and very low NOx emissions.

The stainless steel heat exchanger offers a high water capacity and a large heat exchange surface to optimise energy and heating efficiency.

This boilers are designed for heating systems and can be used for indirect Domestic Hot Water production (provided that the system contains an optional external tank).

The appliances are built for natural gas (G20) but can be converted by a qualified professional to operate with either G25 natural gas, G31 liquefied petroleum gas (propane) or G20Y20 mixture, according to the procedure provided with the boiler. Gas conversion must comply with applicable local regulations and standards.

Nesta boilers are able to control 3 heating circuits with mixing functions, through 3 optional extension modules. Each extension module requires a power supply and a bus connection. Refer to **“Optional Modules” on page I-66** for more information.

These appliances **are not** provided with a built-in circulating pump. Therefore, the hydraulic system must be equipped with at least one pump for standard system flow operation.

The Nesta boilers can be connected in a cascade configuration, which means that the boilers are connected to the same water circuit and electronic controller, with one boiler operating as the master, and the others as “slaves”). Refer to **“Boilers in a Cascade System” on page I-67** for more information on cascade system possibilities.

Frost Protection

The Nesta boilers have a built-in anti-frost protection. The pump and the burner are started as required when the return water temperature drops below 5°C (as measured by the boiler internal sensor installed on the return circuit). The pump and/or burner will turn off when the return temperature reaches the required setpoint. The anti-frost protection function only protects the boiler, not the entire system.

Safety Devices

The Nesta boilers are equipped with a series of sensors and switches that provide safety for your appliance and heating system, such as:

- Water circuit temperature sensors (supply, return, system, etc.)
- Burner plate temperature limit switch
- Gas pressure switch
- Air pressure switch
- Flue pressure switch
- Water pressure sensor
- Flue temperature sensor
- Condensate level switch
- Alarm contacts

The Nesta boilers **are not** provided with the following mandatory safety equipment that the installer must place in the system:

- Expansion tank, suitable for the system size,
- Safety group, composed of a safety valve (pressure rating adapted to the system), an automatic air relief valve and a manometer,
- Air relief valve(s), at the high point(s) of the system.

Optional equipment

Some optional equipment can be used with the Nesta boilers. Please contact your AIC Europe representative for more information and a list of available equipment.

To lengthen the life of your boiler and heating system, in addition to the recommended water characteristics described in **“Water Quality Requirements to Prevent Scaling and Corrosion in a Heating System” on page I-31**, the following equipment can be installed in the heating circuit:

- Water filter
- Dirt separator
- Low loss header
- Plate heat exchanger
- Air separator

See **“Requirements for the Hydraulic Connections” on page I-30** for more information on this equipment.

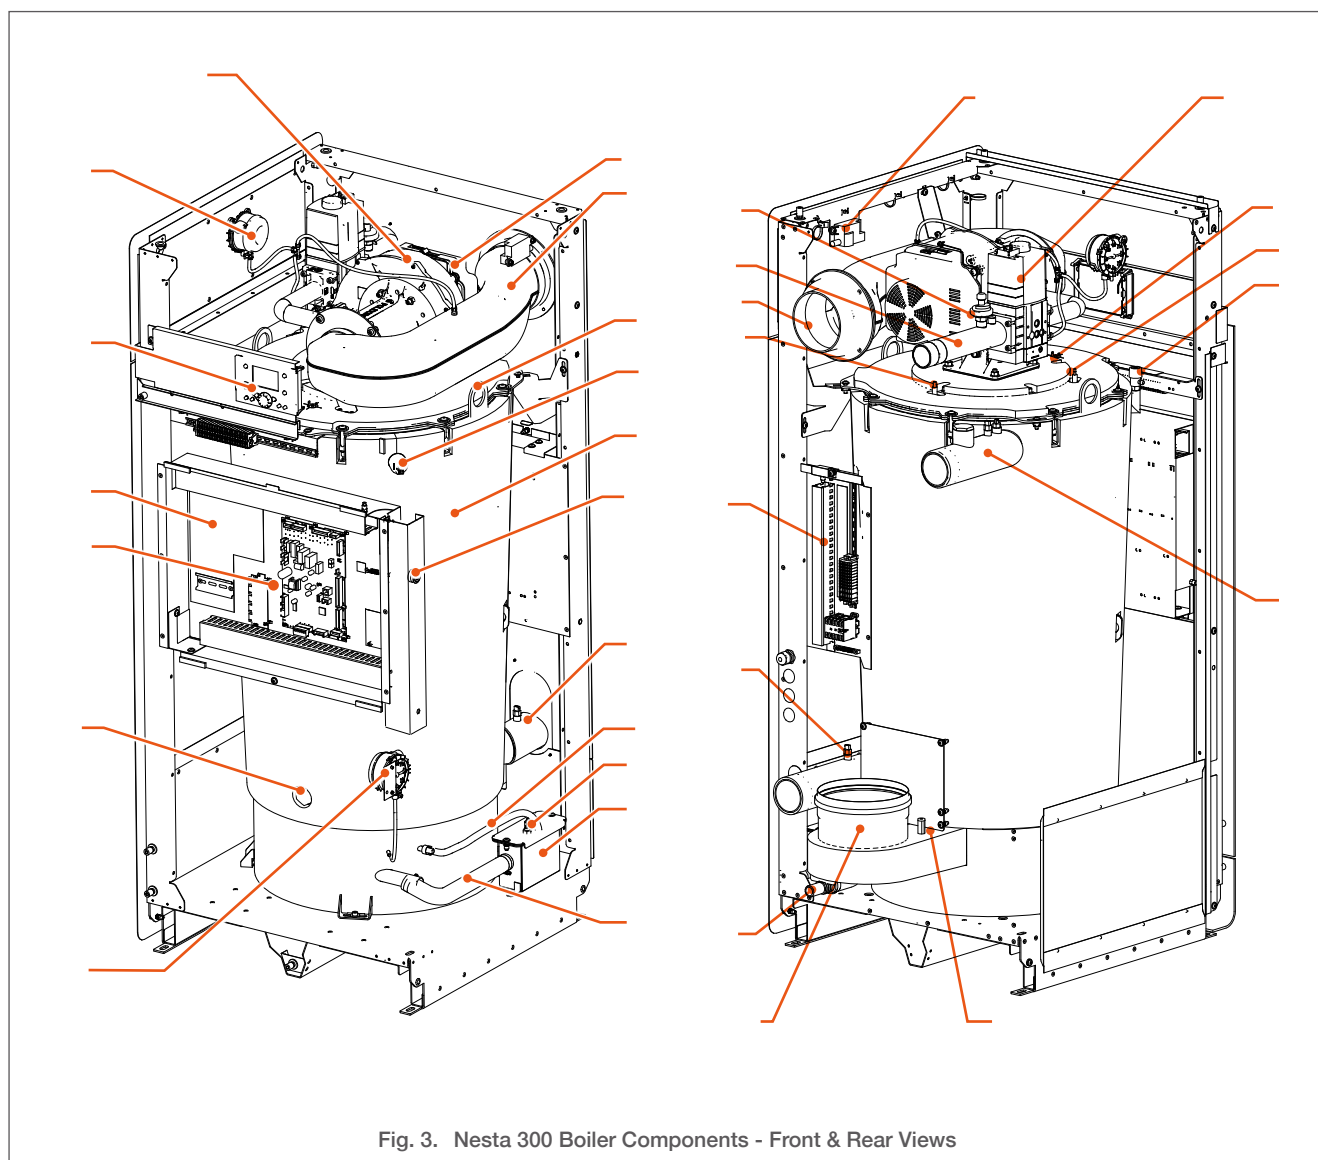


Fig. 3. Nesta 300 Boiler Components - Front & Rear Views

KEY

- | | |
|--|--|
| 1. Fan and burner assembly | 16. Control panel with LCD display |
| 2. Air inlet duct | 17. Burner plate temperature limit switch |
| 3. Ignition electrode | 18. Air adapter |
| 4. Hoisting ring | 19. Gas valve |
| 5. Water pressure sensor | 20. Ionization electrode |
| 6. Heat exchanger | 21. Manual air vent |
| 7. On-Off switch | 22. Heating supply connection, with temperature sensor |
| 8. Heating return connection, with temperature sensor | 23. Flue gas temperature sensor |
| 9. Condensate vent | 24. Flue gas connection |
| 10. Condensate level switch | 25. Condensate drain |
| 11. Condensate trap | 26. Rear electrical box (high voltage terminal strip) |
| 12. Condensate pipe | 27. Gas pipe |
| 13. Drain connection | 28. Gas pressure switch |
| 14. Electronic main board and cable hub (for optional module connection, see "Optional Modules" on page I-66) | 29. Ignition transformer |
| 15. Electronic junction box | 30. Air pressure switch |
| | 31. Flue pressure switch |

PRODUCT DESCRIPTION

Control Panel and Main Functions

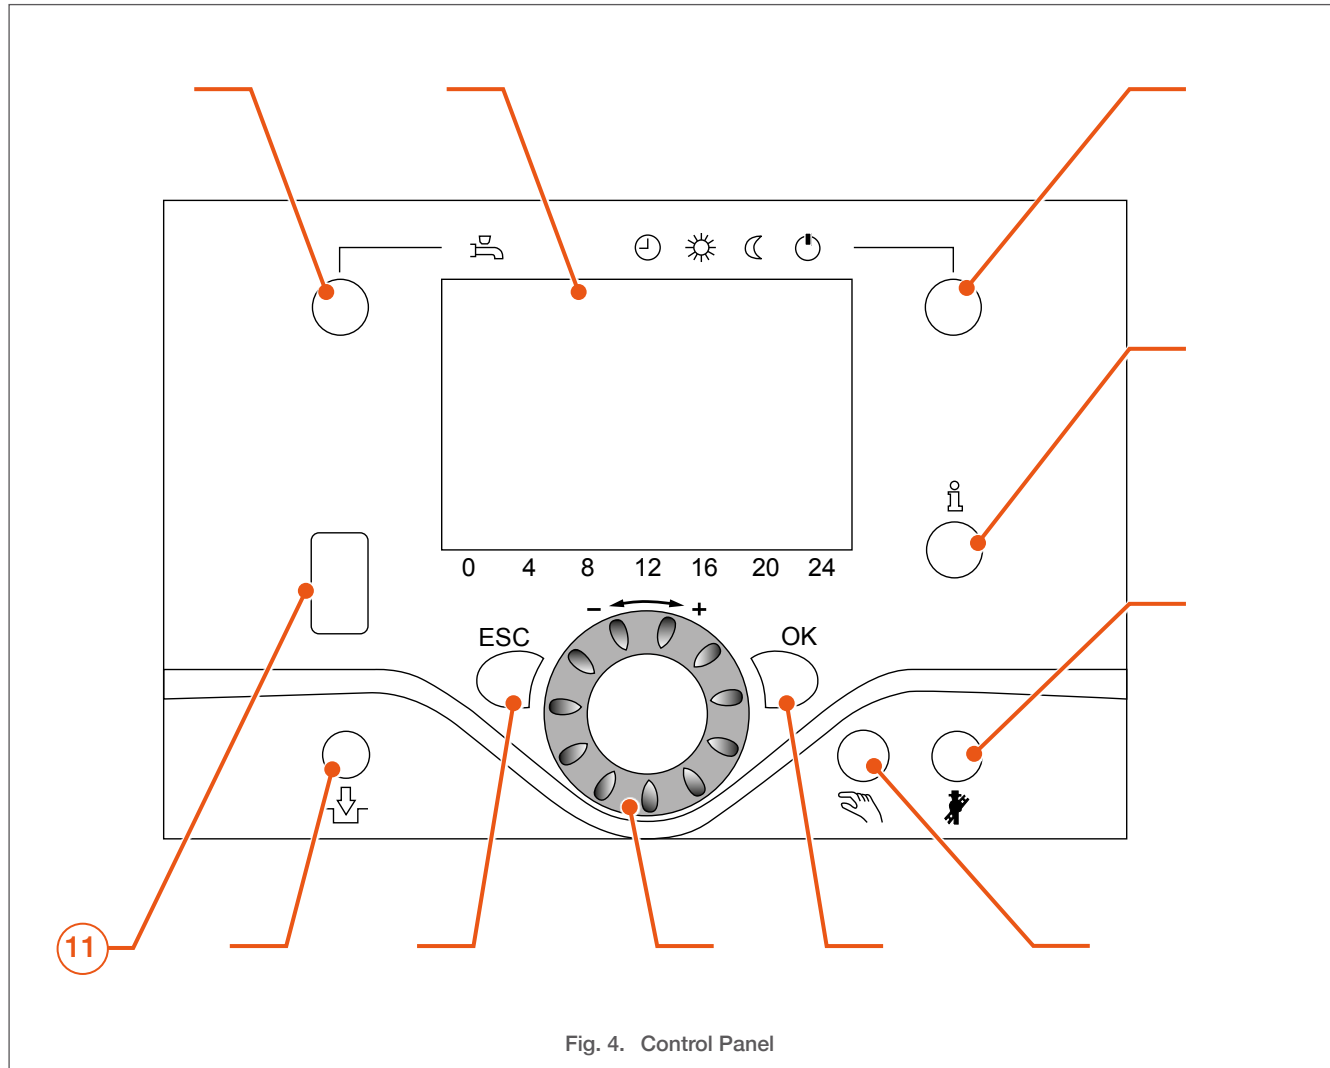


Fig. 4. Control Panel


KEY


1. **Domestic Hot Water on/off button** - Pressing this button activates/deactivates the Domestic Hot Water function (house with water drop icon).
2. **LCD Display** - The display illuminates whenever a control is depressed, and remains on for 8 minutes. For a detail of the symbols and messages displayed on the screen, see **"Symbols and Messages on the Control Panel" on page G-11.**
3. **Heating mode selection button** - Pressing this button activates/deactivates one of the four following heating mode:
 - Automatic mode (sun icon)
 - Comfort mode (sun with rays icon)
 - Reduced mode (moon icon)
 - Protection mode (power icon)
4. **Information display button** - Pressing this button displays more information on the screen (e.g. details of an error or maintenance code, special mode messages and INFO lines). It also allows to access the various user levels of the controller menus.
5. **Chimney sweep function button** - This button allows to perform a measurement of the flue gas contents.
6. **Manual operation mode button** - The operation depends on the function defined for the relays (Expert Level). It can also be used to activate the bleeding function using an air purge installed at all high points of the circuit.
7. **Confirmation button** - This button allows to access the setting menus for the end user, and to validate a value or a selection.
8. **Rotary selection knob** - Turning the knob to the left or to the right allows to scroll through the menus or increase/decrease a value.
9. **Escape button** - To cancel any ongoing operation or go back to the Home screen.
10. **Reset button** - To reset an error code displayed on the screen.
11. **Service Socket (BSB)** - Not used


For more information on the operation and menus of the controller, see **"Basic Settings" on page U-22.**


Symbols and Messages on the Control Panel


The following symbols are present **on the control panel** (See Fig. 5):

 **Domestic Hot Water mode.** At activation, this mode also ensures that the water is heated up to 65°C once a week to prevent any development of legionella bacteria in the DHW circuit. When activated, a black line (1) is displayed under the symbol.

 **Automatic mode.** This mode operates the boiler according to a scheduled programme, using the setpoints defined for the Comfort (☀) and Reduced (☾) modes. The ECO function is active (automatic summer/winter changeover). It also allows the anti-frost and overheating protections to be active. When this mode is activated, a black line is displayed under the symbol.

 **Comfort mode.** This mode operates the appliance, up to the temperature setpoint defined for the Comfort operation and maintains it continuously (no scheduler). It also allows the anti-frost and overheating protections to be active. The ECO function is **NOT** active (automatic summer/winter changeover). When this mode is activated, a black line is displayed under the symbol.

 **Reduced mode.** This mode operates the appliance, up to the temperature setpoint defined for the reduced operation and maintains it continuously (no scheduler). It also allows the anti-frost and overheating protections to be active. When the mode is activated, a black line is displayed under the symbol.

 **Protection mode.** In this mode, the heating system is disabled, but the anti-frost and overheating protections remain active.


 Information.

 Chimney sweep.


 Manual mode.

 Reset.


The following symbols are displayed **on the screen** (See Fig. 5):


 **Comfort mode active (3).** The time scale (4) at the bottom of the display indicates the period during which this mode is active (in the screen below, the automatic mode, with scheduler active).

 **Reduced mode active.**

 **Frost protection active.** The appliance will heat up to the frost-protection setpoint.


 **Process in progress.**

 **Holiday function active.**

 **Reference to heating circuits.**

 **The burner is in operation.**


 **Maintenance message.**

 **Fault message -** An error has occurred and a fault code and text can be displayed on the screen by pushing on the Info button.

INFO Information level active (2)


PROG Setting level active - the parameters can be changed.

ECO Heating system switched off, but ECO function active.

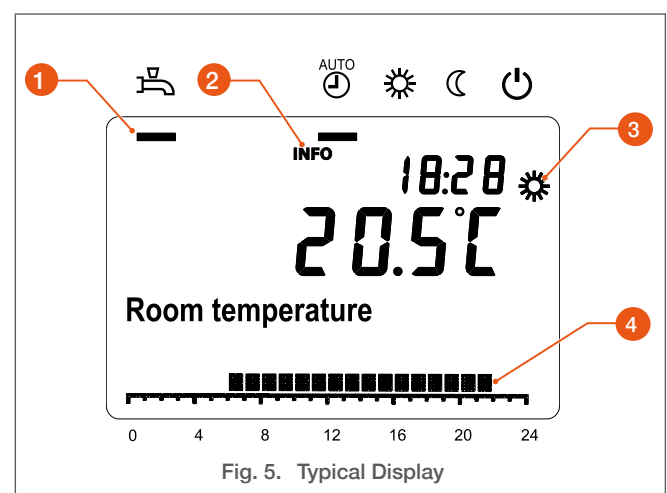


TECHNICAL SPECIFICATIONS

Dimensions and Clearances

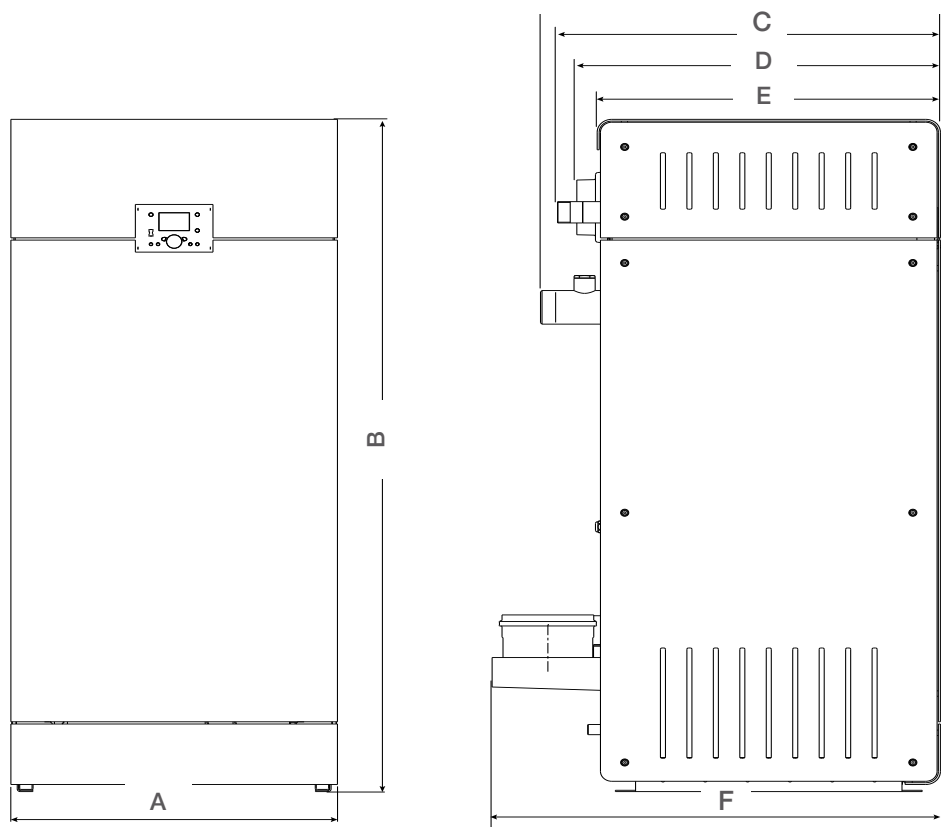


| Dimensions & weight | | N 300 FS |
|---------------------|----|----------|
| A | mm | 648 |
| B | mm | 1524 |
| C | mm | 793 |
| D | mm | 721 |
| E | mm | 681 |
| F | mm | 890 |
| G | mm | 534 |
| H | mm | 471 |
| I | mm | 167 |
| J | mm | 1324 |
| K | mm | 1313 |
| L | mm | 1098 |
| M | mm | 400 |
| N | mm | 361 |
| O | mm | 141 |
| P | mm | 334 |
| Q | mm | 152 |
| R | mm | 128 |
| dry weight | kg | 283 |

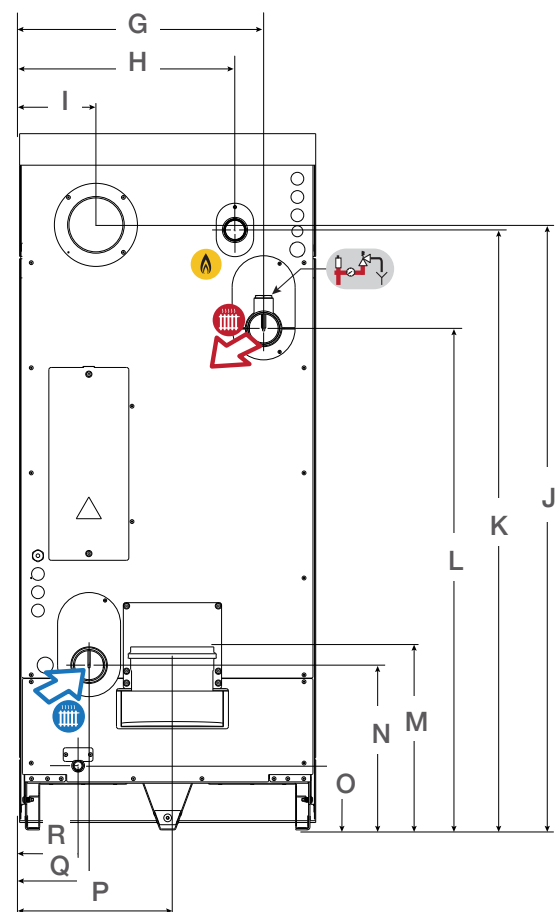

Connections

N 300 FS


| | | |
|---------------------------------------|-----------------|--------|
| supply/return connections (🏠) Ø - [M] | in. | 2 1/2 |
| safety group connection (🔧) Ø - [F] | in. | 1 |
| gas connection (🔥) Ø - [M] | in. | 1 1/2 |
| flue gas exhaust connection Ø | mm | 180 |
| combustion air inlet connection Ø | mm | 125 |
| condensate drain connection Ø | mm | 25 |
| min. cross section area of air inlet | mm ² | 12 000 |

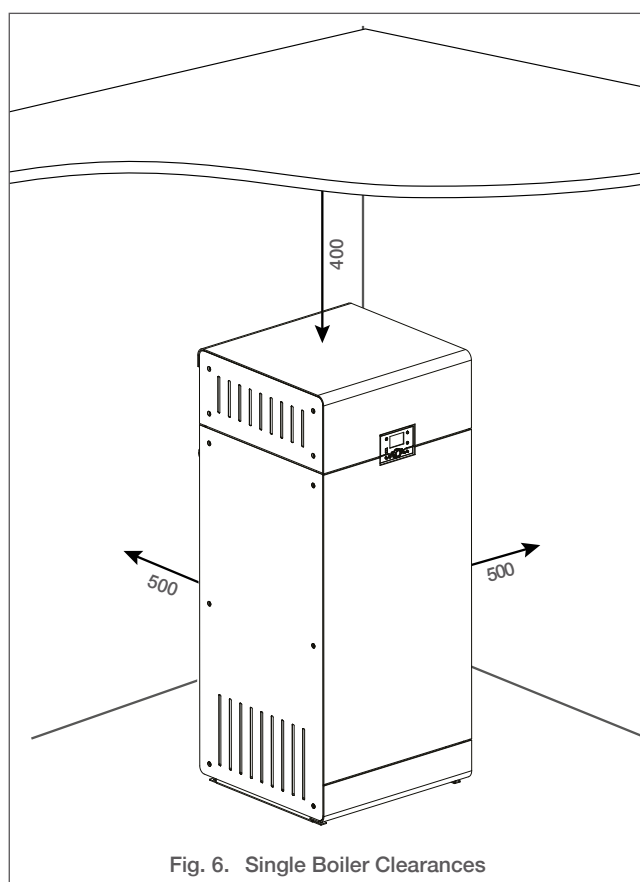

| Clearances | | Min. | Recommended |
|------------|----|-------|-------------|
| top | mm | 400 | 800 |
| back | mm | 500 | 700 |
| front | mm | 1 000 | 1 000 |
| sides | mm | 500* | |

* in a cascade configuration, boilers can be installed side-by-side with a 160 mm clearance between them. Side clearance must be complied with for the "outer" side of the first and last boiler in the chain.

In case of gas conversion, side clearance must be at least 500 mm

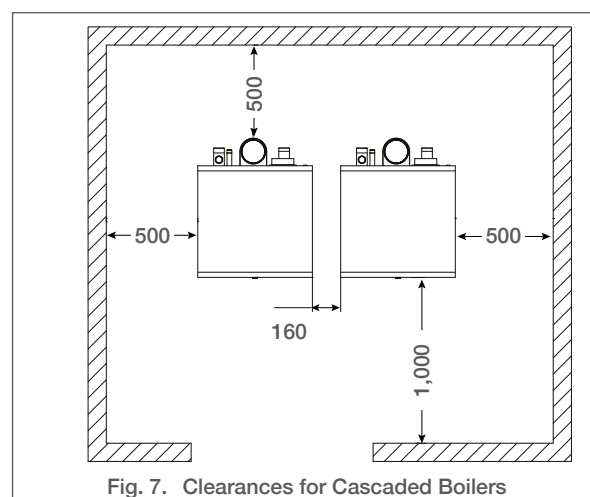

TECHNICAL SPECIFICATIONS

Performance and Efficiency Data

| | | | N 300 FS (min. - max.)* |
|---|----------|----|-----------------------------------|
| heat input (net) | G20/G25 | | 31,0 - 280,0 |
| | G31 | kW | 55,0 - 280,0 |
| | G20Y20** | | 31,0 - 280,0 |
| heat output at 80/60°C | G20/G25 | | 30,0 - 272,0 |
| | G31 | kW | 53,3 - 273,8 |
| | G20Y20** | | 30,0 - 272,0 |
| heat output at 50/30°C | G20/G25 | | 33,2 - 300,0 |
| | G31 | kW | 57,9 - 295,1 |
| | G20Y20** | | 33,2 - 300,0 |
| heating efficiency 80/60°C | G20 | % | 96,83 - 97,25 |
| heating efficiency 50/30°C | G20 | % | 107,21 - 107,14 |
| useful efficiency at 30% (return at 30°C) | | % | 108,09 |
| seasonal efficiency | | % | 93,0 |

* "min. - max." stands for "@Min output" and "@Max output"

** up to 20vol.% hydrogen

ErP Data

| boiler type and model | N 300 FS | |
|---|-----------------|-------|
| condensing boiler | Y/N | Y |
| low temp boiler | Y/N | Y |
| combination heater | Y/N | N |
| useful heat output | | |
| at 30% of rated heat output (P_1) | kW | 51,97 |
| at rated output and high-temp regime (P_4) | kW | 272,0 |
| useful efficiency | | |
| at 30% of rated heat output (η_1) | % | 97,39 |
| at rated output and high-temp regime (η_4) | % | 87,71 |
| auxiliary electricity consumption | | |
| at full load (elmax) | kW | 0,41 |
| at part load (elmin) | kW | 0,034 |
| in standby mode (P_{SB}) | kW | 0,012 |
| standby heat loss (P_{stby}) | kW | 0,25 |
| annual energy consumption for space heating | GJ | 468 |
| sound power level indoors LWA | dB | 79 |

Combustion Data

N 300 FS

(min. - max.)*

| | | | | | |
|---|---------------------------|------------|-------------------------------|--------------|-----|
| chimney type(s) | | | B23, B23p, C43, C53, C63, C83 | | |
| flue gas temperature at 80/60°C | | | °C | 55,7 - 61,9 | |
| flue gas temperature at 50/30°C | | | °C | 29,7 - 34,6 | |
| overheat flue gas temperature | | | °C | 97,0 | |
| min. - max. flue gas pressure (incl. max wind condition) | | | Pa | -25 - 200,0 | |
| mass flow rate of flue gases | | | g/s | 13,0 - 120,0 | |
| max. condensate volume | | | kg/h | 36,0 | |
| CO emissions | | | mg/kWh | 66,59 | |
| CO ₂ contents** | G20 | min output | % | 8,0 | |
| | | max output | % | 8,7 | |
| | G25 | min output | % | 8,1 | |
| | | max output | % | 9,3 | |
| | G31 | min output | % | 10,5 | |
| | | max output | % | 10,5 | |
| | G20Y20 | min output | % | 6,3 | |
| | | max output | % | 7,6 | |
| | O ₂ contents** | G20 | min output | % | 6,7 |
| | | | max output | % | 5,5 |
| G25 | | min output | % | 6,2 | |
| | | max output | % | 4,0 | |
| G31 | | min output | % | 5,0 | |
| | | max output | % | 5,0 | |
| G20Y20 | | min output | % | 8,9 | |
| | | max output | % | 6,5 | |
| NOx level | | | mg/kWh | 24,0 | |
| NOx class | | | | 6 | |

* "min. - max." stands for "@Min output" and "@Max output"

** Tolerance is +/- 0.3%

Electrical Data

N 300 FS

| | | |
|----------------------------|--------|----------|
| supply voltage / frequency | V / Hz | 230 / 50 |
| protection class | IP | X4D |

TECHNICAL SPECIFICATIONS

Gas Data

N 300 FS

(min. - max.)*

| | | | |
|--------------------------|--|------|---------------------------------|
| gas type(s) | G20 - G20Y20 - G25 - G25.1 - G25.3 - G31 | | |
| gas pressure | G20/G20Y20 (20 mbar) | mbar | 17 - 25 |
| | G25 (25 mbar) | mbar | 20 - 30 |
| | G25.1 (25 mbar) | mbar | 18 - 33 |
| | G25.3 (25 mbar) | mbar | 20 - 30 |
| | G31 (30/37/50 mbar) | mbar | 25 - 35 / 25 - 45 / 42,5 - 57,5 |
| gas flow rate (G20)** | | m³/h | 3,29 - 29,02 |
| gas flow rate (G25)** | | m³/h | 3,75 - 33,08 |
| gas flow rate (G31)** | | m³/h | 2,25 - 11,51 |
| gas flow rate (G20Y20)** | | m³/h | 3,82 - 33,95 |

* "min. - max." stands for "@Min output" and "@Max output"

** 15°C, 1013.25 mbar, dry gas

| Gas category | Gas type | Gas pressure | Country of destination |
|--------------|---------------|------------------|--|
| I2E(S) | G20 | 20 mbar | BE |
| I2H | G20 | 20 mbar | AT, CH, CY, CZ, DK, EE, ES, FI, GB, GR, HR, IE, IT, LT, LV, NO, PT, RO, SE, SI, SK, TR |
| I2E | G20 | 20 mbar | DE, PL, RO, NL |
| I2ELL | G20/G25 | 20 mbar | DE |
| I2HS | G20/G25,1 | 25 mbar | HU |
| I2N | G20/G25 | 20/25 mbar | BE, DE, DK, ES, FR, GR, NL, PL, PT, SI |
| I2EK | G20/G25,3 | 25 mbar | NL |
| I3P | G31 | 30 mbar | CZ, NL, RO |
| | | 37 mbar | BE, CH, CZ, ES, FR, GB, GR, HR, IE, IT, LT, NL, PL, PT, SI, SK, TR |
| | | 50 mbar | AT, BE, CH, CZ, DE, ES, FR, GB, NL, SK |
| I2E(R) | G20 | 20 mbar | BE |
| II2E3P | G20/G31 | 20/37 mbar | PL |
| II2E3P | G20/G31 | 20/50 mbar | DE |
| II2E(S)3P | G20/G31 | 20/37/50 mbar | BE |
| II2EK3P | G20/G25,3/G31 | 20/25/37/50 mbar | NL |
| II2H3P | G20/G31 | 20/30 mbar | CZ, RO |
| | | 20/37 mbar | CH, CZ, ES, GB, GR, HR, IE, IT, LT, PT, SI, SK, TR |
| | | 20/50 mbar | AT, CH, CZ, ES, GB, SK |
| II2L3P | G25/G31 | 25/37/50 mbar | FR |
| | | 20/30 mbar | RO |
| II2E+3P | G20/G31 | 20/25/37/50 mbar | BE, FR |
| II2E(R)3P | G20/G31 | 20/37/50 mbar | BE |
| II2Esi3P | G20/G25/G31 | 20/25/37/50 mbar | FR |
| II2Er3P | G20/G25/G31 | 20/25/37/50 mbar | FR |
| II2ELL3P | G20/G25/G31 | 20/50 mbar | DE |




Appliances operating with gas categories I2E and I2H can also operate with G20Y20 gas type (G20 natural gas + 20% Hydrogen). Please check your applicable local regulations for compliance before any installation.

Hydraulic Data

N 300 FS

| | | |
|---|------|-------|
| water content | l | 75 |
| hydraulic pressure drop at $\Delta T = 20k$ | mbar | 30,31 |
| minimum operating pressure | bar | 0,8 |
| maximum operating pressure | bar | 6 |
| maximum boiler supply temperature | °C | 85 |

Pressure Drop Curve

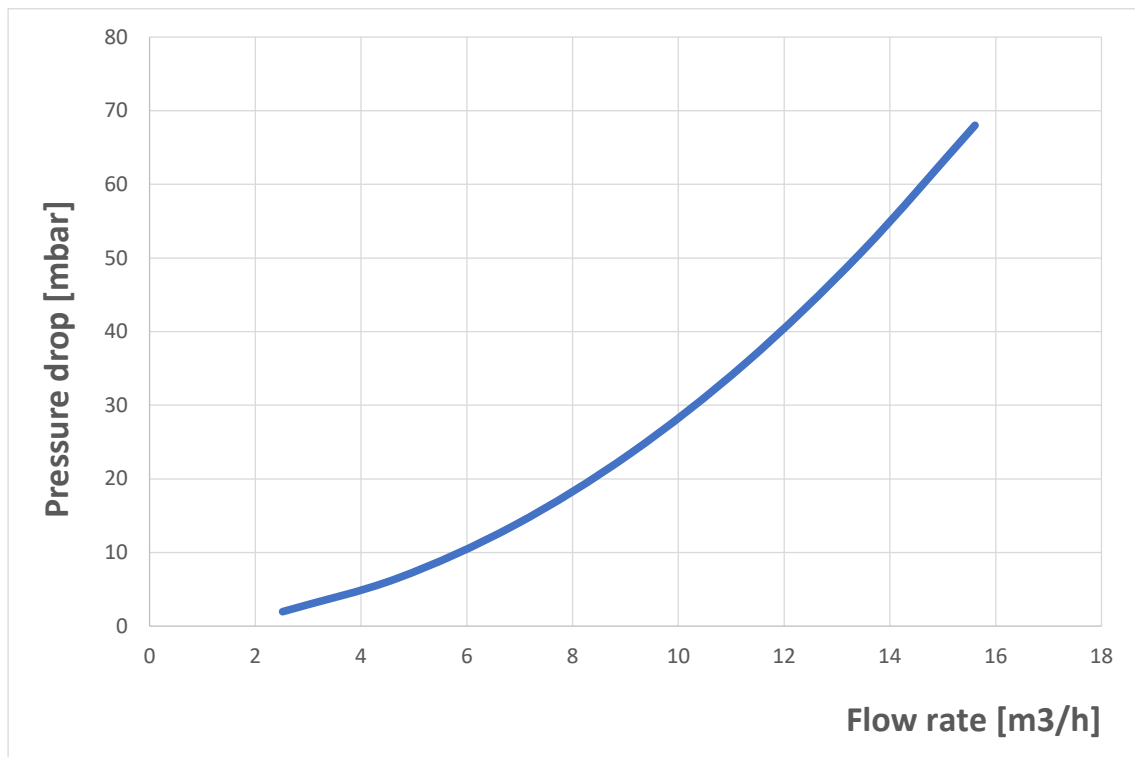

Flow Rate

N 300 FS

| | | |
|---|------|-------|
| minimum water flow rate at $\Delta T = 20k$ | m³/h | 11,22 |
|---|------|-------|

Safety Instructions for the User



IF YOU SMELL GAS:

→ DO NOT:

- › Use an open flame
- › Smoke
- › Use electrical devices (phones, doorbells, etc.) or switches

→ DO:

- › Close the gas supply
- › Open all doors and windows to ventilate the room
- › Inform your neighbours of the danger by knocking at the doors.
- › Get out of the building
- › Call your installer or gas company



- › This appliance can be used by children who are at least 8 years old and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided that they are under supervision or have been given instructions concerning the use of the appliance in a safe way and that they understand the hazards involved.
- › Cleaning and user maintenance shall not be performed by children without supervision. Children shall not play with the appliance.
- › For safety reasons, we recommend that smoke and carbon monoxide detectors are installed in the living areas of your building according to the applicable local regulations.
- › If smoke is present, shut down the appliance, ventilate the room and exit the building. Then call your installer to investigate and solve the problem.
- › Do not store any flammable, corrosive or explosive products near the appliance.
- › Do not modify or deactivate any component, nor any safety device in the system.
- › Do not operate the appliance when the casing is open.



- › Do not modify any part of the electrical system or access internal components.
- › Do not touch the appliance with any wet body parts when the appliance is supplied with electrical power.



- › Do not modify or block the condensate outlet(s).
- › Do not open any sealed part or component. Failure to comply with this instruction can result in damages and/or injuries.
- › The sight glass can be very hot when the appliance is in operation. Do not touch the sight glass or its immediate surroundings.
- › Make sure that the appliance and the heating system are prevented from freezing.
- › In case of water leakage, disconnect the appliance from the power supply and gas source, turn off the water supply and call a qualified professional.



- If works need to be performed close to the appliance (e.g. in the boiler room or close to the air inlets), make sure that the appliance is shut down to prevent the ingress and accumulation of dust.
- In case of abnormal noises in the system or the appliance, please notify a qualified professional.
- Any setting of the appliance by the end-user using the installer-specific functions, that would cause the appliance to malfunction, could result in damages to the equipment. Only the end-user settings described in this manual are available to the end-user.
- If a condensate neutralisation system is installed, have it checked and cleaned at least once a year.



When cleaning the appliance cabinet panels, do not use solvents or aggressive/abrasive cleaning agents. Wipe the surfaces using a soft clean cloth, water and soap.

Periodic checks



- Check regularly that the water pressure of the system is at least 1.2 bar when cold. If not, top up the system with water as instructed by the installer at appliance installation or call your installer.
- If a topping up of the system is required to maintain the minimum recommended water pressure, always turn the appliance off and only add small quantities of water at a time. If a large amount of cold water is added in a hot appliance, the appliance can be damaged permanently.
- If the system needs to be topped up regularly, there may be a leak in the system. In that case, call your installer.
- Check regularly that there is no water below the appliance. If there is, call your installer.
- Check regularly that there is no error code displayed on the control panel screen. Call your installer as required.

Disposal of the Product at the End of Service Life



At the end of service life, the product should not be disposed of as solid urban waste, but should be handed over to a differentiated waste collection centre.

Starting the Appliance



The first start-up of the boiler after its installation must be performed by a qualified professional, according to the procedure in “Start-up and Combustion Adjustments” on page I-53.

Conditions:



Procedure:

1. Make sure that the power supply cable is connected to the boiler.
2. Push in the On/Off switch located on the right side of the boiler.



When in the ON position, the switch remains pushed in and is illuminated.

3. Select the heating mode as required.
4. Activate the DHW mode as required.

Follow-on tasks:

Check the pressure of the circuit in operation. It should be between 1.2 and 6 bar (with pump on).

Stopping the Appliance

Conditions:

None

Procedure:

1. Push the On/Off switch located on the right side of the boiler.






When in the OFF position, the switch is released from its pushed in position. Its built-in light goes off and the button comes flush with the outer frame.





2. To completely cut the power supply to the boiler, either disconnect the power supply cable from the boiler, or use the external circuit breaker.

Follow-on tasks:

None


| What to Do if... | Cause | Action |
|--|-------------------------------|---|
| Boiler does not start | No power supply | <ol style="list-style-type: none"> 1. Check that the power button is in ON position (pushed in and illuminated). 2. Make sure the power supply is connected to the mains. 3. Check the external power supply box (circuit breaker) and reset it as required. |
| Error code 133 displayed | Time out for flame ignition | <ol style="list-style-type: none"> 1. Press Reset button (. 2. If the fault appears several times, call your installer. |
| Error code 111 displayed | Temperature limit switch open | Check that radiator valves are open. |
| Error code 105 displayed Maintenance icon () | Maintenance message | Press information button () for detailed information. For an explanation of the maintenance modes, see “Maintenance Messages” on page I-79. |
| Error code 118 displayed | Low water pressure | Refill the heating system. |

Basic Settings


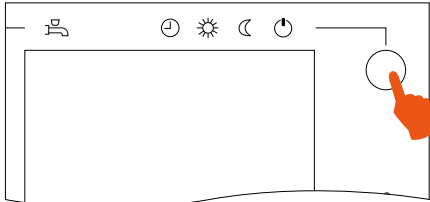
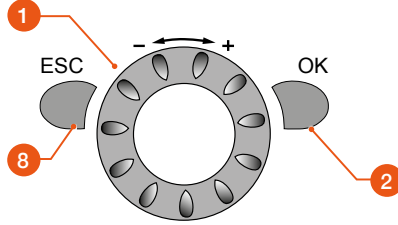
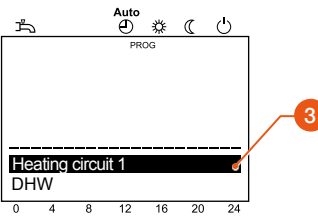
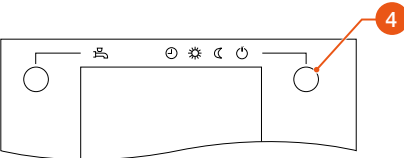
| Setting | Procedure | Controls/Screens |
|--|---|--|
| Heating mode selection | <p>Press the Heating mode selection button to toggle from one mode to the other:</p> <ul style="list-style-type: none"> Automatic mode (☰) (to be programmed, refer to “Boiler Settings for the Installer” on page I-70. Comfort mode (☀) Reduced mode (☾) Protection mode (⏻) <p>For a description of the heating modes, refer to “Symbols and Messages on the Control Panel” on page G-11.</p> |  |
| Temperature setpoint for the Comfort and the Reduced modes | <ol style="list-style-type: none"> When in Comfort mode, rotate the knob (1) to adjust the temperature setpoint. <p>Alternatively, the setting can be performed through the menus</p> <ol style="list-style-type: none"> Press the OK button (2) to access the end user menu. Rotate the knob (1) to scroll through the menu until “Heating circuit 1” (3) is highlighted. Press the OK button (2) to validate the selection Rotate the knob (1) to select “Room comfort setpoint” Press the OK button (2) to validate the selection. Rotate the knob to increase/decrease the temperature to the desired value. Press the OK button (2) to save the setting. Rotate the knob (1) to select “Room reduced setpoint” Press the OK button (2) to validate the selection. Rotate the knob to increase/decrease the temperature to the desired value. Press the OK button (2) to save the setting. Press the Heating Mode Selection button (4) to go back to the home screen. |    |



- When a mode is selected, it is marked by a black line underneath.
- Pressing the ESC button (8) will cancel the ongoing setting operation and return to the home screen without saving the settings.
- When the setting process is interrupted for more than 8 minutes, the controller automatically returns to the home screen without saving the settings.
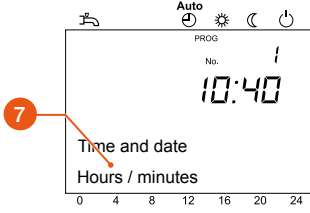
| Setting | Procedure | Controls/Screens |
|---|---|---|
| Times of start and end of comfort mode schedule | <ol style="list-style-type: none"> 1. Press the OK button (2) to access the end user menu. 2. Rotate the knob (1) to scroll through the menu until "Time Program heating circuit 1" (5) is highlighted. 3. Press the OK button (2) to validate the selection 4. Rotate the knob (1) to select "Mo-Sun 1st phase On" 5. Press the OK button (2) to validate the selection. 6. Rotate the knob to modify the time. Press OK (2) to save the selected time. 7. Press the Heating Mode Selection button (4) to go back to the home screen. |  |
| Date and time | <ol style="list-style-type: none"> 1. Press the OK button (2) to access the end-user menu. 2. Rotate the knob (1) to scroll through the menu until "Time and Date" (6) is highlighted. 3. Press the OK button (2) to validate the selection 4. Rotate the knob (1) to select "Hours / minutes" (7). 5. Press the OK button (2) to validate the selection. 6. Rotate the knob (1) to set the <u>hours</u> and press the OK button to validate. 7. Repeat the operation to set the <u>minutes</u>. 8. Press the OK button (2) to save the setting. 9. Press the Heating Mode Selection button (4) to go back to the home screen. 10. Repeat steps 1 to 3 and select "Day / month". 11. Then repeat steps 5 to 8 to set the values and save the setting. 12. Repeat the procedure to set the "Year". 13. Press the Heating Mode Selection button (4) to go back to the home screen. |   |

INSTRUCTIONS FOR THE USER
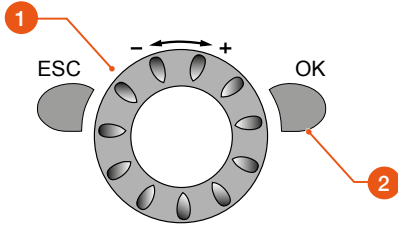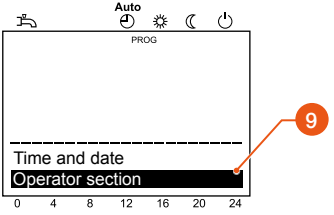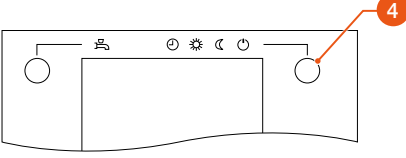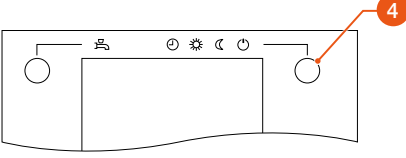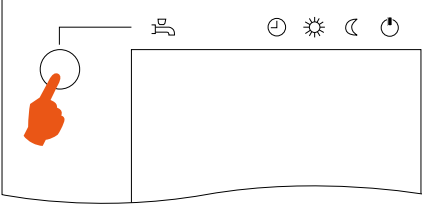
| Setting | Procedure | Controls/Screens |
|----------------------------------|--|---|
| Language Selection | <ol style="list-style-type: none"> Press the OK button (2) to access the end-user menu. Rotate the knob (1) to scroll through the menu until "Operator Section" (9) is highlighted. Press the OK button (2) to validate the selection Rotate the knob (1) to select the required language (EN, PL, CS, SK, SL, HU, EL, TR, TU, ES, IT, SR). Press the OK button (2) to save the selection Press the Heating Mode Selection button (4) to go back to the home screen. |    |
| Unit Selection | <ol style="list-style-type: none"> Repeat steps 1 to 3 of above procedure. Rotate the knob (1) to select the required unit (°C - bar or °F - PSI). Press the OK button (2) to validate the selection Press the Heating Mode Selection button (4) to go back to the home screen |  |
| DHW mode activation/deactivation | <ol style="list-style-type: none"> Press the DHW On/Off button to activate/deactivate the DHW function. |  |



This function is active only if an external indirect DHW tank is installed in the circuit.

Structure of Menus for the End User



Some parameters are only visible if the heating circuit is installed

| Top menu | Submenu 1 | Submenu 2 | Default |
|--|---|--|--|
| Time of day and date | ► Hours / Minutes | | 01:00 (hh:min) (Adjust as required) |
| | ► Day / Month | | 01.01 (dd.mm) (Adjust as required) |
| | ► Year | | 2019 |
| | ► Start of summertime Day / month | | 25.03 (dd.mm) (Adjust as required) |
| | ► End of summertime Day / month | | 25.10 (dd.mm) (Adjust as required) |
| Operator section | ► Language | <ul style="list-style-type: none"> English, polski, Češsky, Slovensky, Slovenščina, Magyar, Ελληνικά, Türkçe, русский, Serbian, Italiano, Español | English |
| | ► Units | <ul style="list-style-type: none"> °C, bar °F, PSI | °C, bar |
| Time Program heating circuit 1 | ► Preselection | <ul style="list-style-type: none"> Mo-Su, Mo-Fr, Sa-Su, Mo, Tu, We, Th, Fr, Sa, Su | Mo-Su |
| | ► (day or range selection) 1st phase on | | 6:00 (Adjust as required) |
| | ► (day or range selection) 1st phase off | | 22:00 (Adjust as required) |
| <div> <i>Identical menus for 2nd and 3rd phase adjustment</i> </div> | | | |
| Time Program 5 | ► Default values | <ul style="list-style-type: none"> No Yes | No |
| | ► Preselection | <ul style="list-style-type: none"> Mo-Su, Mo-Fr, Sa-Su, Mo, Tu, We, Th, Fr, Sa, Su | Mo-Su |
| | ► (day or range selection) 1st phase on | | 6:00 (Adjust as required) |
| | ► (day or range selection) 1st phase off | | 22:00 (Adjust as required) |
| <div> <i>Identical menus for 2nd and 3rd phase adjustment</i> </div> | | | |
| Holidays heating circuit 1 | ► Default values | <ul style="list-style-type: none"> No Yes | No |
| | ► Preselection | <ul style="list-style-type: none"> Period 1 ... Period 8 | Period 1 |
| | ► Period (Number): Start Day / month | | --:-- (dd:mm) |
| | ► Period (Number): End Day / month | | --:-- (dd:mm) |
| | ► Operating level | <ul style="list-style-type: none"> Frost protection Reduced | Frost protection |

INSTRUCTIONS FOR THE USER

| Top menu | Submenu 1 | Submenu 2 | Default |
|-----------------------------|--|---|------------------|
| Heating circuit 1 | ▶ Room comfort setpoint | | 20°C |
| | ▶ Room reduced setpoint | | 16°C |
| | ▶ Room frost protection setpoint | | 10°C |
| | ▶ Heating curve slope | | 1.5 |
| | ▶ Summer/winter heating limit | | 18°C |
| | ▶ Flow temp setpoint room stat | | 65°C |
| | ▶ Floor curing setp current / Floor curing day current | | |
| Boiler | ▶ Setpoint manual control | | 60°C |
| Fault | ▶ SW Diagnostic code | | |
| | ▶ Burn ctrl phase lockout pos | | |
| Service/special operation | ▶ Chimney sweep function | • Off • On | Off |
| | ▶ Burner output | • Partial load • Full load • Max heating load | Max heating load |
| | ▶ Manual control | • Off • On | Off |
| | | | |
| Diagnostics heat generation | ▶ Hours run heating mode | | |
| | ▶ Hours run DHW | | |
| | ▶ Total gas energy heating | | |
| | ▶ Total gas energy DHW | | |
| | ▶ Total gas energy | | |
| | ▶ Gas energy heating Reset? | • Yes • No | |
| | ▶ Gas energy DHW Reset? | • Yes • No | |
| | ▶ Gas energy | | |
| | ▶ 24-hour yield solar energy | | |
| | ▶ Total yield solar energy | | |
| | ▶ Hours run solar yield | | |
| | ▶ Hours run collector pump | | |
| | | | |
| | | | |
| Diagnostics consumers | ▶ Outside temp | | |
| | ▶ Outside temp min Reset? | | |
| | ▶ Outside temp max Reset? | | |

Safety Instructions for the Installation



- All connections (electrical, flue pipe, hydraulic, gas) must be carried out in accordance with current standards and regulations in force.
- If the appliance is installed against a wall made of heat-sensitive material, such as wood, a suitable insulation must be provided by the installer between the appliance and the wall surface.
- Comply with the clearance dimensions provided in this manual, to prevent any hot part of the appliance from being too close to the walls or any combustible material.
- Make sure to maintain a safe distance of 200 mm from flammable materials; the boiler room may not be used as a storage location for material.
- Do not store any flammable, corrosive or explosive products next to the appliance.
- Do not install the appliance in a location where chemical vapours or dust are present in the ambient or combustion air.
- If the appliance is used on professional premises such as hairdresser's, cleaning company, painter's, etc. where chloride products, solvents, paints, dust, etc. are likely to contaminate the air, make sure to install the appliance in a dedicated boiler room so that the appliance is supplied with clean combustion air.
- Install a condensate neutralisation system according to the applicable local regulations and standards.
- If the boiler is intended to be used with G31 liquefied petroleum gas (propane), installing the boiler below ground level can be hazardous and prohibited in some countries. Please refer to applicable local regulations for installation requirements.



- When the appliance is connected to the electrical network, it must be earthed.
- Make sure that a fuse or circuit breaker of the recommended rating (C16A or according to applicable local regulations) is installed outside the appliance, so as to be able to shut the power down.
- Do not touch the appliance with any wet body parts when it is supplied with electrical power.
- Be aware that maximum total current consumed by outputs QX1, QX2, QX3 is 2,6A.
- Before performing any operation on the electrical circuit, isolate the electrical supply of the appliance through the external power-cutting device (fuse, circuit breaker, etc.)



- The appliance must be installed in a dry and protected area, with an ambient temperature comprised between 0 and 45°C.
- Make sure to protect the appliance and the heating system against freezing.
- The appliance must be installed to ensure easy access at all times.
- Use an appropriate means of handling, suitable to the appliance size and weight.
- Floor-standing appliances must be installed on a level base and wall-hung appliances, on a vertically plumb support. Material used for base and support must have sufficient strength to support the appliance weight, water included.
- Make sure that the appliance is installed with a sufficient height to allow the condensates to flow to the sewer, and/or allow the installation of a condensate neutralisation system (as required).
- When lifting, moving or installing the appliance, be careful not to drop it. Once in position, make sure that the appliance is secured.
- Install all pipes and ducts without stress to prevent any leaks from occurring.

Handling the Product



- This appliance is heavy and requires sufficient work-force to move and handle it, as well as an appropriate means of transport.
- It is prohibited to handle the boiler using protruding components or rest the boiler on protruding components.
- Failure to comply with these recommendations can result in damage to the boiler or injuries to the personnel.

Using an appropriate means of transport (e.g. hand truck, fork lift, etc.), move the appliance, on the pallet and protected by its packaging, as close as possible to the installation location.

Unpacking the Product

The boiler is delivered on a wooden pallet and is secured to the pallet with four screws. The boiler is protected by a foam protection and plastic wrapping.

Once the appliance is in the boiler room or close to the installation location:

1. Carefully remove the plastic packaging and foam protections.
2. Discard packaging according to applicable local regulations.
3. Remove bottom front panel. Refer to **“Removing and Installing the Access Panels”** on page I-29.
4. Using an hex head size 5 wrench, remove four screws (See Fig. 8) from the bottom of the boiler and the pallet.

Installing and Preparing the Boiler


1. Slide the arms of the fork lift underneath the boiler, from the front of the appliance (See Fig. 8).



- Make sure that the front bottom panel is removed for transport.
- Make sure to insert the fork lift arms from the front of the boiler.

- Do not insert the fork lift arms from the back, as it may damage the flue connection.
- Alternatively, the boiler can also be lifted from the top for transport, by removing the top panel and hoisting the boiler using a forklift with spreader bar and straps attached to the hoisting rings located at the top of the heat exchanger.

2. Move the appliance carefully to its final position. Make sure to comply with the recommended clearances (See **“Dimensions and Clearances”** on page G-12).
3. If some height is required for condensate flow to the sewer system or if a condensate neutralisation system needs to be installed, place the appliance on a base with sufficient height (recommended slope to the drain: 3%).

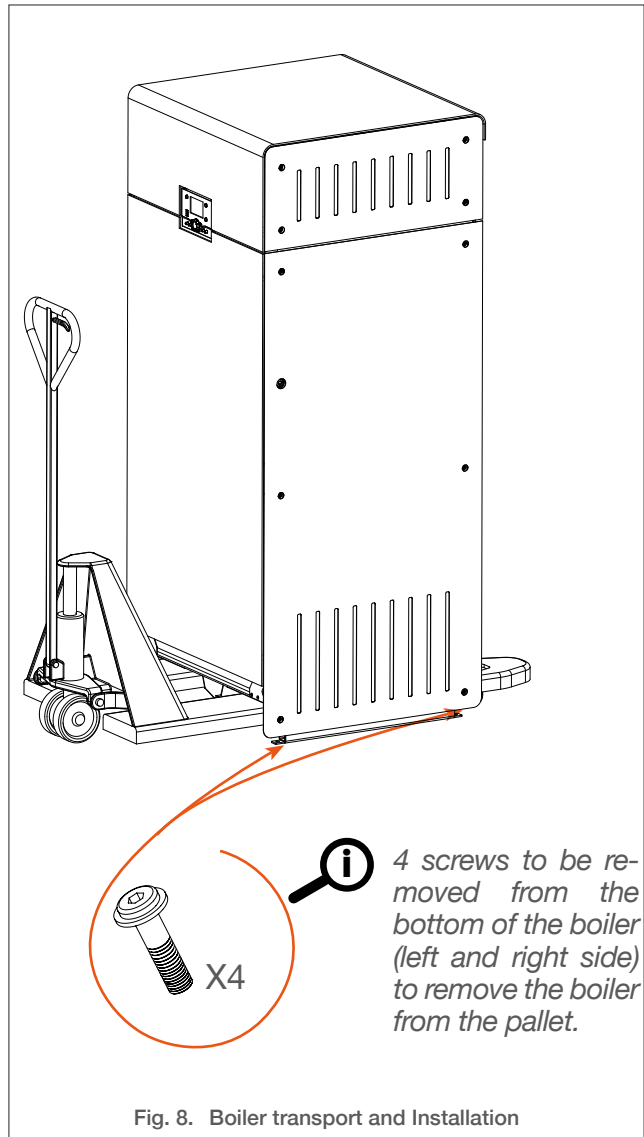

Follow-on task(s):

1. Install the bottom front panel. Refer to **“Removing and Installing the Access Panels”** on page I-29.
2. Perform gas conversion, as required. Refer to **“Gas Conversion”** on page I-42.

Removing and Installing the Access Panels

Conditions:



Tools and Material:

- Wrench, hex head, size 4

Removal Procedure:

Bottom Front Panel

1. Pull on the panel to disengage the center stud from its receptacle.

Center Front Panel

1. Release the top screw (2) from the right side bottom panel.
2. Pull on the panel to disengage the studs from their receptacles.

Top panel

1. Release the top screw (1) from the right side top panel.
2. Push the top panel upwards to disengage the studs from their receptacles.

Side Panels

1. Top: remove four screws. Retain hardware for reinstallation.
2. Bottom: remove six screws. Retain hardware for reinstallation.

Installation procedure

Bottom Front Panel

1. Push the panel in position to engage the center stud into its receptacle.

Center Front Panel

1. Push the panel in position to engage the studs into their receptacles.

Top panel

1. Push the top panel downwards to engage the studs into their receptacles.

Side Panels

1. Bottom: install six retained screws.
2. Top : Install four retained screws.

Follow-on task(s):

If only the top and center front panels were removed, but not the side panels, tighten one top screw (2) on the right side bottom panel, and one top screw on the right side top panel (1).

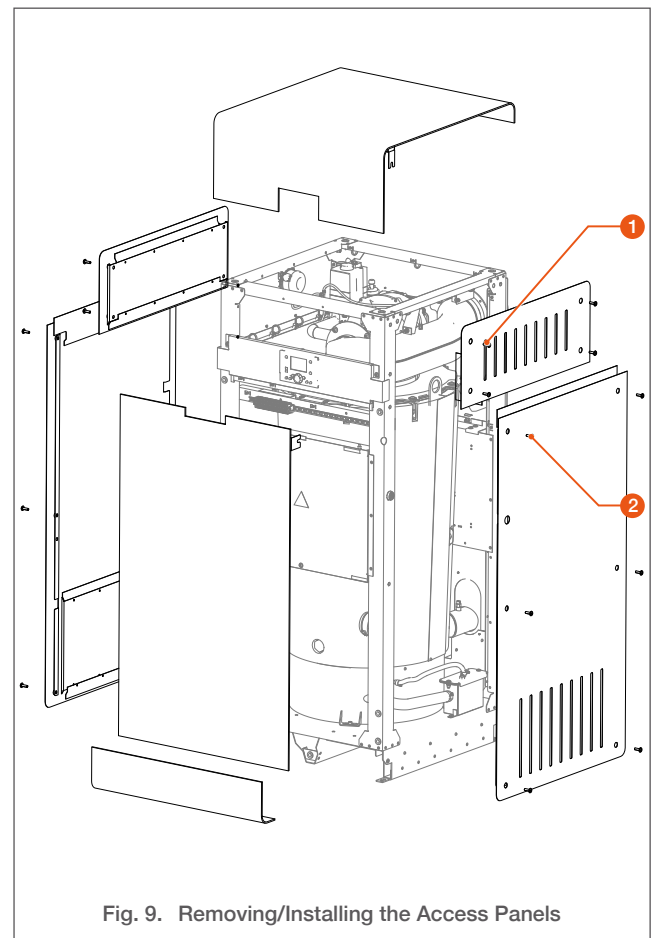


Fig. 9. Removing/Installing the Access Panels

Requirements for the Hydraulic Connections



Make sure that the circuit is provided with a safety pressure relief valve and an expansion vessel that is appropriate for the appliance power and the system size, and the increase in temperature and pressure.



- The safety group must be installed no more than 1m from the appliance on the pipe with a diameter no less than that of the valve. No isolating valve may be installed between the appliance and the safety valve. The safety valve drainage must be connected into a pipe with a diameter no less than that of the valve itself.
- The pressure of the water network used to fill the appliance must be at least 0,8 bar.
- If the supply pressure from the network is higher than 6 bar, make sure to install a pressure reducing valve set at 4,5 bar.
- Verify the water quality of the network according to the requirements defined in this manual.
- In case inhibitors are used in the system, consult the manufacturer for product suitability.
- Any antifreeze used in the primary circuit must comply with Public Hygiene Regulations and must be non-toxic. A food-grade Propylene Glycol is recommended. It must be diluted according to the ratio recommended in the local regulations, but with a maximum ratio of 30%.



- Consult the appliance manufacturer to determine the compatibility of the antifreeze product with the appliance materials.
- It is recommended to install the following devices in the system to prevent water contamination :
 - Water filter and/or dirt separator installed on the return circuit. Have the water circulate for 2 hours after installation and prior to appliance start up in order to clean the circuit of contaminants. Clean the filter after filling the system.
 - Plate heat exchanger, combined with a micro-pollutant separator, which will protect the appliance from any contaminants present in an old heating system, where fittings and pipes can be corroded. This is also mandatory for open systems where oxygen can penetrate the system and cause corrosion.



- *The use of antifreeze in the primary circuit will lead to a reduction in the heating performance. The higher the concentration of antifreeze in the circuit, the lower the performance. Maximum output must be adjusted accordingly.*
- *The circuit diagrams are theoretical representations that do not necessarily include all the required safety devices. Make sure to correctly plan your system according to the applicable local regulations and standard practices.*

Water Quality Requirements to Prevent Scaling and Corrosion in a Heating System

To prevent the formation of scale and sludge in a closed heating circuit through the penetration of oxygen and carbonates, follow the recommendations below:

- Before filling the system, clean it according to standard EN14336. Chemical cleaning agents can be used.
- If the circuit is in bad condition, or the cleaning operation was not efficient, or there is a large volume of water in the system (e.g. cascade), it is recommended to separate the appliance from the heating circuit using a plate-to-plate heat exchanger or an equivalent accessory. In that case, it is recommended to install a hydrocyclone or magnetic filter on the system side.
- Limit the fill operations. To control the quantity of water added into the system, install a water meter on the filling line of the primary circuit. No more than 5% of the total content of the system is allowed annually.
- Automatic filling systems are not recommended unless the fill frequency is checked and the levels of scale and corrosion inhibitor are maintained at an appropriate level.
- If the system needs to be refilled frequently, check for leaks in the primary circuit.
- Inhibitors may be used according to standard EN 14868.
- An air separator (on the appliance supply circuit) combined with a dirt separator (upstream of the appliance) must be installed according to the manufacturer's instructions.

- Additives can be used to keep the oxygen in solution in the water.
- Use the additives in accordance with the instructions of the manufacturer of the water treatment product.

Water Hardness

- In general, the requirements for heating water specified in VDI 2035, parts 1 and 2 "Prevention of damage in water heating installations" apply to all boiler sizes.
- Heating water should be treated:
 - during the system life, the sum of the total fill and additional amounts of water does not exceed three times the nominal volume of the heating installation, or
 - if the indicated values in the table below are not met, or
 - if the heating water pH is below 8,2 or above 10,0.
- In the VDI 2035 guidelines, the water requirements depend on the total boiler output and water capacity.
- According to the boiler output, the recommended values of general hardness for filling and top-up water should be used, as per **Table 1** below:

Table 1 from VDI part 1

| Total hardness [°d] depending of nominal capacity in litres, ie: (installation capacity / output of a single boiler) [l/kW] (1) | | | |
|---|--|------------------------|-----------|
| Total heating output in kW | Specific system volume | | |
| | ≤20 l/kW | ≥ 20 l/kW to < 50 l/kW | > 50 l/kW |
| ≤ 50 | ≤ 17,6 for boilers with low water capacity <0,3l/kW, no requirement for boilers with high water capacity ≥ 0,3 l/kW | ≤ 11,2 | <0,11 |
| > 50 to ≤ 200 | ≤ 11,20 | ≤ 8,40 | < 0,11 |
| > 200 to ≤ 600 | ≤ 8,20 | < 0,11 | < 0,11 |
| > 600 | < 0,11 | < 0,11 | < 0,11 |

(1) for cascade systems, the smallest boiler output should be used.

If the system volume is exceeded 3 times, the water must be treated in exactly the same way as for the limits given in table.

Water Parameters

- In addition to the water hardness, other parameters of the water must be checked. Treat the water if the measured values are outside the range of **Table 2**.
- If the pH of the fill water is clearly lower than 8,2, it is recommended to check the pH value of the heating water after eight to twelve weeks. If the pH value of the heating water during control is clearly lower, increase it by taking the value from **Table 2** below:

Table 2 from VDI part 2

| | | Low-saline | Saline |
|----------------------------------|-------|----------------------------------|------------|
| Electrical conductivity at 25 °C | µS/cm | < 100 | 100 – 1500 |
| Appearance | | free of sedimentating substances | |
| pH value at 25 °C | | 8,2 – 10,0 | |
| Oxygen | mg/l | < 0,1 | < 0,02 |

Using Table 1, based on the type of boiler, water hardness and water capacity in the heating system, you can already get preliminary information about the need for water treatment.

Graph description:

- **Above the curves, water treatment is required**
- **Below the curves, fill with untreated tap water**

Example:

Boiler 120kW

Installation capacity 1800l

$$\Rightarrow 1800l / 120 \text{ kW} = 15 \text{ l/kW}$$

From Table 1, for the example boiler output of 120 kW, we have a range of 50-200 kW, and for a specific system volume of 15 l/kW there is a range of up to 20 l/kW, for these values we read water hardness up to 11,2°d.



Warranty claims are only valid if the requirements described in this manual and the maintenance log sheet are met. Check the water hardness, electrical conductivity and pH regularly and enter the values in the maintenance log (provided at the end of the manual).

Typical Hydraulic Connections - Heating Circuit


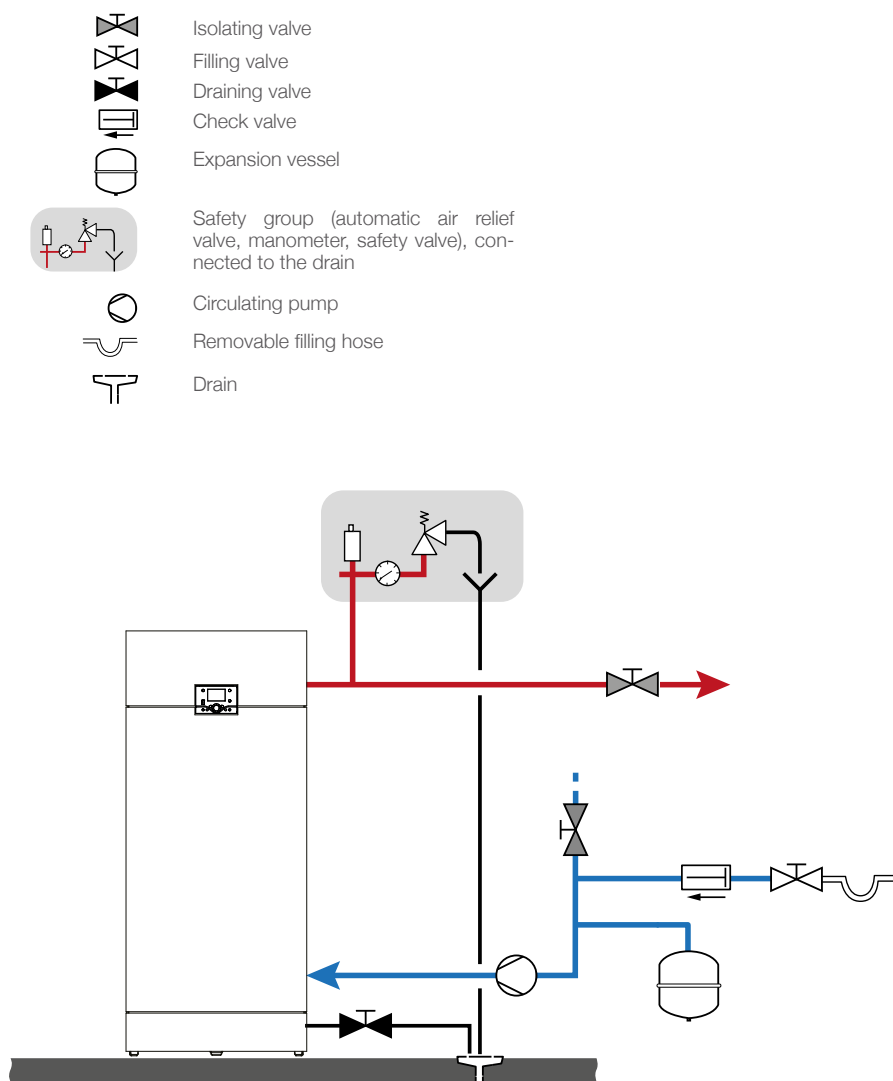


Fig. 10. Typical Heating System




To make maintenance easier, we recommend to remove the plug from the drain connection and install an optional draining valve (see Fig. 3).

Hydraulic Connections - Cascaded boilers, with External Domestic Hot Water Tank and Plate Heat Exchanger

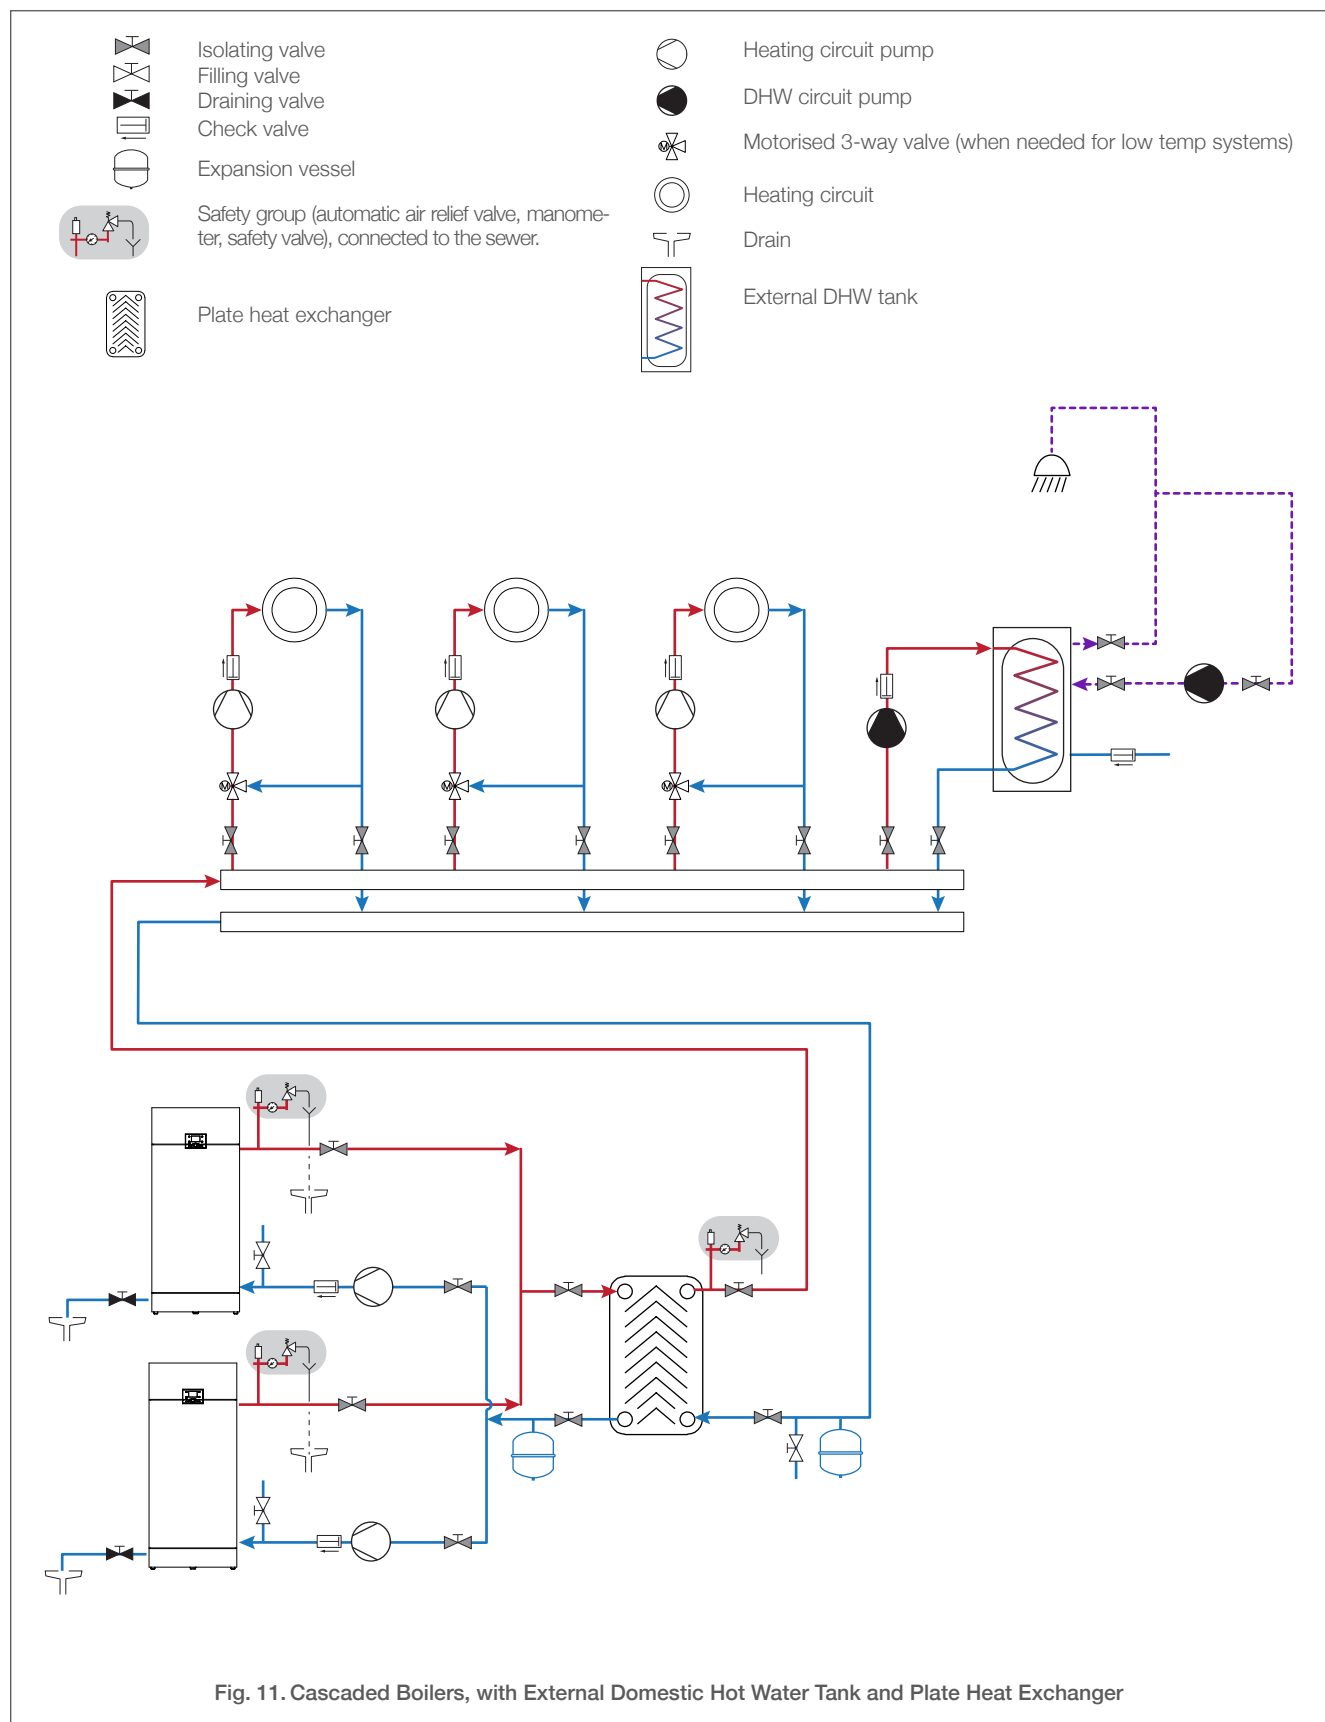

Hydraulic Connections - Cascaded boilers, with External Domestic Hot Water Tank and Low Loss Header

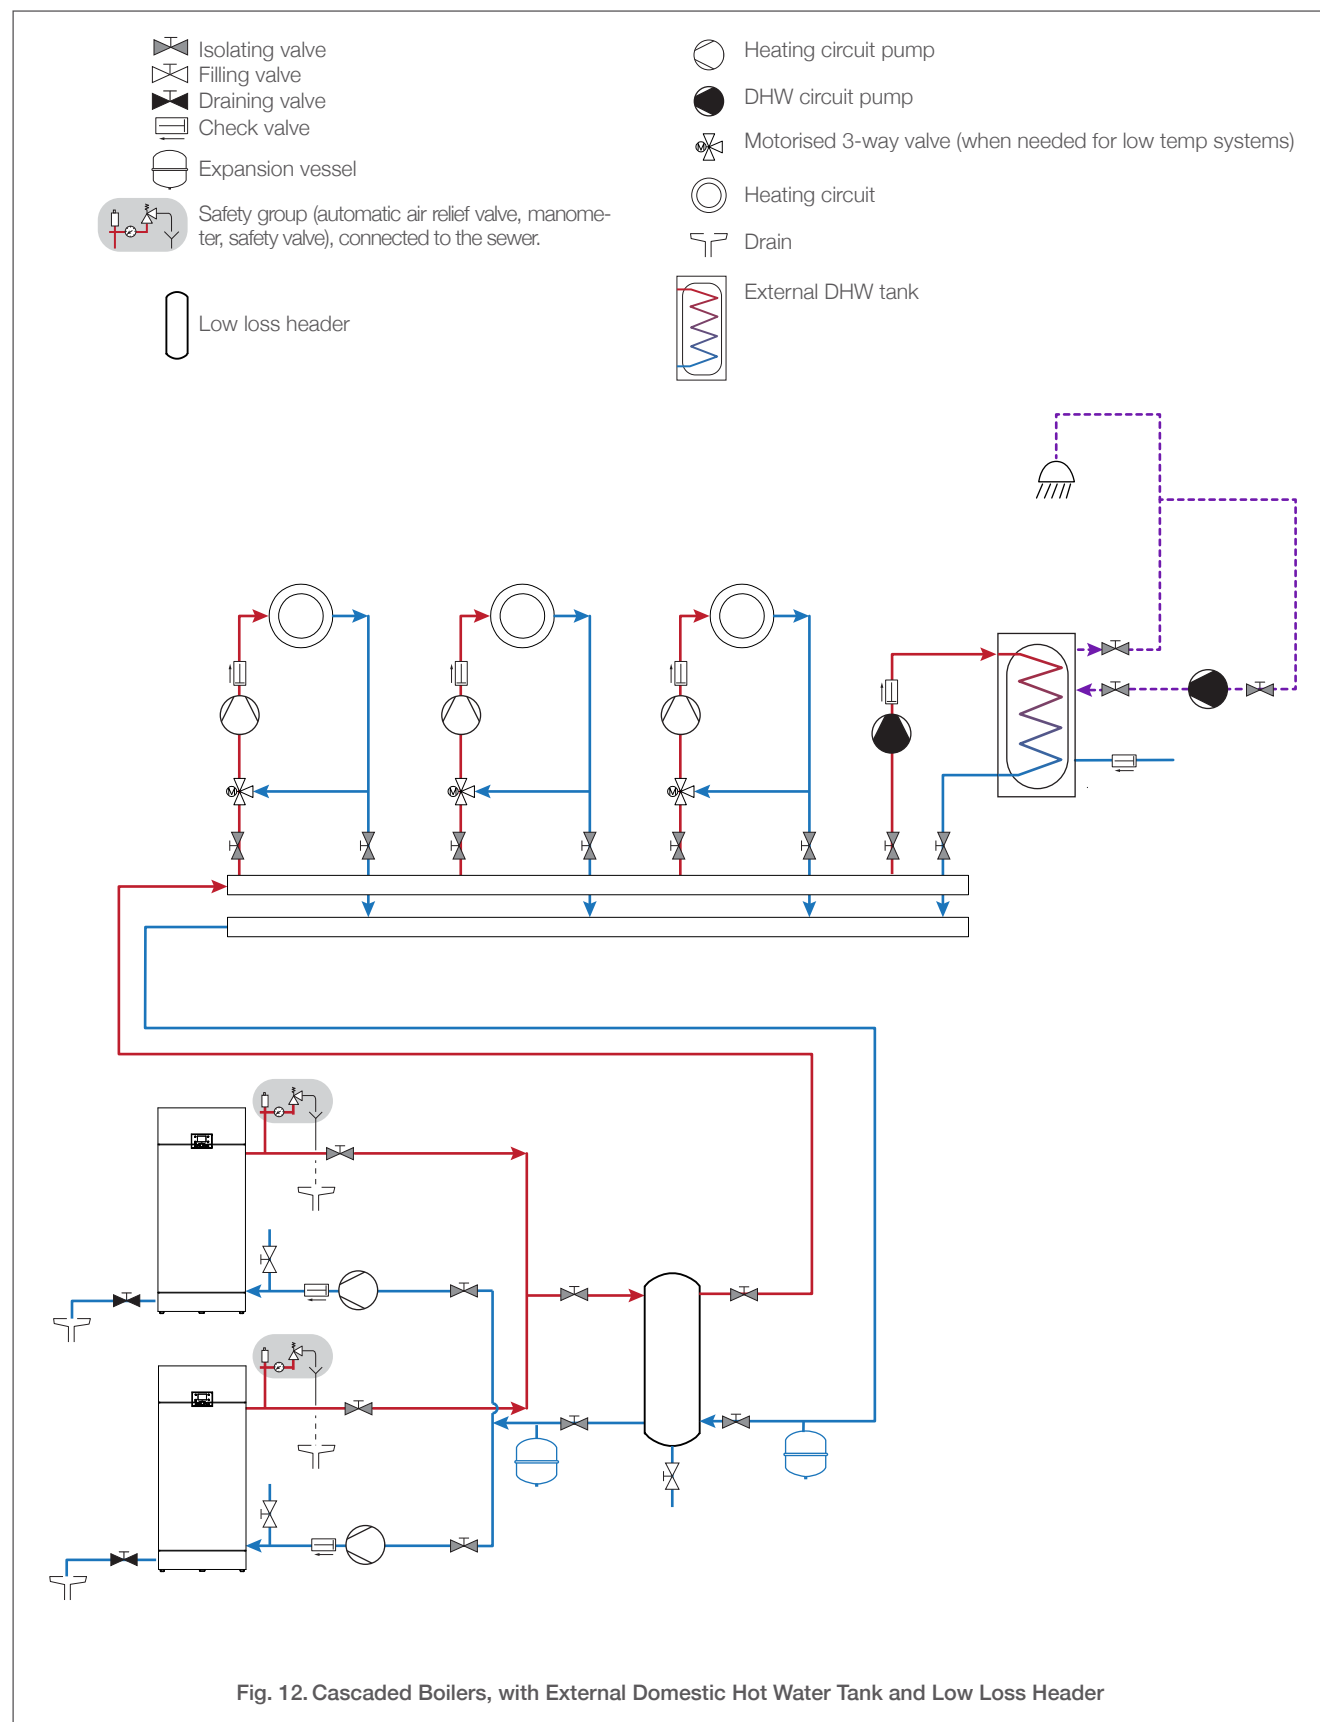

Safety Instructions for the Chimney Connections



- Verify installed combustion air and flue gas piping are tight and meet all provided instructions and applicable codes and standards.
- Failure to properly support the flue system can cause failure, resulting in flue gases contaminating the ambient air.
- The appliance must be equipped with flue system components from the same manufacturer and be approved by the appliance manufacturer. Ensure that the pipe and connection diameters all match to prevent any leaks from occurring.
- Any gas-fired appliance generates carbon monoxide. Failure to install carbon monoxide detectors with alarm in the boiler room can result in serious injury, or death. Refer to applicable local regulations.
- A condensate neutralisation system needs to be installed according to the applicable local regulations and standards. It must be cleaned and serviced regularly.



- Do not install the appliance into a common flue pipe with appliances operating with a different type of gas or with oil. This will cause flue gas spillage or appliance malfunction. Please contact your AIC Technical Support for more information.
- A condensation outlet connected to the sewer must be fitted close to the appliance.



- Make sure to secure the flue piping to a solid structure.
- Exclusively use the provided brackets to support the flue system.
- When assembling the pipes, make sure not to put any stress on the components.
- Install the horizontal flue pipes with a slight slope of 5 cm per meter (3°) back towards the appliance.
- It is mandatory to ventilate the boiler room. The high or low air vent opening dimensions depend on the appliance power and the boiler room size. Refer to the local regulations in force.
- If the combustion air inlet is located in an area likely to cause or contain contamination, or if products which could contaminate the air cannot be removed, the combustion air must be repiped and terminated at another location.
- If the appliance is used on professional premises such as hairdresser's, cleaning company, painter's, etc. where chloride products, solvents, paints, dust etc. are likely to contaminate the air, make sure to install the appliance in a dedicated boiler room so that the appliance is supplied with clean combustion air.
- In the case of parallel flue systems, make sure to maintain sufficient distance (at least 40 mm) between the appliance flue piping and combustible materials, and between the flue pipe and air inlet pipe if the latter is made of plastic material.



- Flue pipe elements or PP air inlet elements should not be screwed together.

- Piping elements should not be bonded together using glue (e.g. silicone) or foam (e.g. PUR).



- Make sure to insulate the flue piping in damp rooms to avoid condensation water from forming and dripping.
- Cut the pipes squarely and deburr the edges. This will ensure correct sealing and prevent seals from being damaged.
- To ease the assembly of pipes, use exclusively a mixture of water and soap (1%) on the extremity of the pipe to be fit in.
- Metal flue pipes should always be fitted into the sleeve to the end stop.



- Plastic flue pipes should be allowed to expand under the effect of heat. Leave about 10 mm between the pipe and the sleeve end stop.
- The flue system should be fitted with an inspection opening.
- Do not exceed the maximum length recommended for the product when connecting the flue pipes, or the system power might decrease.
- For B- and C-type appliances, the flue gas exhaust system must at least comply with the category T120 H1 W 1 from standard EN 14471 in the case of plastic piping. Metallic piping must comply with the requirements of standard EN 1856.
- The maximum length of duct must be calculated according to the permissible difference in pressure indicated in the technical specifications.

Installing the pipes - General principles

| Component | Characteristics | Recommendation |
|------------------|---|---|
| Elbow | | Clamped at the sleeve |
| | | Clamped at the sleeve |
| | <ul style="list-style-type: none"> ‣ < 25 cm ‣ located before or after first elbow | Clamped with a bracket after elbow |
| Straight element | Horizontal > 1m (with 3° slope) | <ul style="list-style-type: none"> ‣ Clamped in pipe center for support ‣ Allow free movement of pipe |
| | Vertical > 2m | <ul style="list-style-type: none"> ‣ Clamped every 2 meters, ‣ Even distribution of clamps ‣ Allow free movement of pipe |

Chimney Connection

C (Closed) Description

C₄₃ Appliance connected via its two ducts to a common duct system (part of the building) designed for more than one appliance. The common duct system consists of two ducts connected to a terminal, which at the same time admits fresh air to the burner and discharges the products of combustion to the outside through orifices that are either concentric or close enough to come under similar wind conditions.

Additional requirements:

- Connection to a chimney with natural draught only.
- Condensate flow is not allowed into the appliance.

C₅₃ Appliance with separate ducts for the supply of combustion air and the discharge of flue gas. The air inlet and flue exhaust are located in different pressure areas, but not on opposite walls of the building.

C₆₃ Appliance whose combustion system is connected to a system that is approved and sold separately (external supplier), .


The air inlet/flue outlet orifices may terminate in zones of different pressure

- Maximum allowable draught is 200 Pa.
- Maximum allowable pressure difference between combustion air inlet and flue gas outlet (including wind pressures) is indicated in the technical specifications.
- Maximum allowed combustion air temperature is 40°C.
- Condensate flow is allowed into the appliance.
- Maximum allowable recirculation rate of 10% under wind conditions
- Orifices may NOT terminate on opposite walls of the building
- The flue gas exhaust pipes must at least comply with the category T120 H1 W1/2 O30 LI E U when using parallel piping and T120 H1 W1/2 O00 LI/LE E U0 when using concentric piping (EN 14471).

C₈₃ Appliance connected through one of its ducts to a single or common duct system (part of the building). The combustion air is taken from the outside, and the flue discharge duct is routed through the chimney to the roof.

Additional requirement:


- Condensate flow is not allowed into the appliance.

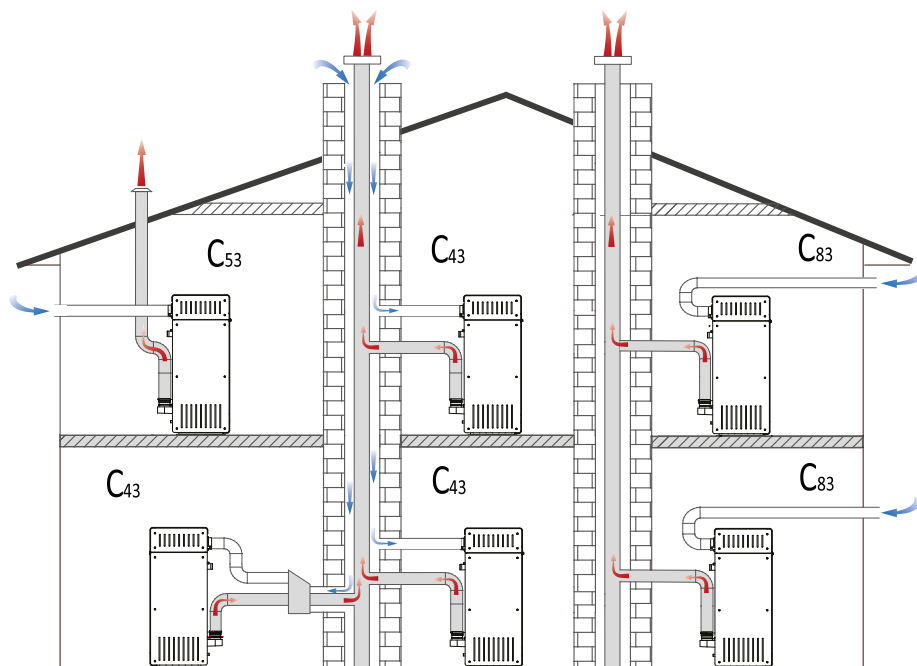

| B (Open) | Description |
|------------------|---|
| B ₂₃ | Combustion air is taken directly from the boiler room, flue gas is discharged outside of the room where the appliance is installed (roof terminal). |
| B _{23P} | Same as B ₂₃ , but using a positive pressure. |



Make sure that the ventilation openings remain unobstructed at all times.

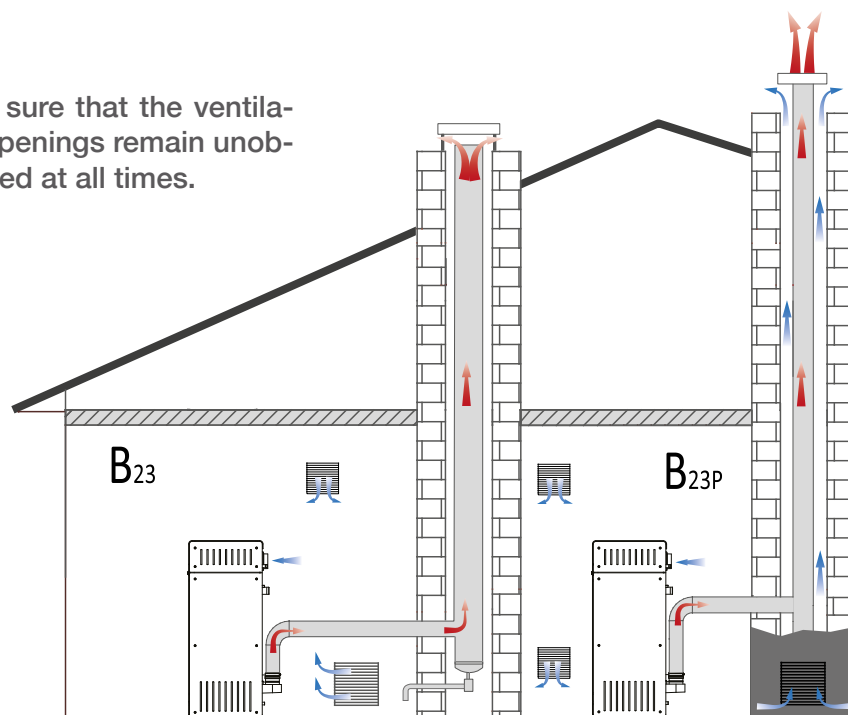

Air Intake Grid Installation in Open Chimney Systems (B)

Conditions: OFF

Tools and material:

Cordless screwdriver, size 3.5



Procedure:

1. Remove air intake grid from its storage location, in the flue connection.



➤ Before installation, check on air intake grid sticker that it is the correct component for the boiler model. If not, contact your AIC representative.

2. Install air intake grid into air inlet connection.
3. Secure with 2 screws.

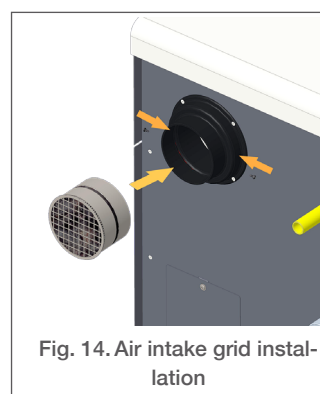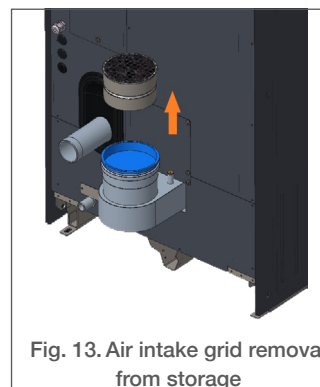

Engineering the Chimney System



The chimney system must be engineered by a qualified professional, according to local standards and regulations. The overall installation resistance of each boiler should not exceed 200 Pa (including maximum wind condition) measured at the outlet of each boiler at maximum output.

Please contact your AIC representative for more information



› *The flue system length must be calculated so as to ensure a safe performance of the system.*

- › *Make sure to install the boiler with the shortest length of combustion air and flue ducts.*
- › *When several boilers need to be connected to a common duct, please contact your AIC representative for more information.*

Accessories



- › *When connecting several boilers to the same duct (i.e. types C43, C83 or cascades), make sure to install an AIC-approved flue gas damper on each boiler in the system.*
- › *If required by local regulations, install a condensate neutralisation system. In that case, it may be necessary to install the floor-standing boiler on a base to get sufficient downward flow. If flow is not sufficient, install a condensate pump.*

Safety Instructions for the Gas Connection



- When connecting the gas circuit, make sure to comply with all applicable local regulations and standards. The circuit will be equipped with a meter and a gas pressure regulator if required.
- Do not exceed the maximum gas pressure.
- The conversion of the appliance from natural gas to G31 liquefied petroleum gas (propane) or the reverse can only be performed by a qualified professional.
- Gas conversion shall be performed according to applicable local regulations. It is prohibited in some countries (e.g. Belgium). Perform conversion according to the gas category specified for your country on the appliance data plate.
- Bleed the gas duct and check thoroughly if all the internal and external gas pipes and connections are tight.
- After gas circuit connection, check that there is no leak.
- Use a gas detection device or perform a bubble test to check for gas leaks. Never use an open flame, as it could result in an explosion.



- Make sure that the gas type and pressure of the distribution network are compatible with the appliance, as per the information on the appliance data plate.
- The OFFSET (A) setting of the gas valve is factory-preset and sealed. In some countries, it is prohibited to change its setting. Please refer to applicable local regulations.
- The CO₂, gas flow rate, air flow rate and air/gas supply parameters are factory-preset and may not be modified in certain countries. Please refer to applicable local regulations.




Control the gas pressure and consumption at appliance start up, and perform the adjustment procedure provided in the commissioning section of this manual.

| Gas pressure* | Min - Max (mbar) |
|----------------------|------------------|
| G20/G20Y20 (20 mbar) | 17 - 25 |
| G25 (25 mbar) | 20 - 30 |
| G25.1 (25 mbar) | 18 - 33 |
| G25.3 (25 mbar) | 20 - 30 |
| G31 (30 mbar) | 25 - 35 |
| G31 (37 mbar) | 25 - 45 |
| G31 (50 mbar) | 42.5 - 57.5 |

* i.a.w. EN 437

Nesta 300 Gas valve

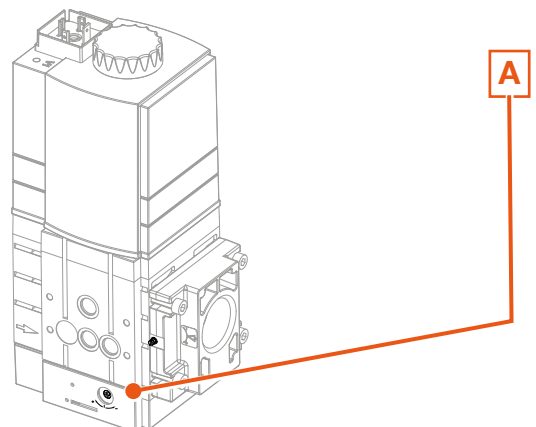

Gas Conversion



- Conversion of the appliance from one gas type to another can only be performed by a qualified professional.
- Gas conversion shall be performed according to applicable local regulations. It is prohibited in some countries. Perform conversion according to the gas category specified for your country on the appliance data plate.
- If the boiler is intended to be used with G31 liquefied petroleum gas (propane), installing the boiler below ground level can be hazardous and prohibited in some countries. Please refer to applicable local regulations for installation requirements.
- If the boiler is already installed before conversion, the boiler must be turned off, the power supply must be disconnected through the external fuse or circuit breaker, and the gas supply to the gas valve must be closed.



- Connection of the boiler to a different gas system should comply with local regulations and requirements.

- If the boiler was running before conversion, allow it to cool down before performing any task.
- Make sure that the gas type and pressure of the distribution network are compatible with the appliance, as per the information on the appliance data plate.



- *The conversion procedure explains how to enable an appliance adjusted in factory for G20 natural gas to operate with G25 natural gas or G31 propane gas or G20Y20 mixture.*
- *Gas conversion to this appliance requires following adjustments:*
 - *of gas valve (through shutter and offset screws)*
 - *of boiler settings (fan speeds at ignition, and at max. and min. outputs).*
- *Conversion can therefore be carried out either on a boiler about to be installed, or on an already installed and running boiler, provided that the installation location allows it.*

Table 1. Fan Speeds

| Gas Type | Fan Speeds | N 300 FS | | |
|------------------|------------|----------|------|------|
| | | Ign. | Min. | Max. |
| G20 | rpm | 2200 | 1200 | 6450 |
| G25 | rpm | 2200 | 1200 | 6450 |
| G31 (30/37 mbar) | rpm | 2500 | 1650 | 6100 |
| G31 (50 mbar) | rpm | 2500 | 1650 | 6100 |
| G20Y20 | rpm | 2200 | 1200 | 6450 |

Preparing the Boiler for Gas Conversion

Conditions: OFF     

Tools and material:

- Wrench, hex head, size 2,5
- Screwdriver, flat head

Procedure:

1. Remove the left side panel. See **Fig. 15** below and refer to **“Removing and Installing the Access Panels”** on page I-29.
2. Disconnect the gas pipe, as required.
3. Connect the new gas supply to the gas pipe.



‣ The boilers are adjusted in factory to operate with natural gas (G20).

‣ When Nesta 300 needs to operate with different gas type, the gas valve shutter (1) position must be adjusted.

- Conversion to different gas types requires the adjustment of fan speeds and combustion values. Refer to **“Adjustment of Fan Speeds”** on page I-44.

4. Conversion to Propane only : rotate the gas valve shutter (1) as follows :
 - shutter: 3 full rotations clockwise

Follow-on Task(s):

1. Perform fan speed adjustments, refer to **“Adjustment of Fan Speeds”** on page I-44.

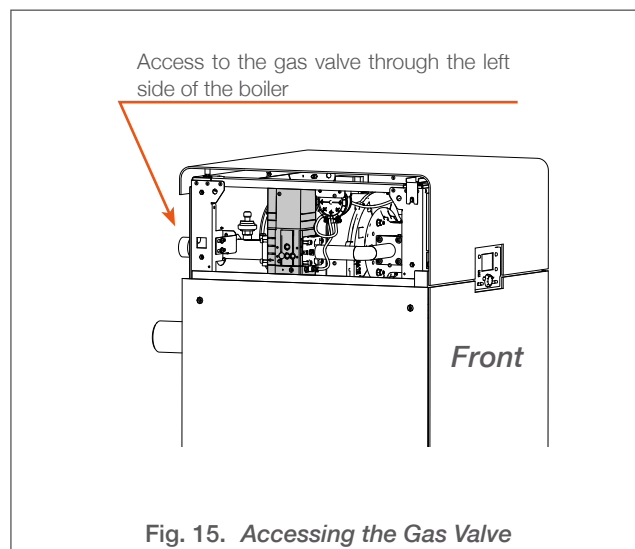


Fig. 15. Accessing the Gas Valve

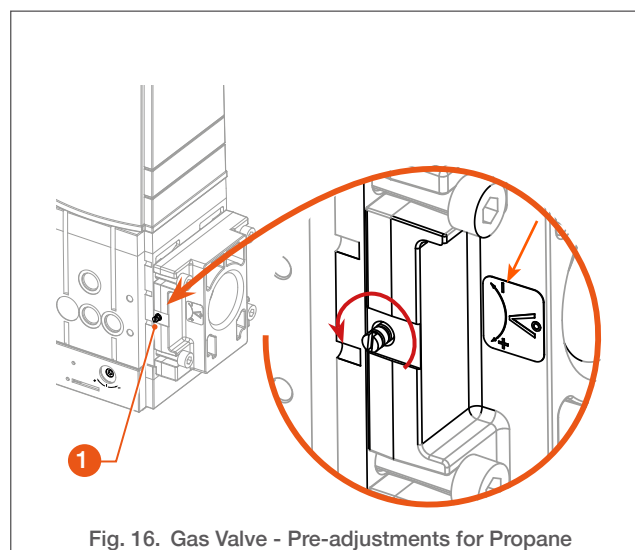


Fig. 16. Gas Valve - Pre-adjustments for Propane



- Please be aware that conversion to a different gas type may require replacement for a different mixer model. Please contact your AIC representative for more information.

| Boiler model | Mixer model | Insert | Gas type | Nozzle size |
|--------------|-------------|--------|----------|--------------|
| N 300 FS | HM 500 | Ø 65 | G20 | 10,6/14,5 mm |
| | | | G25 | 13,0/15,0 mm |
| | | | G31 | 10,6/14,5 mm |



- For mixer replacement procedure, see **“Removing and Installing the Air-Gas Mixer”** on page I-60.

Adjustment of Fan Speeds

Conditions:   

Adjustment Procedure (Fig. 17):

1. Press the On/Off switch located on the right side of the boiler.



If starting the boiler for the first time after installation, the controller will open the commissioning screen automatically.

2. Perform the commissioning setting of the boiler (refer to **"Start-up and Combustion Adjustments"** on page I-53).
3. Control the gas pressure and consumption at appliance start up.
4. Press the ESC (3) button.
5. Press the OK (2) button.
6. Press the Info (1) button for more than 3 seconds. The access levels are displayed.
7. Rotating the selection knob (4), go to:
 - **"Engineer"**. Press OK (2) to confirm.



A password is required to access the Engineer level. Please contact your AIC representative for more information.

- **"Burner Control"**. Press OK (2) to confirm.
 - **"Required speed ignition"** (Program number 9512).
8. Press OK (2) to modify the value. The value starts flashing (5).



To adapt the fan speed in the following steps, select the correct value, according to the Table 1 on page I-42.

9. Rotating the knob (4), adjust the ignition fan speed for the gas type, boiler type and chimney type. Refer to **Table 1 on page I-42**.
10. Press OK (2) to confirm and save the value.
11. Rotating the knob (4), go to **"Required speed LF"** (Program number 9524).
12. Press OK (2) to modify the value. The value starts flashing (5).
13. Rotating the knob (4), adjust the minimum fan speed for the gas type, boiler type and chimney type. Refer to **Table 1 on page I-42**.
14. Press OK (2) to confirm and save the value.
15. Rotating the knob (4), go to **"Required speed HF"** (Program number 9529).
16. Press OK (2) to modify the value. The value starts flashing (5).
17. Rotating the knob (4), adjust the nominal fan speed for the gas type, boiler type and chimney type. Refer to **Table 1 on page I-42**.
18. Press OK (2) to confirm and save the value.
19. Press ESC (3) to exit the settings.

Follow-on Task(s):

- Perform the combustion adjustment. See **"Combustion Adjustment for Gas Conversion"** on page I-45.

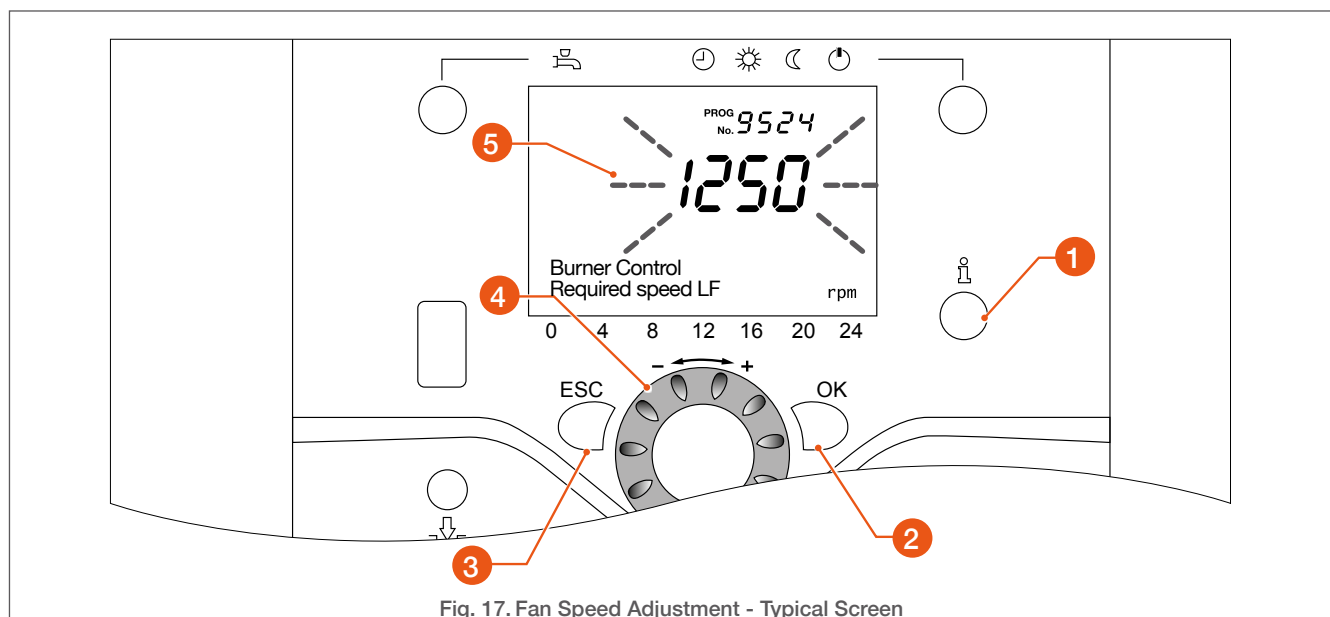


Fig. 17. Fan Speed Adjustment - Typical Screen

Combustion Adjustment for Gas Conversion

Conditions:



Tools and material:

- Flue gas analyser
- Screwdriver, flat head
- Wrench, hex head, size 2,5

Adjustment Procedure (Fig. 18 & Fig. 19):

1. Press the heating mode selection button (1) for more than 3 seconds.
2. After successful ignition, connect the flue gas analyser probe to the measuring port of the flue gas pipe.
3. Check CO₂ contents in the flue gas at max. output as follows:
 - Press the Information button (2). The modulation indicator (5) is displayed (in %).
 - Press OK (3), the indicator (5) starts flashing.
 - Rotate the knob (4) to increase to 100% for maximum power. Press the OK button (3) to confirm.
 - On the gas analyser, check the CO₂ contents, and compare the value with those in the table below.
 - If the value is outside the range, adjust the combustion value by turning the gas valve shutter (6) in small steps, to allow the value to stabilise before performing additional adjustments.
 - Rotate shutter screw (6) **counterclockwise to increase** the CO₂ contents.
 - Rotate shutter screw (7) **clockwise to decrease** the CO₂ contents.
4. Check CO₂ contents at min. output as follows:
 - Repeat steps 1 and 2, if necessary.
5. Restart the boiler to check the ignition behaviour. Control the correct operation of the boiler by repeating steps 1 to 4 to check the CO₂ contents.
6. Reseal the offset (7) using some paint or tape.

i The offset screw is factory-sealed. After adjustment, make sure to reseal it.

Follow-on Task(s):

1. Record the combustion values in the log sheet at the end of this manual.
2. On the data plate (back of the boiler), place the white sticker to indicate that a gas conversion has been carried out.
3. Check the absence of leaks
4. Reinstall the access panels. Refer to **"Removing and Installing the Access Panels"** on page I-29 for the correct procedure.


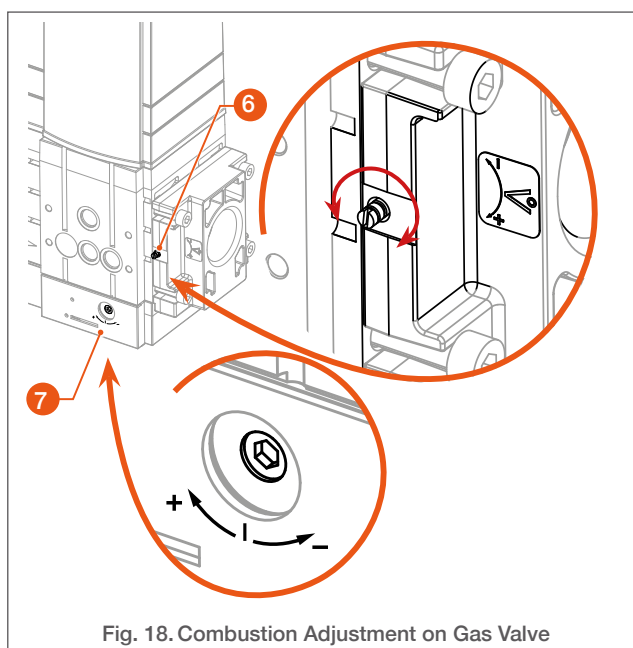


Fig. 18. Combustion Adjustment on Gas Valve



| Combustion and Gas Values | | | N 300 FS | |
|---------------------------|----------------------|------|-------------|-------|
| | | | min. | max. |
| CO ₂ contents | G20 (+/-0.3) | % | 8,0 | 8,7 |
| | G25 (+/-0.3) | % | 8,1 | 9,3 |
| | G31 (+/-0.3) | % | 10,5 | 10,5 |
| | G20Y20 (+/-0.3) | % | 6,3 | 7,6 |
| O ₂ contents | G20 (+/-0.3) | % | 6,7 | 5,5 |
| | G25 (+/-0.3) | % | 6,2 | 4,0 |
| | G31 (+/-0.3) | % | 5,0 | 5,0 |
| | G20Y20 (+/-0.3) | % | 8,9 | 6,5 |
| Gas pressure | G20/G20Y20 (20 mbar) | mbar | 17 - 25 | |
| | G25 (25 mbar) | mbar | 20 - 30 | |
| | G25.1 (25 mbar) | mbar | 18 - 33 | |
| | G25.3 (25 mbar) | mbar | 20 - 30 | |
| | G31 (30 mbar) | mbar | 25 - 35 | |
| | G31 (37 mbar) | mbar | 25 - 45 | |
| | G31 (50 mbar) | mbar | 42,5 - 57,5 | |
| Gas flow rate | G20 | m3/h | 3,29 | 29,02 |
| | G25 | m3/h | 3,75 | 33,08 |
| | G31 | m3/h | 2,25 | 11,51 |
| | G20Y20 | m3/h | 3,82 | 33,95 |

Safety Instructions for the Electrical Connections

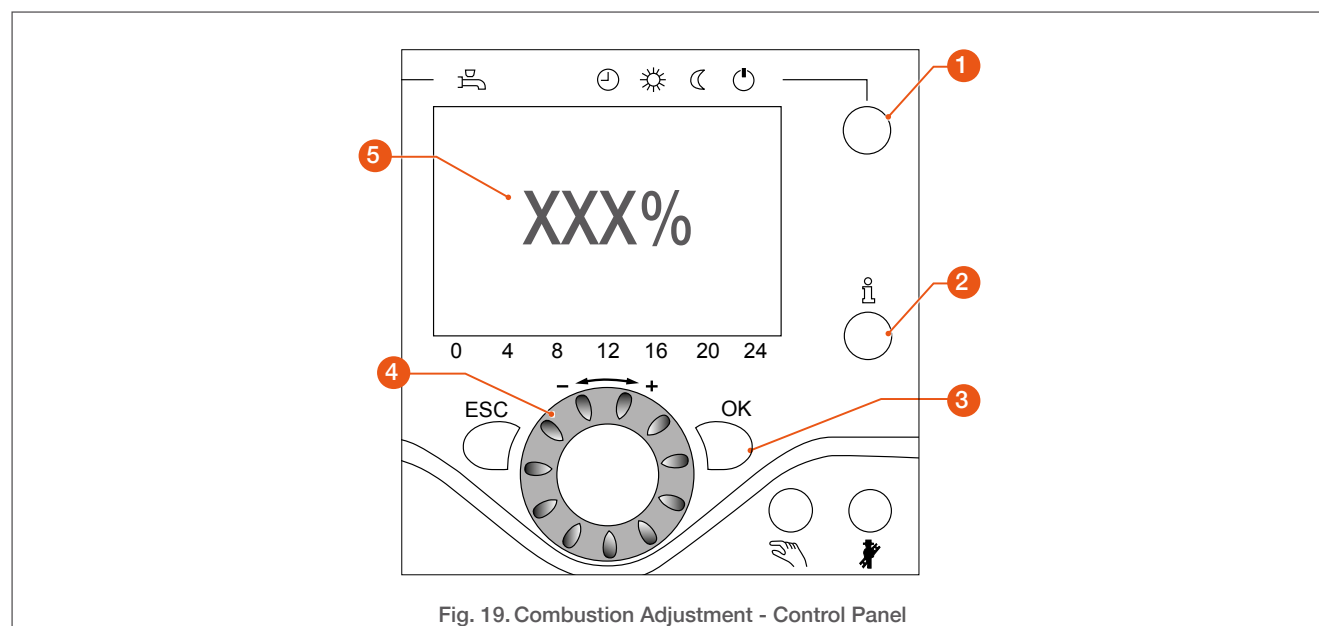

Electrical connections must be carried out by a qualified professional in accordance with current standards and regulations in force.



- When the appliance is connected to the electrical network, it must be earthed.
- Make sure that a fuse or circuit breaker of the recommended rating (C16A or according to applicable local regulations) is installed outside the appliance, to allow electrical isolation.
- Do not touch the appliance with any wet body parts when it is supplied with electrical power.
- Be aware that maximum total current consumed by outputs QX1, QX2, QX3 is 2,6A.
- Before performing any operation on the electrical circuit, isolate the electrical supply of the appliance through the external power-cutting device (fuse, circuit-breaker, etc.)
- When routing the cables through sharp-edged holes in the panels, make sure to install glands or grommets, and to secure the cables in order to prevent any damage.



- Make sure to make the connections to the correct terminals, as indicated on the wiring diagram. If high voltage cables are installed on a low-voltage terminal, the electronic board will be damaged.
- When connecting wires to the terminals, check that the connection is secure and that all the wire strands are tightly held.

Connections



Any damaged power supply cable must be replaced using cables as described below and installed by a qualified professional.



The cross-section of the wires should be = 2,5 mm², equipped with sleeves at L, N and ground (⏏) ends.

High voltage wiring is connected to a terminal strip located at the back of the boiler. See below.

The main board and electrical connections, as well as the low-voltage terminal strip, are located at the front of the boiler. See **“Accessing the Low Voltage Terminal Strip and Electronic board”** on page I-48.



Route the electrical cables through the holes at the back of the appliance.

Accessing the Low Voltage Terminal Strip and Electronic board

Conditions:




Tools and material:

- Wrench, hex head, size 4

Procedure:

1. Remove center front panel, see ***“Removing and Installing the Access Panels”*** on page I-29.
2. Remove one screw (1) at the bottom of the electronic bay access panel. Retain for reinstallation.
3. Lift and remove access panel (2).

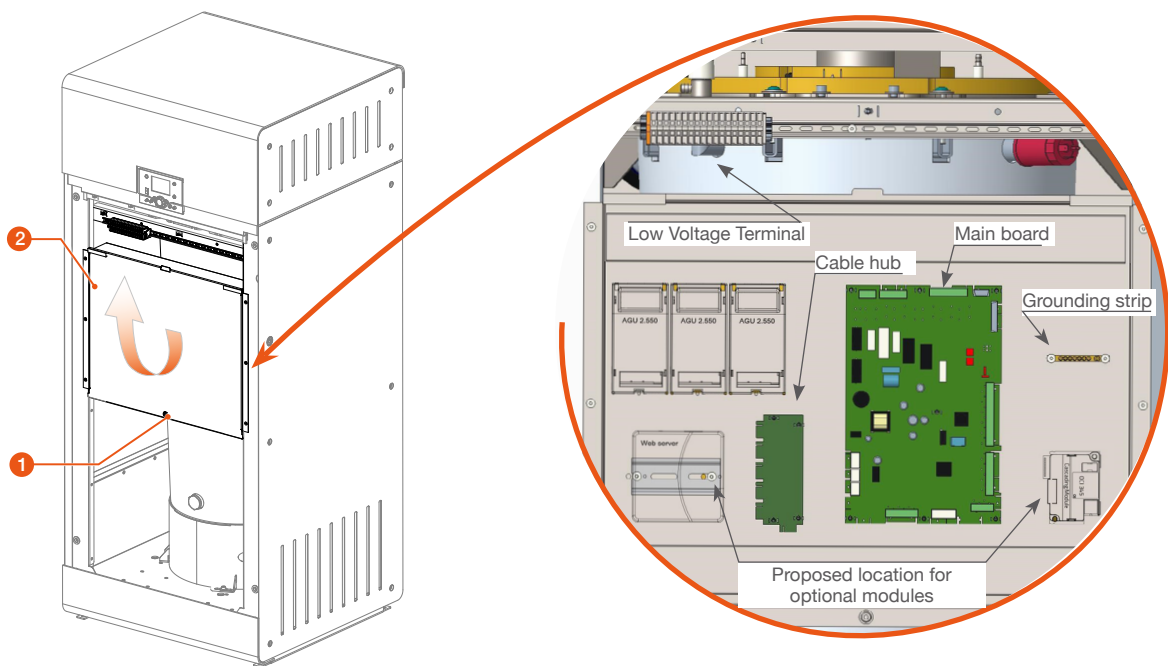

See ***“Optional Modules”*** on page I-66 for more information.

Fig. 20. Accessing the Low Voltage Terminals and Electronic Board

Accessing the High Voltage Terminal Strip



Make sure that the power supply to the appliance is deactivated (power supply cable disconnected from the boiler) before accessing the high voltage terminal strip.

Conditions:




Tools and material:


- Wrench, hex head, size 4

Procedure:

- Remove two screws (1) from the panel. Retain the panel and hardware for reinstallation.

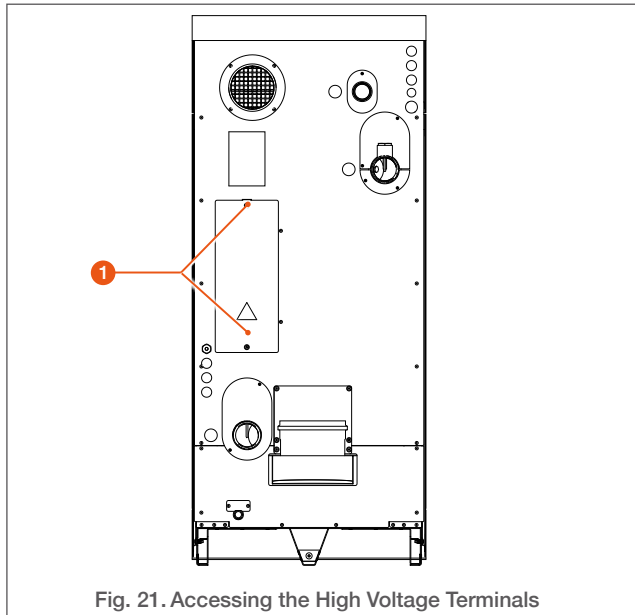


Routing the Cables

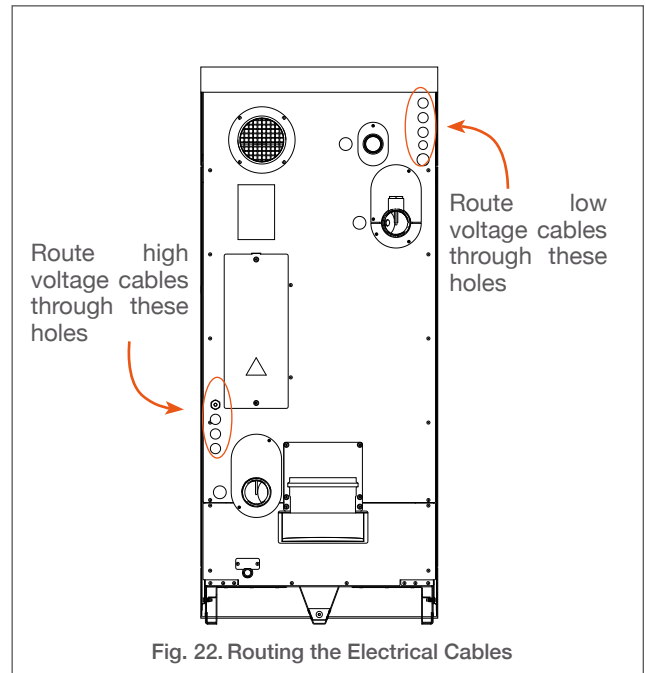

When routing the cables through the back panel holes, make sure to install grip cable gland or similar fittings to protect and secure the cables.

Wiring Diagram



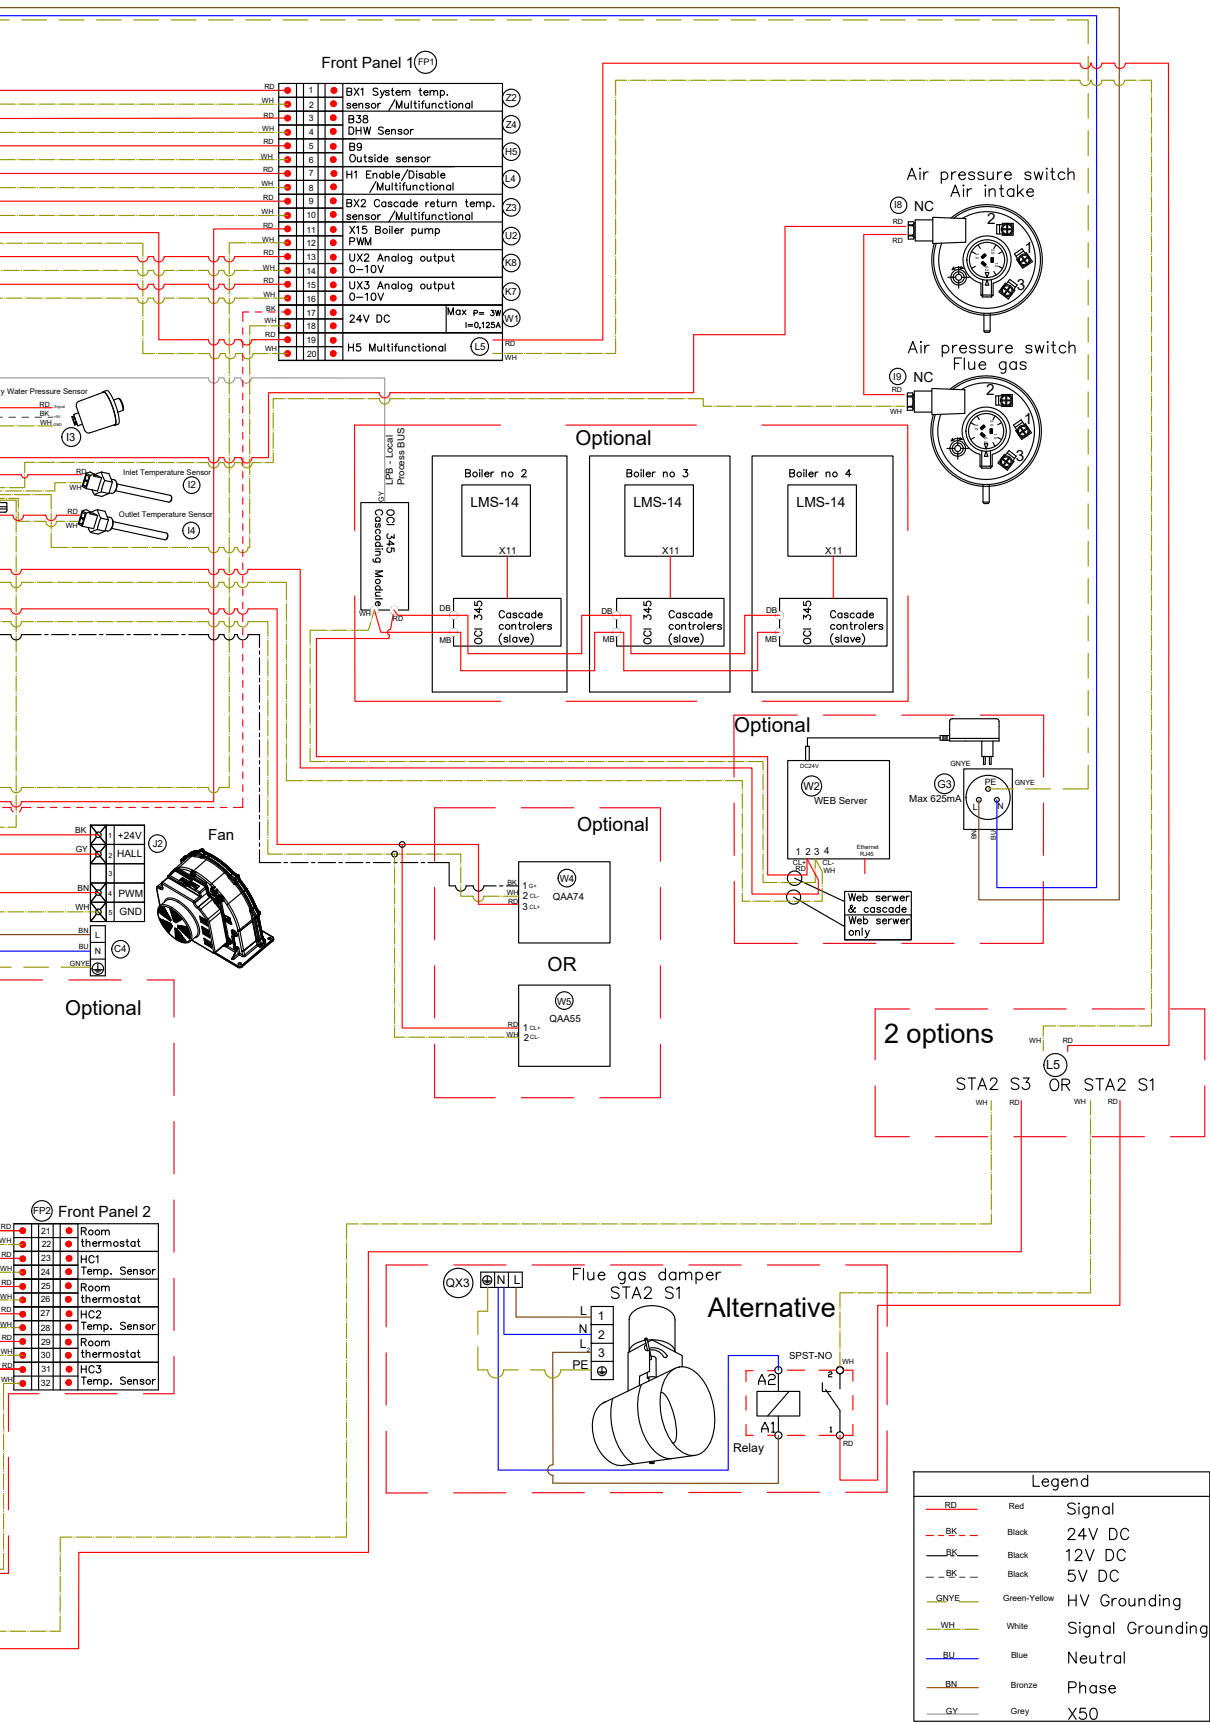

Safety Instructions Before Start-up



- Check that all connections (electrical, flue pipe, hydraulic, gas) have been carried out and that they are tight and secure.
- Ensure that the condensate trap is full of water before starting up the appliance.



- Before starting the appliance, check that the heating circuit is full of water and the appliance is supplied with gas and electrical power.
- Check that the gas pressure is within the allowed range.
- Check that the water pressure is sufficient (at least 0,8 bar when cold). Low water pressure is detected by the appliance sensor and will be indicated on the control panel display. Top up the circuit as required.
- In case of repeated indication of low pressure in the water circuit, check for leaks and repair as required.
- Once the filling of the heating circuit is complete, close the filling valve.



Once the initial start-up process is complete, fill in the installation checklist with all the relevant information on the system for future reference. Refer to "Installation Checklist" on page I-82.

Filling the System

Conditions:



Procedure:

1. Connect the filling hose (≡) to the system filling valve (⌵) and to the water network tap.
2. Make sure that the optional draining valve (⌵) installed at the drain connection is closed.
3. Open the isolating valves (⌵).
4. Open the filling valve (⌵) and the water network tap.
5. Bleed the air from the system, using the manual air vent of the boiler, and bring the system pressure at minimum 1.2 bar.



Pressure should be suitable for the size/height of the heating system and take into account the pressure rating of the safety valve.

6. Close the filling valve (⌵).
7. Remove the filling hose (≡) from the filling valve (⌵) as required.

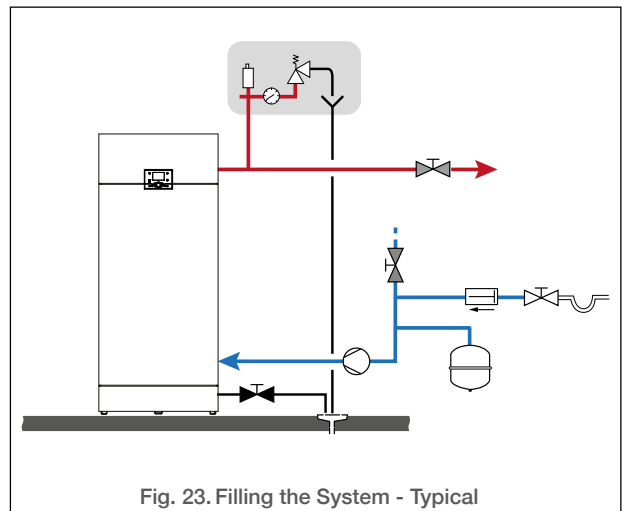


Fig. 23. Filling the System - Typical

Follow-on Task(s): None

Start-up and Combustion Adjustments

Conditions:



Tools and material:

- Flue gas analyser
- Screwdriver, flat head, size 3
- Wrench, hex head, size 2.5


Procedure:

1. Push in the On/Off switch located on the right side of the boiler. It remains pushed in and is illuminated when on.




When starting the boiler for the first time after installation, the controller will open the commissioning screen automatically. This screen only appears once, provided that the parameters are set and saved. To bypass it, press the ESC button.

2. Perform the commissioning setting of the boiler as follows:
 - Define the language by turning the knob (4), validate the selection by pressing OK (3).
 - Define Time and Date using the knob (4), validate the selection by pressing OK (3).
 - Press the heating mode selection button (1) to exit and go back to the home screen.
3. Activate the required heating mode by pressing the heating mode selection button (1).
4. Allow the boiler to operate for a few minutes.
5. Connect the gas analyser probe to the measuring port of the flue gas pipe.
6. Press the heating mode selection button (1) for more than 3 seconds.

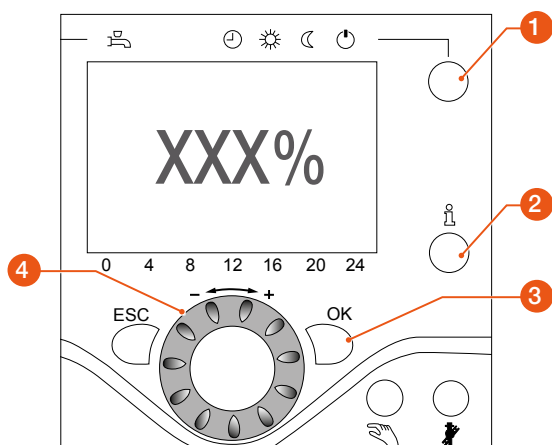

7. Check CO₂ contents in the flue gas at max output as follows:
 - Press the Information button (2). The modulation indicator is displayed (in %).
 - Rotate the knob (4) to increase to 100% for maximum power.
 - Check the CO₂ contents, and compare the values with those in the technical specifications (See **“Combustion Data” on page G-15**).
 - If the value is outside the range, adjust the combustion value by turning the main gas shutter (5) in small steps, to allow the value to stabilise before performing additional adjustments.

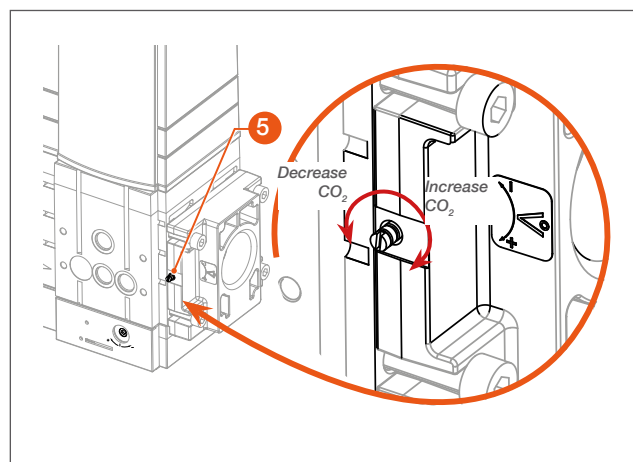

Follow-on task(s):

Write the values in the log sheet. Refer to **“Combustion Parameters - Log Sheet” on page I-85**.

Safety Instructions for Maintenance



- › Inspection and maintenance tasks must be carried out by a qualified and certified professional, at least once a year.
- › Water flowing out of the drain valve can be extremely hot. Use extreme caution when draining a hot appliance.
- › Once the inspection and maintenance tasks are complete, ensure that all removed components are reinstalled and all connections are tight and secured.



- › Before performing any maintenance operation, shut down the appliance using the appliance on/off switch and isolate the electrical supply of the appliance through the external power-cutting device (fuse, circuit-breaker, etc.), unless power is required for the procedure (it will then be indicated in the procedure).
- › Do not touch the appliance with any wet body parts when it is supplied with electrical power.
- › Be careful! Even when the appliance on/off switch is set to OFF, the high voltage terminals are still supplied with electrical power.



- › The maintenance of the appliance and its components must be carried out by a qualified professional.
- › Defective parts and components may only be replaced by genuine factory parts or parts approved by the manufacturer.
- › Replace any gaskets or seals present on the removed components before reinstallation, unless otherwise specified in the procedures.
- › To ensure the performance, durability and reliability of the appliance, it is recommended that the end-user perform the periodic checks mentioned in the Safety section for the user, at the beginning of this manual.
- › The minimum pressure of the primary circuit is 0,8 bar when cold, the normal pressure is 0,8 to the maximum pressure, as defined in the hydraulic characteristics in this manual.
- › If the water circuit needs to be topped up, allow the appliance to cool down and only add small quantities of water at a time. Adding a large quantity of cold water in a hot appliance can damage the appliance permanently.



The inspection and maintenance tasks are detailed in a table in this section. Make sure to perform all the recommended tasks and to fill in the log sheets available at the end of the manual with all the required information.

Maintenance Requirements

| Tasks | @ inspection (1 year) | @ maintenance (2 years max) |
|--|--------------------------|--------------------------------|
| Check that the boiler room ventilation / boiler air and flue ducts are unobstructed. | X | X |
| Verify flue gas and combustion air ducts are in good condition, sealed tight and properly supported. | X | X |
| Open the front panel and check the general condition inside the cabinet. Clean and vacuum as required. | X | X |
| Check the correct operation of the pressure switches (air and flue gas), refer to “Checking the Flue Gas (FPS) and Air (APS) Pressure Switches operation” on page I-65 | X | X |
| Clean the condensate pipe and trap. Refer to “Cleaning the Condensate Pipe and Trap” on page I-57. | X | X |
| Clean/service the condensate neutralisation system (if any). Refer to manufacturer’s documentation. | X | X |
| Clean any filter/dirt separator, plate heat exchanger or balance header present in the hydraulic system, as required. Refer to manufacturer’s documentation. | X | X |
| Check for leaks, both inside and outside the appliance: water, gas, flue and condensate. | X | X |
| Check boiler water pressure (at least 1.2 bar when cold). Top up the system with water if required. | X | X |
| Check the operation of the burner (flame) through the sight glass and that the combustion parameters (CO & CO ₂) are according to requirements. See “Combustion Data” on page G-15. | X | X |
| Check the gas pressure and that the gas supply shut-off devices are operating properly. | X | |
| Check that the pump(s) is/are operating properly. | X | |
| Check that the fan is operating properly. | X | |
| Replace the gas filter in the gas valve, refer to “Replacing the Gas Valve Filter” on page I-64. | X | |
| Remove the burner and check its general condition. Clean as required. See “Removing and Installing the Burner” on page I-63. | | X |
| Replace the ignition and ionization electrodes. Refer to “Removing and Installing the Ignition and Ionization Electrodes” on page I-62. | | X |
| Check all control wiring and connections. | X | X |
| Check the condition of the combustion chamber and clean it if required. See “Checking and Cleaning the Combustion Chamber” on page I-64. | | X |
| Check water quality and record in log sheet, See “Water Parameters - Log Sheet” on page I-86 | X | X |
| Check the operation of the flue damper (non-return valve), if any, and perform the required maintenance. Refer to the manufacturer’s documentation. | X | X |
| Record the operations and results in the Log Sheets provided at the end of the manual. | X | X |

Shutting Down for Maintenance

Conditions:

None

Procedure:

Push the On/Off switch located on the right side of the boiler.



When in the OFF position, the switch is released from its pushed in position. Its built-in light goes off and the button comes flush with the outer frame.

Follow-on tasks:




Draining the Boiler

Conditions:



Procedure:

1. Close the isolating valves (⌘).
2. Connect the optional draining valve (⌘) to the sewer with a hose.
3. Open the draining valve (⌘) to empty the heating circuit of the boiler.
4. Provide relief at the manual air vent of the boiler.
5. Close the draining valve (⌘) once the heating circuit of the boiler is empty.

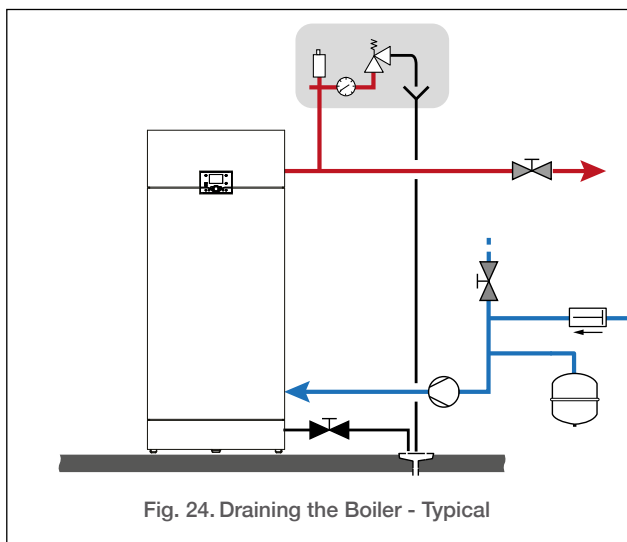

Follow-on tasks: None

Restarting after Maintenance

Conditions:



Procedure:

1. Push in the On/Off switch located on the right side of the boiler.



When in the On position, the switch remains pushed in and is illuminated.

2. Select the desired heating mode, if required.
3. Activate the DHW mode as required.
4. Allow the appliance to operate for a few minutes, then bleed the air from the system.

Follow-on tasks:

1. Check there is no leak in the water and gas circuits.
2. Check the combustion values according to **“Combustion Data” on page G-15.**
3. Record values in **“Combustion Parameters - Log Sheet” on page I-85.**
4. Check the heating circuit pressure (between 1.2 and 6 bar).

Cleaning the Condensate Pipe and Trap

Conditions:



Tools and material:

- Wrench, hex head, size 4
- Torque wrench

Procedure:

1. Disconnect connector from condensate level switch (7).
2. Disconnect the condensate pipe (1) between heat exchanger and condensate trap (6).
3. Clean the pipe. Retain for reinstallation or replace as required.
4. Disconnect the vent hose (2) between the heat exchanger and the condensate trap. Retain for reinstallation.
5. Check that the heat exchanger condensate outlet and the condensate trap inlet are not clogged. Clean as required.
6. Release two screws (3) and open the condensate trap cover (4). Retain cover and hardware for reinstallation.

7. Remove the cover gasket (5). Discard.
8. Wipe clean the condensate level switch (7) attached to the cover. Remove and replace as required.
9. Clean the deposits in the condensate trap (6) using clear water and a cloth.
10. Wipe the ball located above the exit pipe.



Make sure to put the ball back in place in the trap before reinstalling the cover.

11. Install a new gasket (5) on the condensate trap (6).
12. Reinstall the cover with two retained screws (3). Torque the screws at 6 Nm.
13. Reconnect the vent hose between the heat exchanger and the condensate trap (6).
14. Reconnect the condensate pipe to the condensate trap inlet and heat exchanger condensate outlet.
15. Reconnect the connector to the condensate level switch.

Follow-on tasks:

None

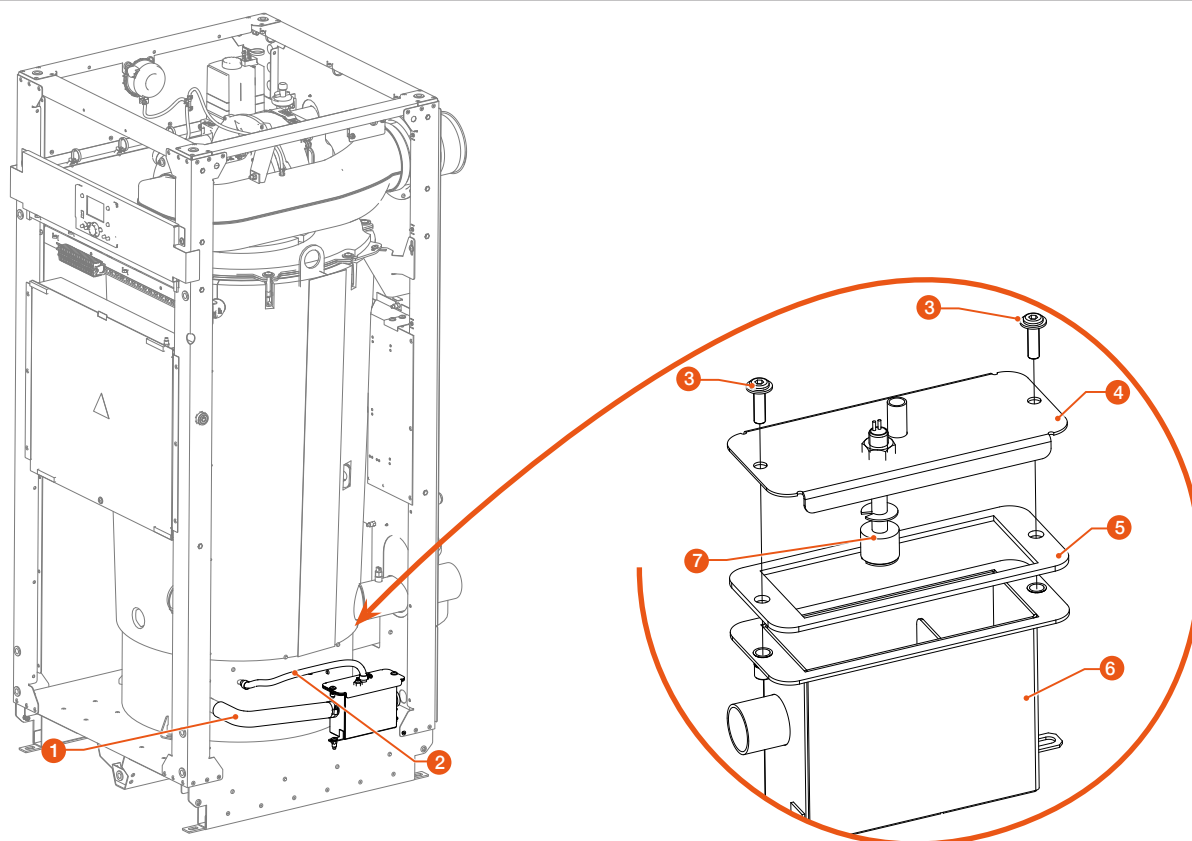




Fig. 25. Cleaning the Condensate Pipe and Trap

Removing and Installing the Fan and Air Adapter Assembly

Conditions:     

Tools and material:

- › Wrench, hex head, sizes 4 and 6
- › Wrench, flat, sizes 8 and 13
- › Torque wrench (min. 6 Nm)
- › Protective gloves
- › Face mask
- › Loctite 577 - thread sealant

Removal Procedure:

1. Disconnect all connectors and ground wires from the electrodes, the burner plate temperature limit switch, the fan and the gas valve.
2. Disconnect the air hose from the gas valve and air inlet port.
3. Wearing protective gloves and a face mask, remove insulation from the upper plate. Retain for reinstallation.
4. Disconnect the air inlet duct (9) from the air adapter (8).
5. Release four screws (4) securing the gas valve (3) to the gas pipe inlet flange. Retain hardware and O-ring, as required, for reinstallation.



When removing the O-ring, check its general condition. Discard and replace the O-ring if it is dirty or cracked.

6. Release four screws (2) securing the gas valve (3) to the gas pipe outlet flange.
7. Remove the gas valve (3) and hardware. Retain hardware and O-ring, as required, for reinstallation.



When removing the O-ring, check its general condition. Discard and replace the O-ring if it is dirty or cracked.

8. Release four nuts (7) securing the fan and air adapter assembly (1) to the burner assembly.
9. Remove the fan and air adapter assembly (1) and its hardware. Retain for reinstallation.
10. Remove the fan gasket (6). Discard.
11. Remove the electrodes, as required, refer to **“Removing and Installing the Ignition and Ionization Electrodes”** on page I-62.

12. Remove the burner, as required, refer to **“Removing and Installing the Burner”** on page I-63.
13. Clean the combustion chamber, as required, refer to **“Checking and Cleaning the Combustion Chamber”** on page I-64.

Installation Procedure



Some hardware require the use of Loctite thread sealant 577 at installation. When this is the case, a “drop” symbol (♠) is added next to the part in the text.

1. Install fan and air adapter assembly with a new gasket (6) on fan plate using four fan plate studs (♠) and retained nuts (7).
2. Tighten the nuts (7) in a crosswise pattern, torquing at 4 Nm.
3. Install O-ring and fasten the gas valve (3) to the gas pipe outlet flange using four retained screws. Torque screws at 6 Nm. (2)
4. Install O-ring and fasten the gas valve (3) to the gas pipe inlet flange using four retained screws (4). Torque screws at 6 Nm.
5. Connect the air inlet duct (9) to the air adapter (8).
6. Wearing protective gloves and a face mask, Install insulation on the upper plate.
7. Reconnect all connectors to the electrodes, burner plate limit switch, gas valve and fan.
8. Reconnect the air hose to the gas valve and air inlet port.

Follow-on task(s):

1. Close all panels, refer to **“Removing and Installing the Access Panels”** on page I-29.
2. Restart the boiler, as required, refer to **“Restarting after Maintenance”** on page I-56.

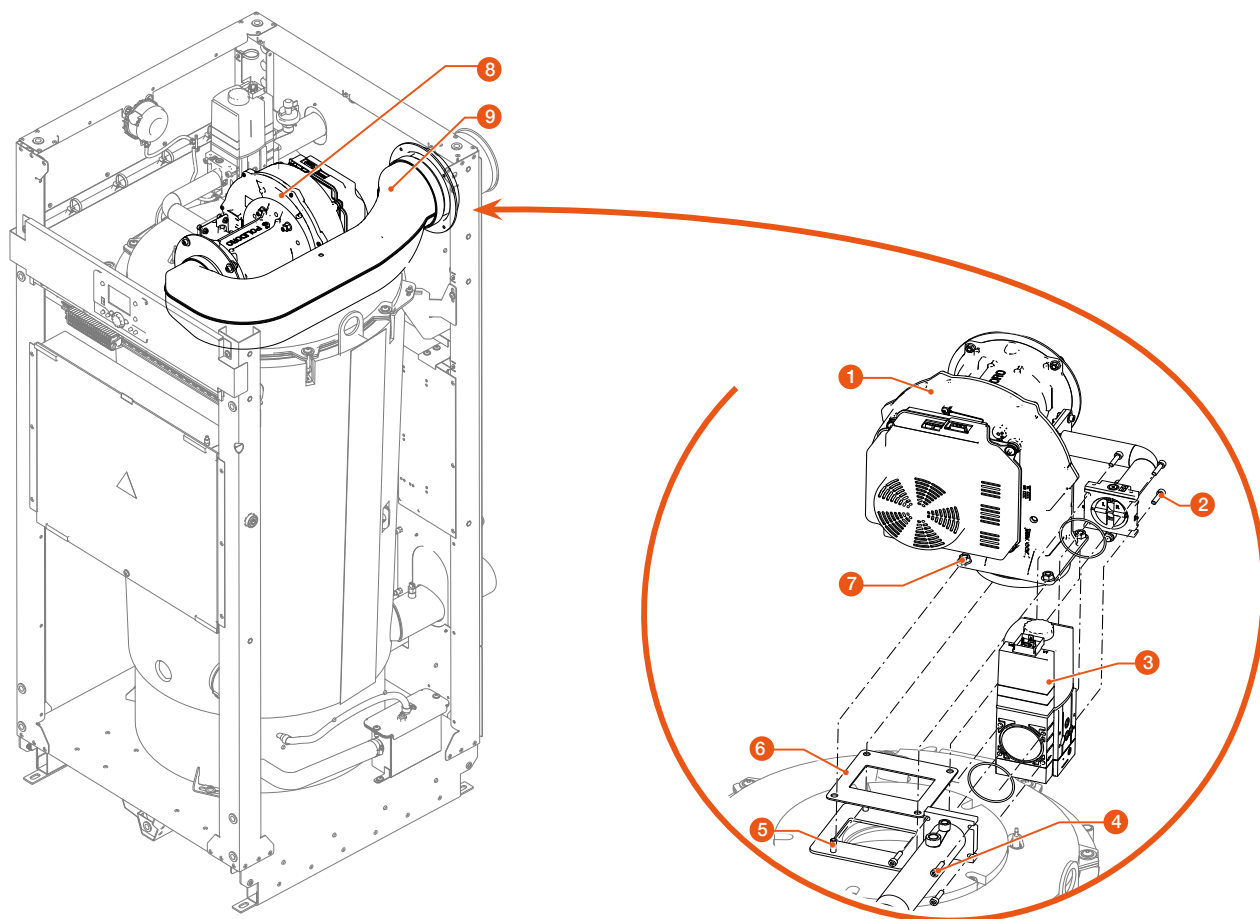


Fig. 26. Removing and Installing the Fan and Adapter Assembly

Removing and Installing the Air-Gas Mixer

Conditions:



- Fan and Air Adapter Assembly removed, see **“Removing and Installing the Fan and Air Adapter Assembly”** on page I-58.

Tools and material:

- Wrench, hex head, sizes 4 and 5
- Wrench, flat, sizes 8, 10 and 13
- Torque wrench (min. 6 Nm)
- Loctite 577 - thread sealant

Removal Procedure:

1. Release four nuts securing the gas pipe (1) to the air-gas mixer (5). Retain hardware and O-ring (2), as required, for reinstallation.



When removing the O-ring, check its general condition. Discard and replace the O-ring if it is dirty or cracked.

2. Release four screws with washers securing the flange (3) to the air-gas mixer (5).
3. Remove the flange (3) and hardware. Retain hardware and gasket (4), as required, for reinstallation.



When removing the gasket, check its general condition. Discard and replace the gasket if it is dirty or cracked.

4. Release six bolts with nuts securing the air-gas mixer (5) to the fan (7).
5. Remove the fan (7) and its hardware. Retain for reinstallation.
6. Remove the O-ring (6). Discard.

Installation Procedure



Some hardware require the use of Loctite thread sealant 577 at installation. When this is the case, a “drop” symbol (♠) is added next to the part in the text.

1. Choose the right mixer, depending on the model of appliance and the gas used after conversion. See **“Preparing the Boiler for Gas Conversion”** on page I-43.
2. Install fan (7) with a new O-ring (6) on air-gas mixer (5), using six retained bolts (♠).
3. Tighten the six nuts in a crosswise pattern, torquing at 6 Nm.
4. Install gasket (4) and fasten the flange (3) to the air-gas mixer (5) using four retained screws (♠) with washers. Torque screws at 6 Nm.
5. Install O-ring (2) and fasten the air-gas mixer (5) and fan (7) assembly to the gas pipe (1) using four retained screws (♠) and nuts. Torque screws at 6 Nm.

Follow-on task(s):

1. Reinstall the Fan and Air Adapter Assembly, see **“Removing and Installing the Fan and Air Adapter Assembly”** on page I-58.

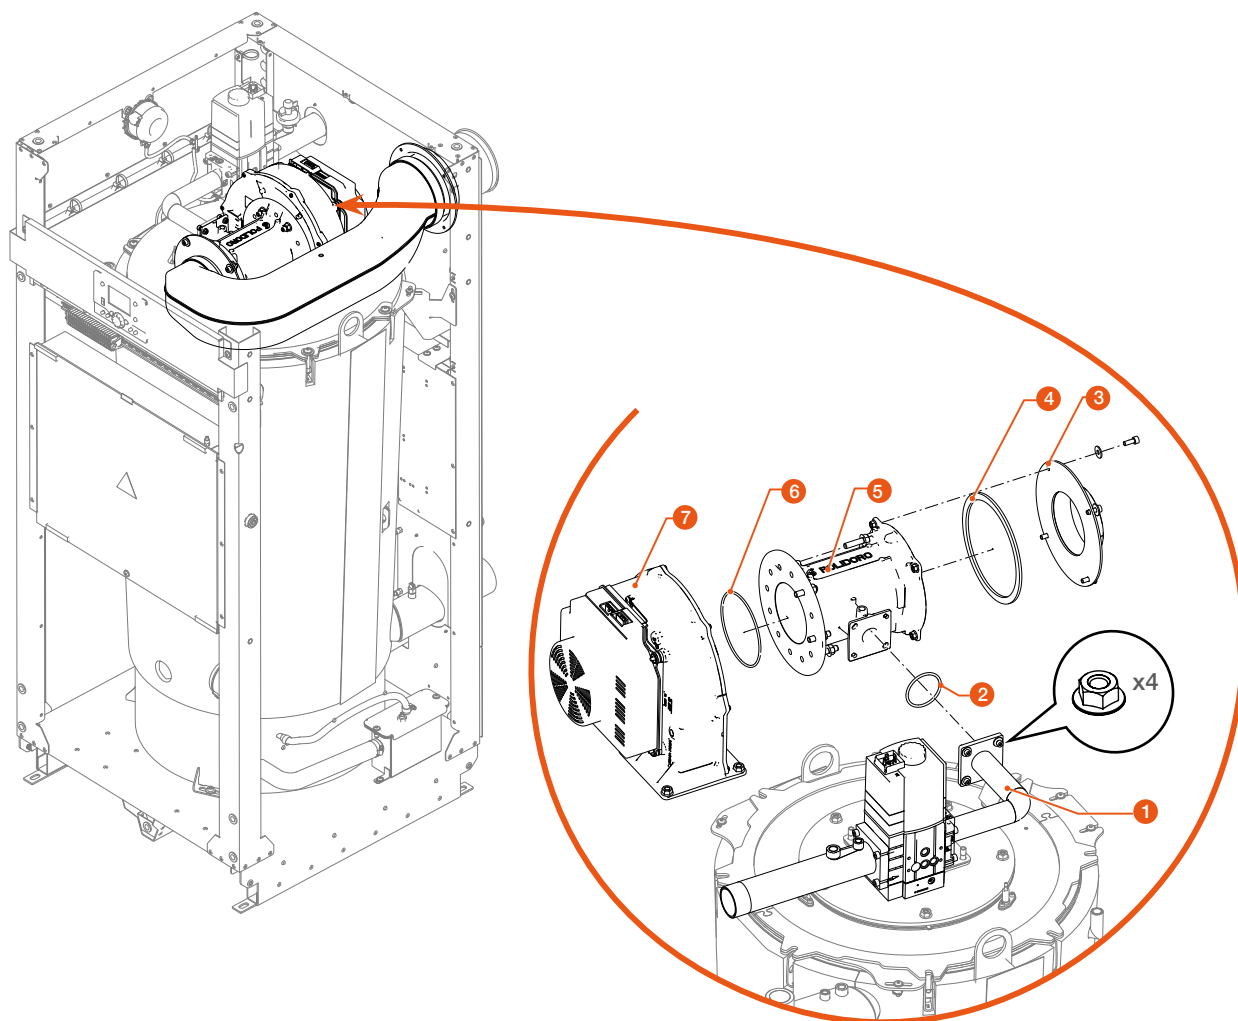


Fig. 27. Removing and Installing the Air-gas Mixer

Removing and Installing the Ignition and Ionization Electrodes

Conditions:     

Tools and material:

- Wrench, hex head, size 3
- Torque wrench
- Protective gloves
- Face mask

Removal Procedure:

1. Disconnect all connectors and grounding cables from the electrodes.



‣ The procedure is identical for both electrodes.

- When removing the electrodes in the scope of the periodic maintenance, the electrodes and their gasket must be discarded and replaced by new ones.
2. Wearing protective gloves and a face mask, remove insulation from the upper plate. Retain for reinstallation.

3. Release two screws (1) from the electrode flange.
4. Remove the electrode and screws from the burner plate (3). Discard, as required.
5. Remove electrode gasket (2) and discard, as required.

Installation procedure:

1. Install new gasket (2) on the burner plate (3).
2. Insert the electrode and fasten with 2 screws (1).
3. Torque screws at 2.5 Nm.
4. Wearing protective gloves and a face mask, install insulation on the upper plate.
5. Reconnect all connectors and ground cables to the electrodes.

Follow-on tasks:

1. Reinstall all removed access panels, refer to “Removing and Installing the Access Panels” on page I-29.
2. Restart the appliance, see “Restarting after Maintenance” on page I-56.

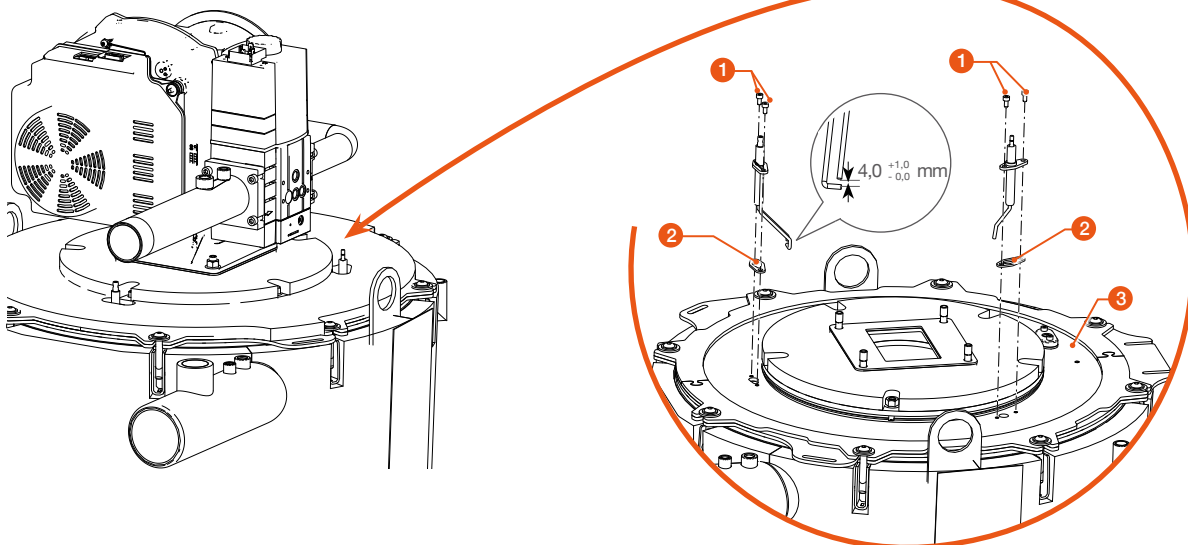


Fig. 28. Removing and Installing the Electrodes

Removing and Installing the Burner

Conditions:



- Fan and air adapter assembly removed, refer to *“Removing and Installing the Fan and Air Adapter Assembly”* on page I-58.

Tools and material:

- Wrench, flat, size 13
- Torque wrench (min. 10 Nm)
- Air compressor
- Protective gloves
- Face mask

Removal Procedure:

1. Release five nuts (1) securing the fan plate (2). Remove the fan plate and its hardware. Retain for reinstallation.
2. Extract burner tube (4) with upper and lower gaskets (3) from the heat exchanger. Discard the gaskets.

Cleaning and Checks:

1. Visually check the condition of the burner tube (4).
2. Wearing protective gloves and a face mask, clean with compressed air to remove residues. If it is in bad condition after cleaning, replace it.
3. Clean the combustion chamber, see *“Checking and Cleaning the Combustion Chamber”* on page I-64.



- To ensure correct tightness of the combustion chamber, it is essential to replace the old gaskets with new ones, clean the contact surfaces and install the new gaskets in the correct locations then tighten the assembly at the correct torque value.
- The bottom of the burner flange and the burner flange area should be thoroughly cleaned from the residues of the old gasket. It is required to maintain the tightness of the gasket.

Installation procedure:

1. Install new lower gasket (3) on burner tube (4) flange.
2. Install burner tube (4) into heat exchanger.
3. Install new upper gasket (3) on burner tube (4) flange.
4. Place the fan plate (2) in position on the studs (5).
5. Install five retained nuts (1) on the studs. Torque first in a crosswise pattern at 5 Nm, then repeat the operation at 10 Nm.

Follow-on tasks:

1. Reinstall the fan and air adapter assembly, refer to *“Removing and Installing the Fan and Air Adapter Assembly”* on page I-58.
2. Reinstall all removed access panels, see *“Removing and Installing the Access Panels”* on page I-29.
3. Restart the appliance, see *“Restarting after Maintenance”* on page I-56.

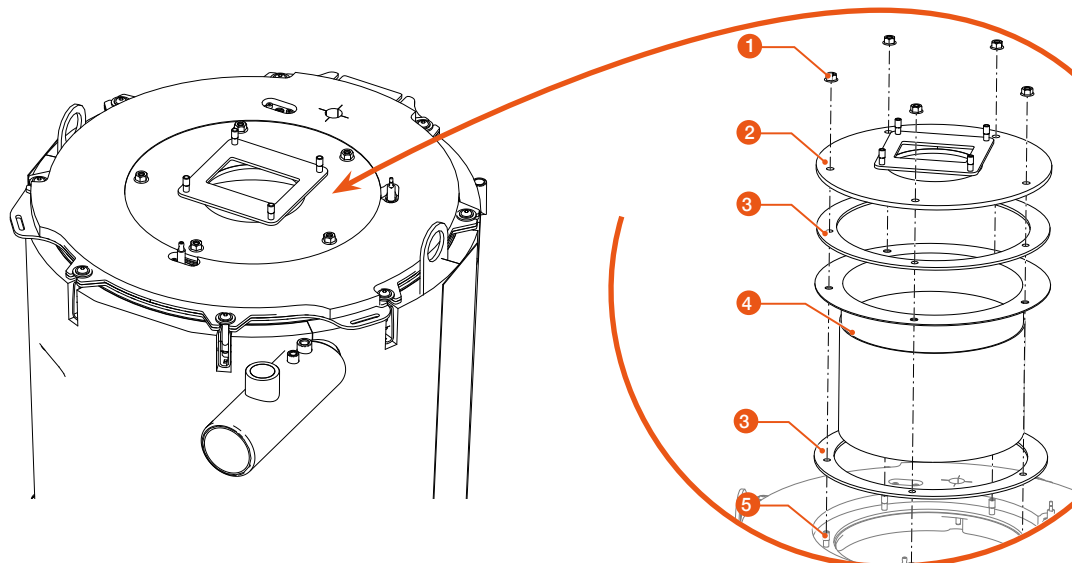


Fig. 29. Removing and Installing the Burner

Checking and Cleaning the Combustion Chamber

Conditions:



- Burner removed, see *“Removing and Installing the Burner”* on page I-63.

Tools and material:

- Industrial vacuum cleaner
- Nylon bristle brush
- Torch

Check Procedure:



These procedures should be performed through the burner opening. Do not remove the burner plate, as it could damage the seals and insulation.

1. Using a torch, visually check the condition of the combustion chamber. If it is dirty, clean it.

Cleaning Procedure

1. Using a nylon bristle brush, sweep the walls of the combustion chamber.
2. Using an industrial vacuum cleaner, remove all deposits from the combustion chamber heating surfaces.

Follow-on tasks:

3. Install the burner, see *“Removing and Installing the Burner”* on page I-63.

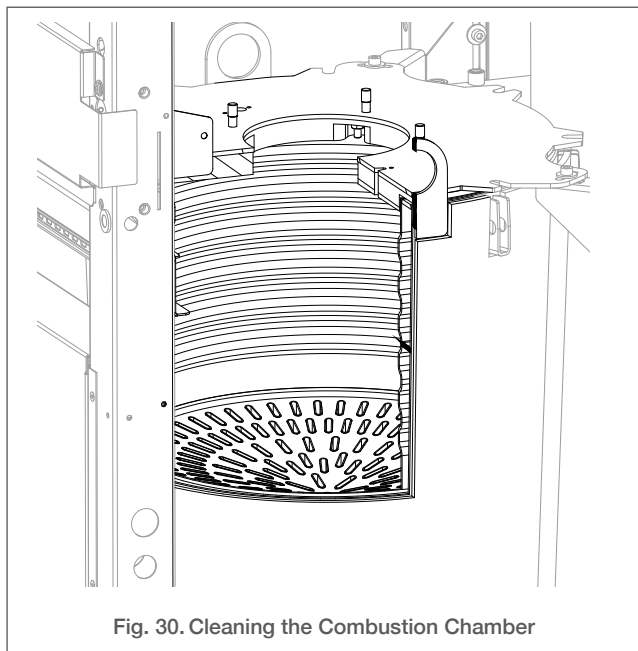


Fig. 30. Cleaning the Combustion Chamber

Replacing the Gas Valve Filter

Conditions:



- Left side top panel removed, refer to *“Removing and Installing the Access Panels”* on page I-29.

Cleaning Procedure (Fig. 31):

1. Release 2 screws and remove bottom cover (1). Retain for reinstallation.
2. Slide filter (2) out of its casing. Discard.
3. Insert new filter (2) into the casing.
4. Put bottom cover (1) back in position on gas valve body.

Follow-on Task(s):

Perform leakage and function test, $p_{max} = 360 \text{ mbar}$

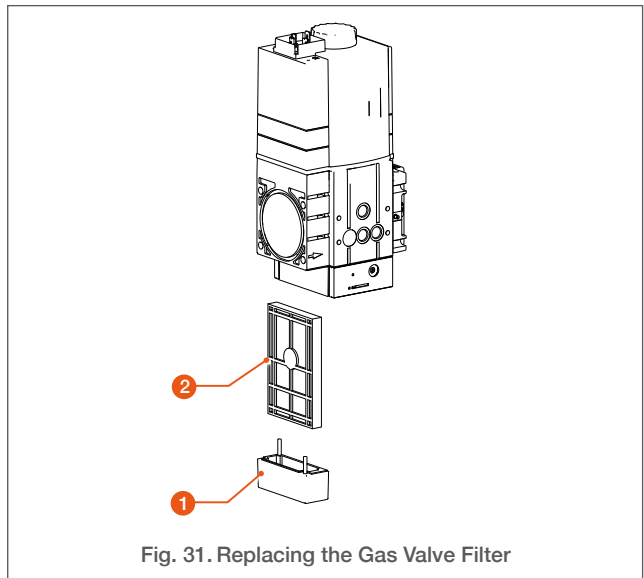


Fig. 31. Replacing the Gas Valve Filter

Checking the Flue Gas (FPS) and Air (APS) Pressure Switches operation

Conditions:     

Tools and material:

- Manometer (measuring range up to min. 7 mbar [700 Pa])

Check Procedure:



- This procedure needs to be performed with boiler (and controller) running, and the front panel open.



When performing the following procedure, do not touch the high voltage connections and do not touch any inner component of the boiler with any wet body part.

- Disconnect the hose (2) running to the pressure switch (1), as illustrated below.
- Connect a T-piece to the hose.
- Connect pressure meter to one of the T-piece connections.

- FPS: blow air into the hose while it is connected to the flue pressure switch and to the measuring device.
- APS: suck air from the hose while it is connected to the air pressure switch and to the measuring device.
- Verify that the pressure switch switches at the set pressure shown in table below and that the controller displays error 193.

N 300 FS

| | |
|----------------------|-----------------|
| Flue Pressure Switch | 6 mbar [600 Pa] |
| Air Pressure Switch | 6 mbar [600 Pa] |

- In case of malfunction, replace the pressure switch.

Follow-on tasks:

- Reconnect the hose (2) to correct location, as shown in illustration below.
- Check that the connection is not leaking.
- Close boiler access panels, refer to “Removing and Installing the Access Panels” on page I-29.


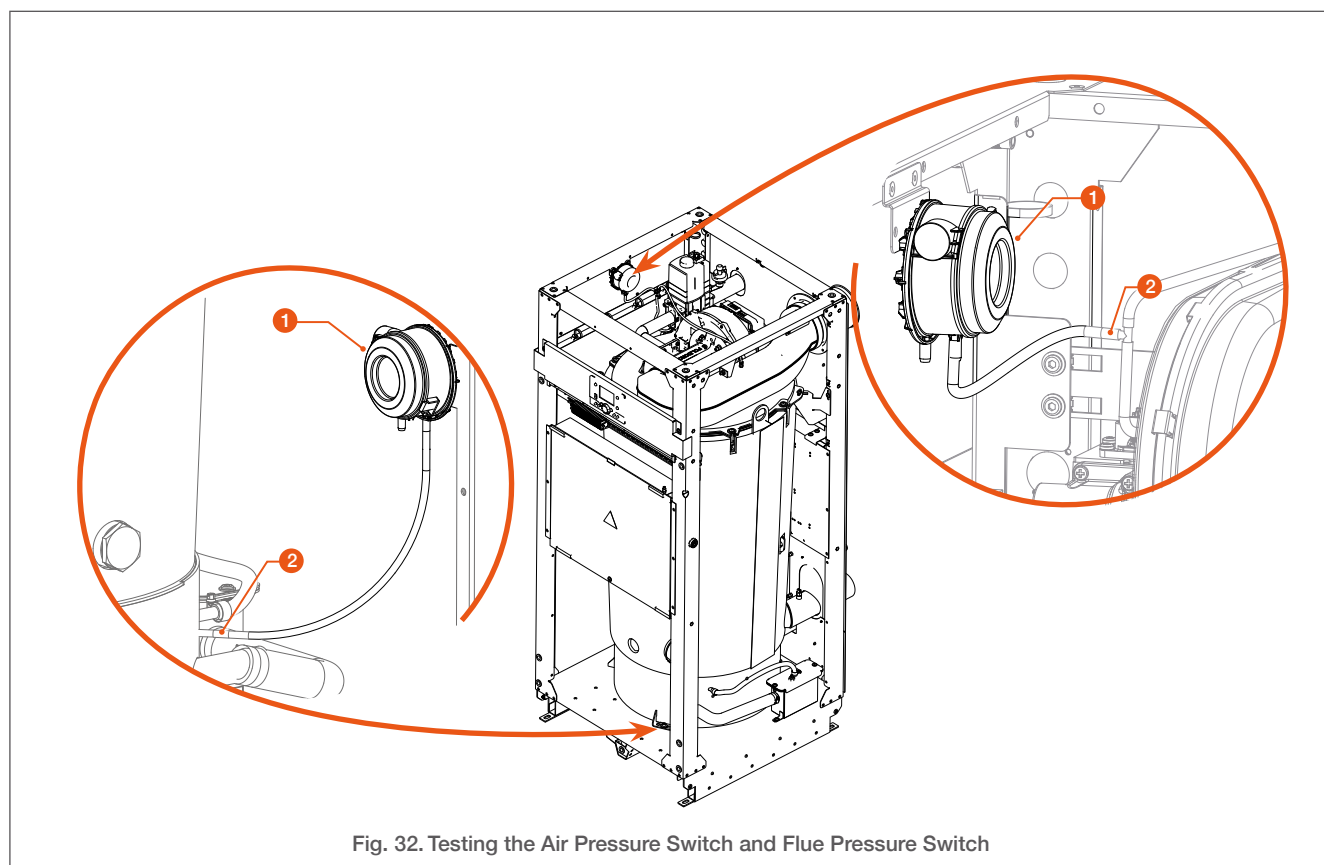


Fig. 32. Testing the Air Pressure Switch and Flue Pressure Switch

Optional Modules


Extension Modules & Cable Hub

Nesta boilers can control 3 heating circuits with mixing functions, using 3 extension modules. Each extension supply needs to be provided with power supply and a bus connection.

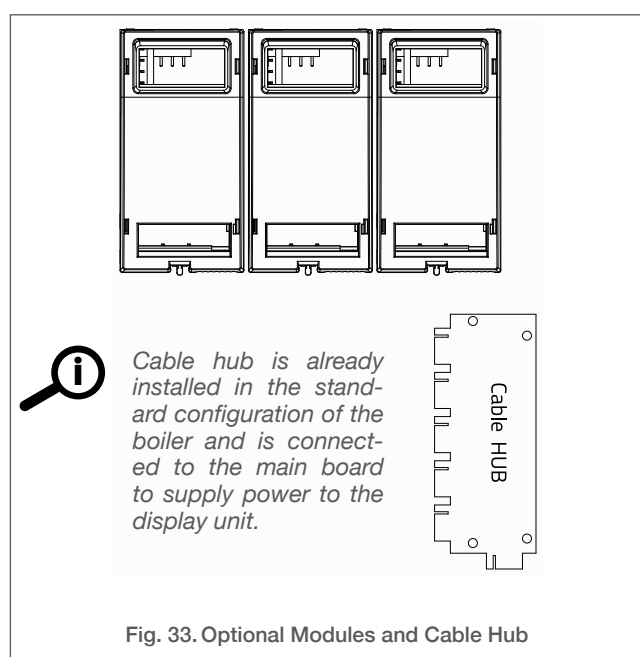


Cascading module

This module allows the installation of several boilers in a cascade to increase the heating power in specific applications. This cascade module enables communication from one boiler to another, and must be installed in each boiler. See **“Boilers in a Cascade System” on page I-67.**

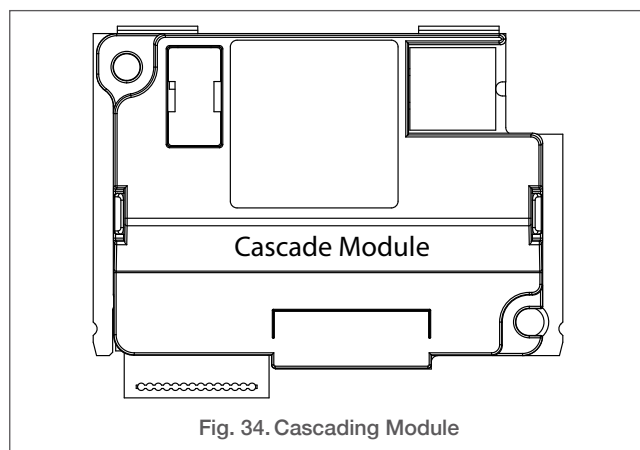

Web Server Module

Through the use of this module, you can connect to an Ethernet and get remote access to the boiler and all the heating system via the Internet. Using a computer or mobile devices, you can monitor and control the installation remotely. Management takes place via a web browser.

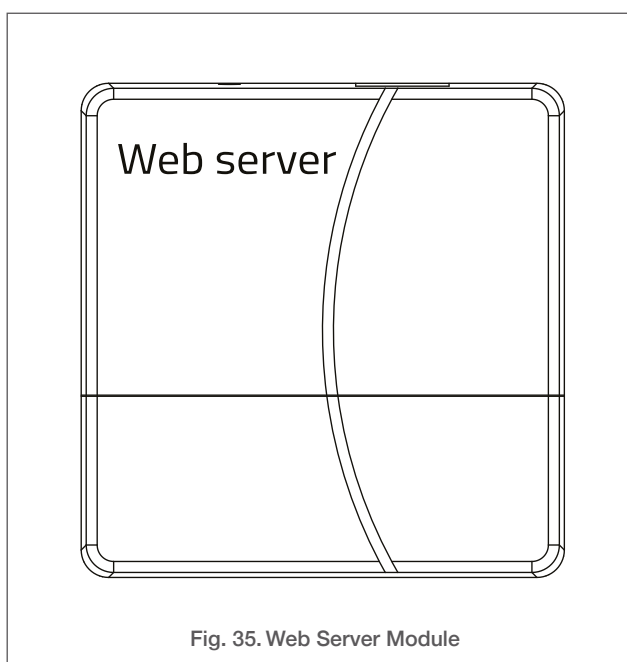

Boilers in a Cascade System

In a heating system comprised of several boilers, it is important that the power generated by the boilers adapts at any moment to the demand of the installation, always optimising the generators' efficiency.

Up to 4 boilers can be connected in a cascade to one chimney, and 4 such groups of boilers with their chimneys can be controlled using the control unit of one boiler.

The boiler with device address 1 assumes the role of the cascade Principal, and the others are Subsequent.





In the controller menus, please note that the Principal boiler is called "Master" and a Subsequent boiler is called "Slave".


The principal boiler activates the required functions and shows the additional menus with the parameters for use with the cascaded system.


This boiler has all the logic control of the cascaded system and also regulates the stop/start sequence of each boiler according to the demand of the installation.

The boilers are connected with each other using the cascade module (see Fig. 35). Each boiler has its own module, which is connected directly to the board.

When several boilers are cascaded through their chimney system, make sure to install a non-return valve (flue damper) between the boiler flue outlet and the chimney connection. This will prevent any back flow of the flue gases into a boiler that is not in operation. Please refer to the manual provided with the accessory for installation and maintenance recommendations.

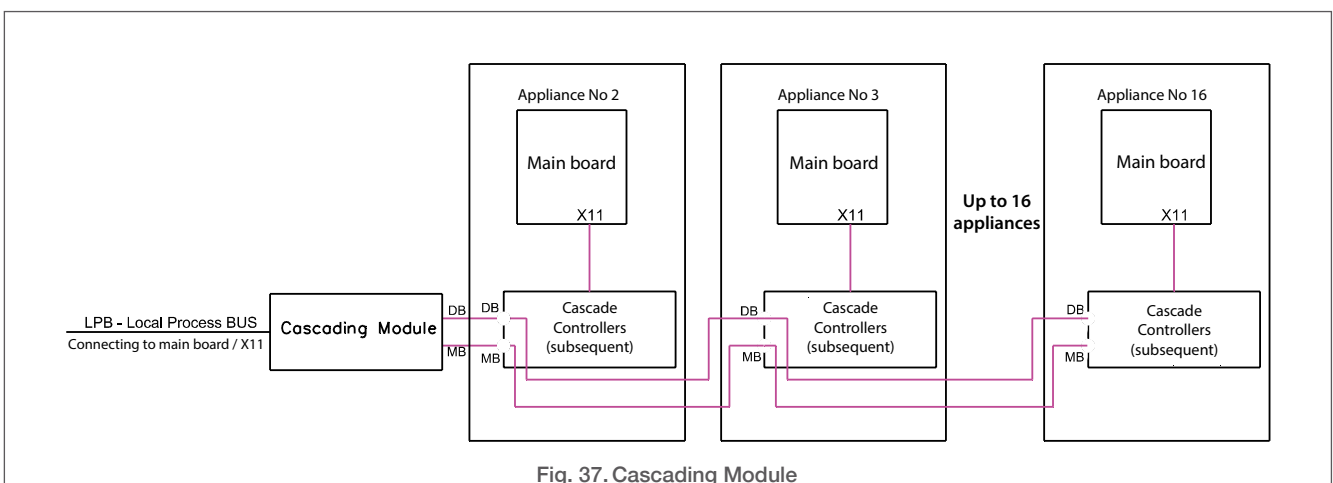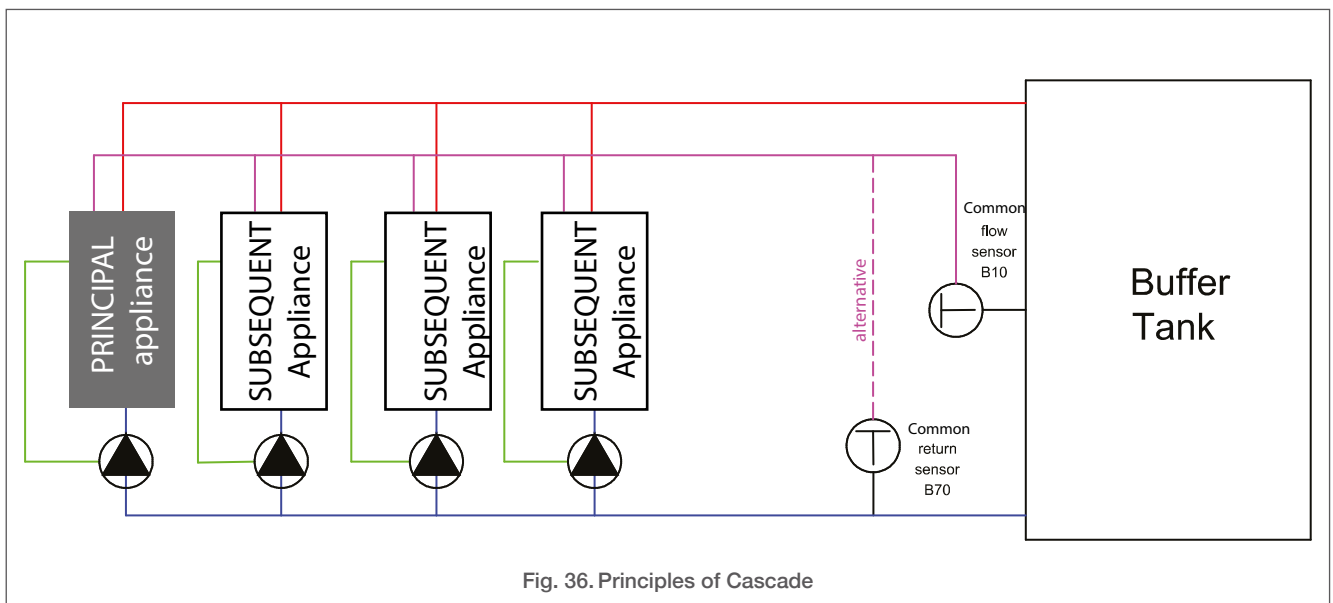

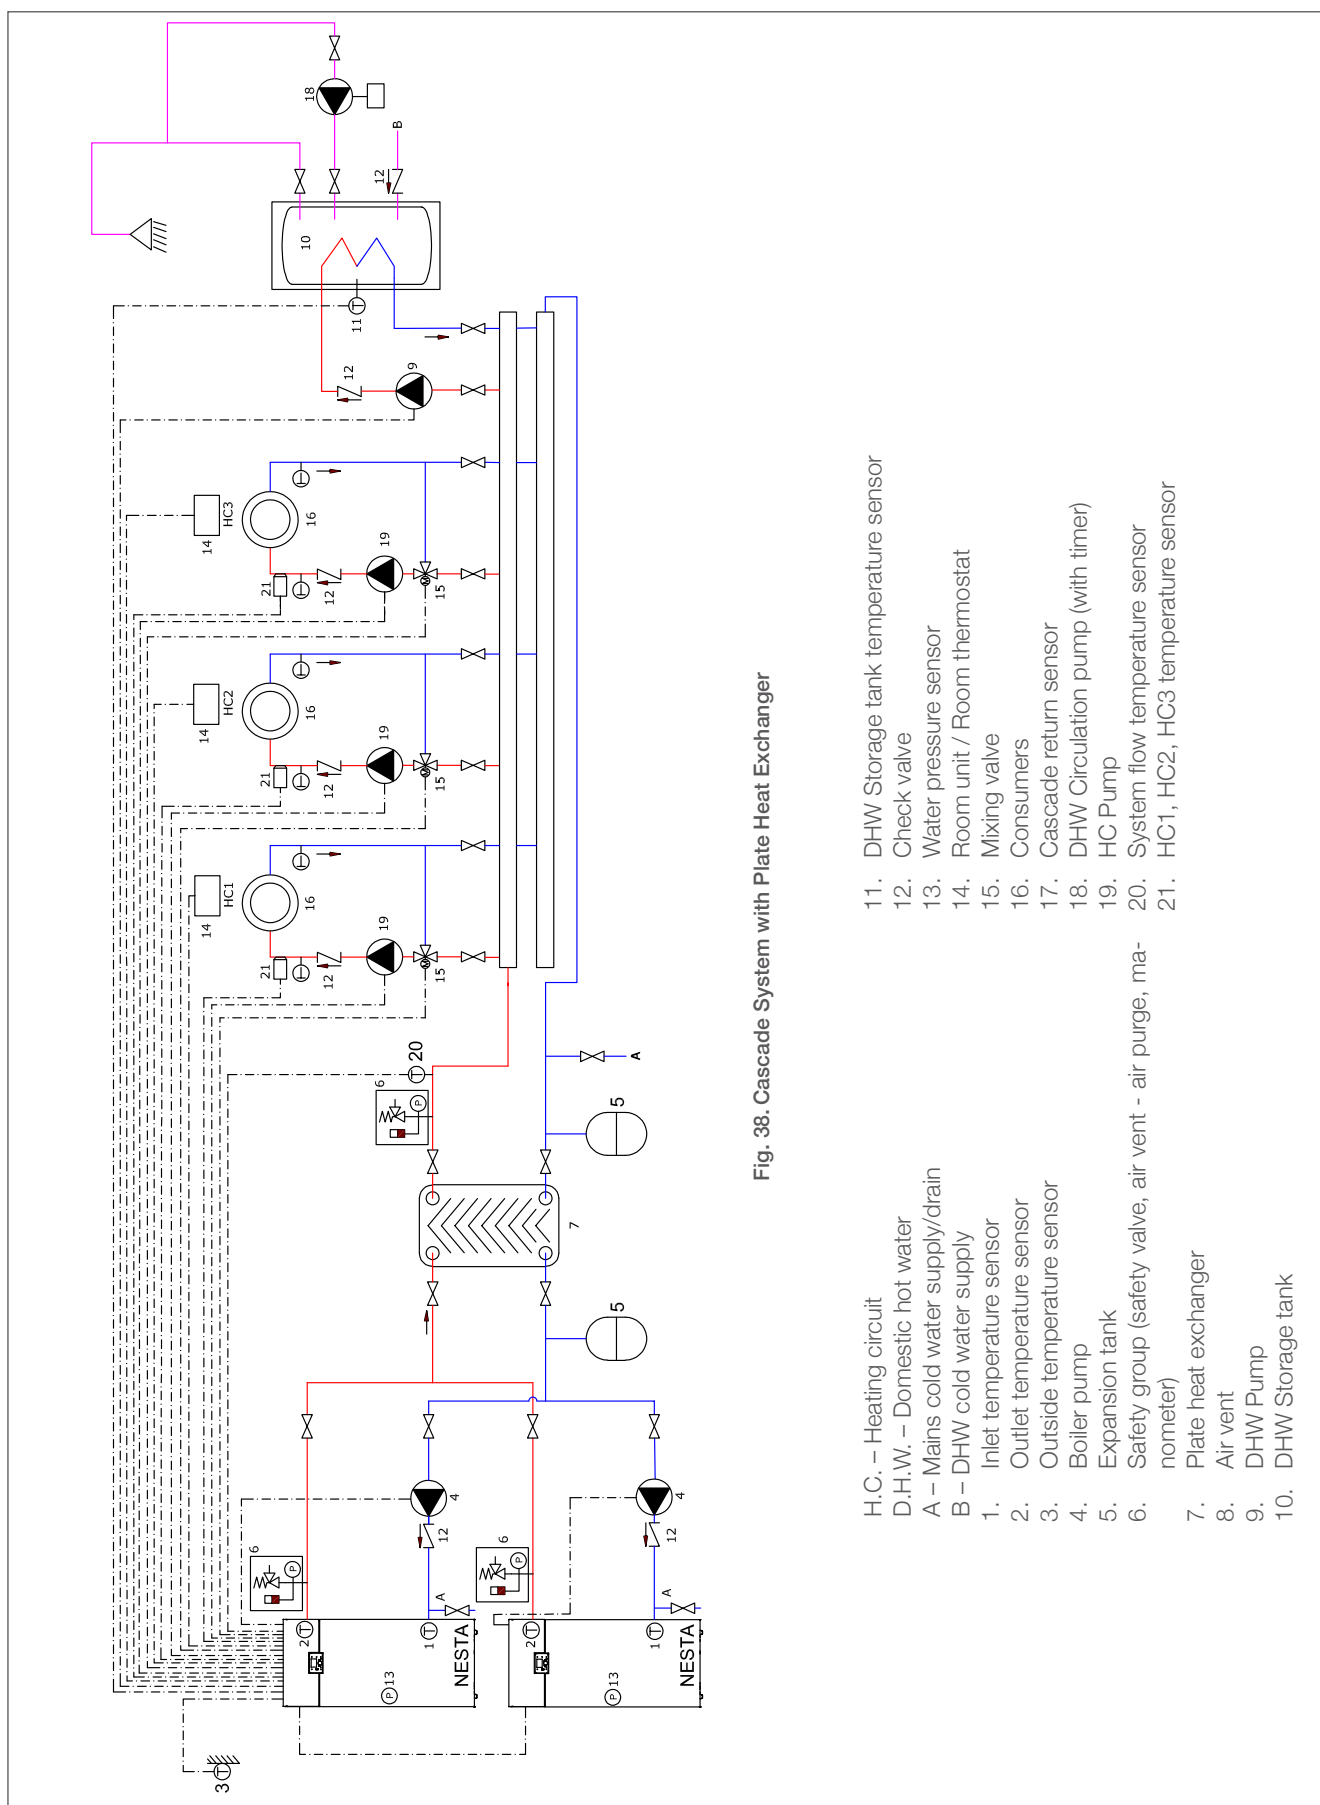

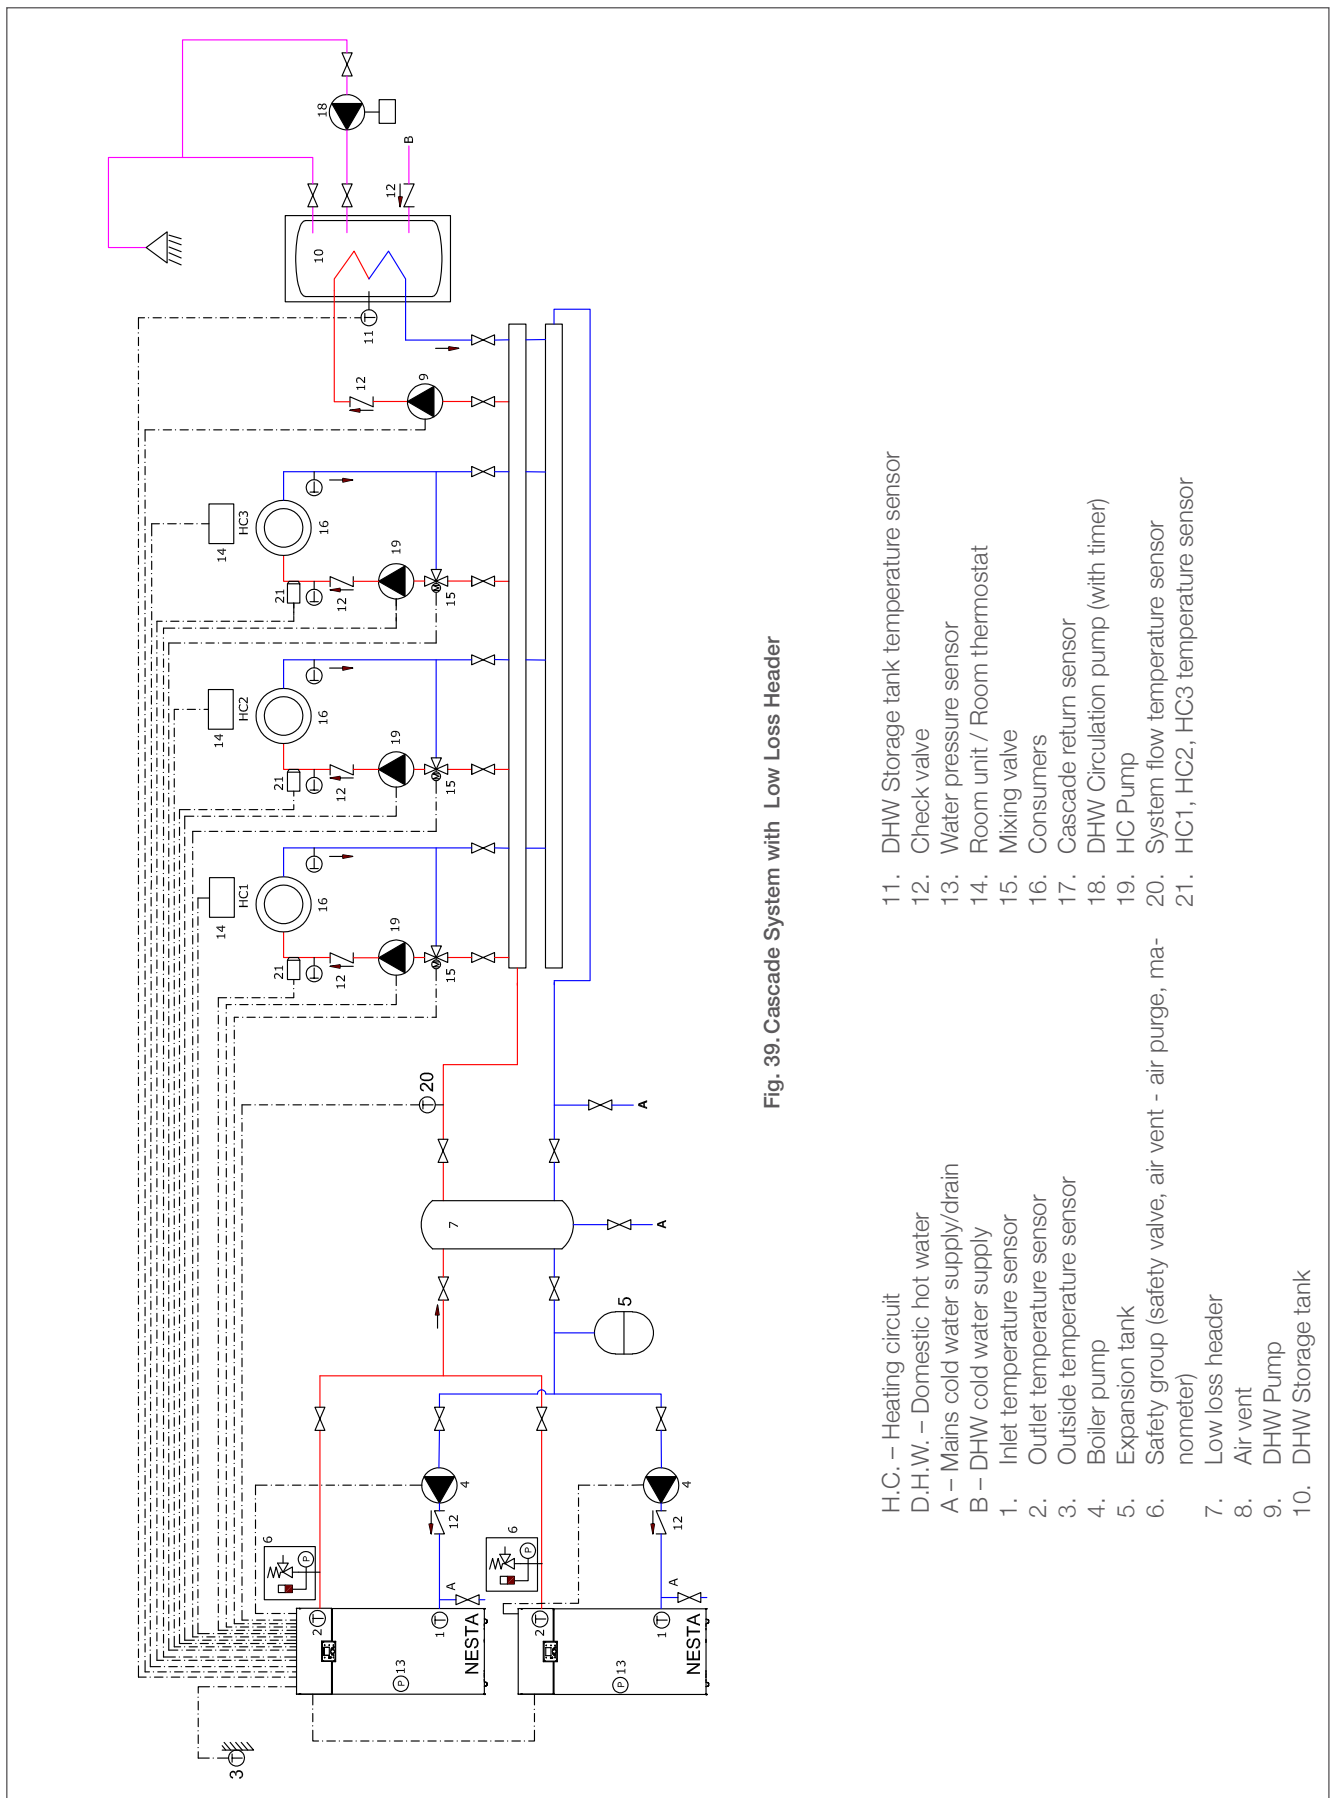

ADDITIONAL INFORMATION FOR THE INSTALLER

Boiler Settings for the Installer

Access Levels

Three different levels of settings are available for the Installer : End user level (EU), Commissioning level (C) and Engineer level (E). A fourth level, OEM, is only accessible at factory level, through the use of a code.

Each level allows to set certain specific parameters or program the boiler, according to the installed circuits.

The menus of the End user level are described in **“Structure of Menus for the End User” on page U-25**. The menus for the qualified professional (Commissioning and Engineer) are described in the following pages.



A password is required to access the Engineer level. Please contact your AIC representative for more information.

To access the Commissioning and the Engineer levels, proceed as follows:


1. Press the OK (2) button.
2. Press the Info (1) button for more than 3 seconds. The access levels are displayed.

Structure of Menus for the Installer

| Top menu | Level | Pgm No. | Submenu 1 | Submenu 2 | Default | Setting |
|----------------------|-------|---------|-----------------------|---|----------------|---------|
| Time of day and date | Eu | 1 | ► Hours / Minutes | | 01:00 (hh:min) | |
| | Eu | 2 | ► Day / Month | | 01.01 (dd.mm) | |
| | Eu | 3 | ► Year | | 2019 (yyyy) | |
| | Eu | 5 | ► Start of summertime | | 25.03 (dd.mm) | |
| | Eu | 6 | ► End of summertime | | 25.10 (dd.mm) | |
| Operator section | Eu | 20 | ► Language | <ul style="list-style-type: none">English, polski, Češky, Slovensky, Slovenščina, Magyar, Ελληνικά, Türkçe, русский, Serbian, Italiano, Español | English | |
| | E | 22 | ► Info | <ul style="list-style-type: none">TemporarilyPermanently | Temporarily | |
| | E | 26 | ► Operation lock | <ul style="list-style-type: none">OffOn | Off | |
| | E | 27 | ► Programming lock | <ul style="list-style-type: none">OffOn | Off | |

Commissioning Menu

When starting up the boiler for the first time, a commissioning screen will come up. It can be exited without adjustments by pressing the ESC (3) button. If the parameters are not set and saved, the screen will open automatically the next time the boiler is turned on, until the parameters are set and saved.

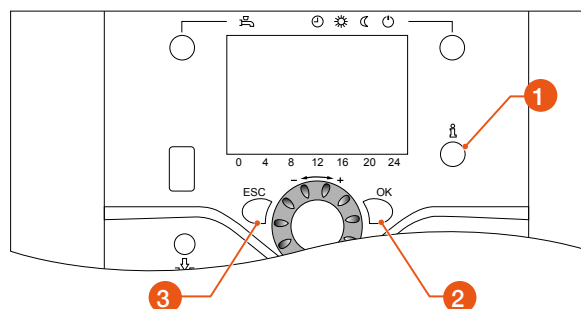

Menus and Settings

The following table contains the menus and submenus for the installer (End user, Commissioning and Engineer levels). The last column allows the installer to write down the setting defined for each parameter at installation, if it is different from the default.

| Top menu | Level | Pgm No. | Submenu 1 | Submenu 2 | Default | Setting |
|-----------------------------|-------|---------|--|--|---------------------------|---------|
| | C | 28 | ► Direct Adjustment | <ul style="list-style-type: none"> Automatic storage Storage with confirmation | Storage with confirmation | |
| | Eu | 29 | ► Units | <ul style="list-style-type: none"> °C, bar °F, PSI | °C, bar | |
| Operator Section (Cnt'd) | C | 44 | ► Operation HC2 | <ul style="list-style-type: none"> Jointly with HC1 Independently | Jointly with HC1 | |
| | C | 46 | ► Operation HC3/P | <ul style="list-style-type: none"> Jointly with HC1 Independently | Jointly with HC1 | |
| | E | 70 | ► Software version | | | |
| Time Prog heating circuit 1 | Eu | 500 | ► Select Mo-Su | <ul style="list-style-type: none"> Mo-Su, Mo-Fr, Sa-Su, Mo, Tu, We, Th, Fr, Sa, Su | Mo-Su | |
| | Eu | 501 | ► (day or range selection) 1st phase on | | 6:00 (h/min) | |
| | Eu | 502 | ► (day or range selection) 1st phase off | | 22:00 (h/min) | |
| | Eu | 503 | ► (day or range selection) 2nd phase on | | --:-- (h/min) | |
| | Eu | 504 | ► (day or range selection) 2nd phase off | | --:-- (h/min) | |
| | Eu | 505 | ► (day or range selection) 3rd phase on | | --:-- (h/min) | |
| | Eu | 506 | ► (day or range selection) 3rd phase off | | --:-- (h/min) | |
| | Eu | 516 | ► Default values | <ul style="list-style-type: none"> No Yes | No | |
| Time Program 5 | Eu | 600 | ► Select Mo-Su | <ul style="list-style-type: none"> Mo-Su, Mo-Fr, Sa-Su, Mo, Tu, We, Th, Fr, Sa, Su | Mo-Su | |
| | Eu | 601 | ► (day or range selection) 1st phase on | | 6:00 (h/min) | |
| | Eu | 602 | ► (day or range selection) 1st phase off | | 22:00 (h/min) | |
| | Eu | 603 | ► (day or range selection) 2nd phase on | | --:-- (h/min) | |
| | Eu | 604 | ► (day or range selection) 2nd phase off | | --:-- (h/min) | |
| | Eu | 605 | ► (day or range selection) 3rd phase on | | --:-- (h/min) | |
| | Eu | 606 | ► (day or range selection) 3rd phase off | | --:-- (h/min) | |
| | Eu | 616 | ► Default values | <ul style="list-style-type: none"> No Yes | No | |
| Holidays heating circuit 1 | Eu | 641 | ► Preselection | <ul style="list-style-type: none"> Period 1 ... Period 8 | Period 1 | |
| | Eu | 642 | ► Period (Number): Start | | --:-- (dd:mm) | |
| | Eu | 643 | ► Period (Number): End | | --:-- (dd:mm) | |
| | Eu | 648 | ► Operating level | <ul style="list-style-type: none"> Frost Protection Reduced | Frost Protection | |

ADDITIONAL INFORMATION FOR THE INSTALLER

| Top menu | Level | Pgm No. | Submenu 1 | Submenu 2 | Default | Setting |
|----------------------|-------|---------|---|---|------------|---------|
| Heating circuit 1 | Eu | 710 | ► Room comfort setpoint | | 20.0°C | |
| | Eu | 712 | ► Room reduced setpoint | | 16.0°C | |
| | Eu | 714 | ► Room frost protection setpoint | | 10.0°C | |
| | E | 716 | ► Comfort setpoint max | | 35.0°C | |
| | Eu | 720 | ► Heating curve slope | | 1.5 | |
| | E | 721 | ► Heating curve displacement | | 0.0°C | |
| | E | 726 | ► Heating curve adaptation | • Off • On | Off | |
| | Eu | 730 | ► Summer/winter heating limit | | 18.0°C | |
| | E | 732 | ► 24-hour heating limit | | -3°C | |
| | E | 733 | ► Ext'n 24-hour heating limit | • No • Yes | Yes | |
| | C | 740 | ► Flow temp setpoint min | | 8°C | |
| | C | 741 | ► Flow temp setpoint max | | 90°C | |
| | Eu | 742 | ► Flow temp setpoint room stat | | 65°C | |
| | E | 744 | ► Swi-on ratio room stat | | --- | |
| | C | 746 | ► Delay heat request | | 0 s | |
| | E | 750 | ► Room influence | | 20% | |
| | E | 760 | ► Room temp limitation | | 1°C | |
| | E | 770 | ► Boost heating | | 3°C | |
| | E | 780 | ► Quick setback | • Off • To reduced setpoint • To frost prot setpoint | Off | |
| | E | 790 | ► Optimum start control max | | 0 min | |
| | E | 791 | ► Optimum stop control max | | 0 min | |
| | E | 800 | ► Reduced setp increase start | | -5°C | |
| | E | 801 | ► Reduced setp increase end | | -15°C | |
| | E | 809 | ► Continuous pump operation | • No • Yes | No | |
| | E | 820 | ► Overtemp prot pump circuit | • Off • On | On | |
| | E | 830 | ► Mixing valve boost | | 5°C | |
| | E | 832 | ► Actuator type | • 2 position • 3 position | 3 position | |
| | E | 833 | ► Switching differential 2-pos | | 2°C | |
| | E | 834 | ► Actuator running time | | 120 s | |
| | C | 850 | ► Floor curing function | • Off • Functional heating • Curing heating • Curing/Functional heating • Functional/Curing heating • Manually | Off | |
| | C | 851 | ► Floor curing setp manually | | 25°C | |
| | Eu | 855 | ► Floor curing setp current / Floor curing day current | | | |

| Top menu | Level | Pgm No. | Submenu 1 | Submenu 2 | Default | Setting |
|-----------------------------|-------|---------|--------------------------------|---|------------------|---------|
| Heating circuit 1 (Cnt'd) | E | 861 | ► Excess heat draw | <ul style="list-style-type: none"> • Off • Heating mode • Always | Always | |
| | E | 870 | ► With buffer | <ul style="list-style-type: none"> • No • Yes | No | |
| | E | 872 | ► With prim contr/system pump | <ul style="list-style-type: none"> • No • Yes | Yes | |
| | E | 880 | ► Pump speed reduction | <ul style="list-style-type: none"> • Operating level • Characteristic • Temp differential nominal | Characteristics | |
| | E | 881 | ► Starting speed | | 100% | |
| | E | 882 | ► Pump speed min | | 50% | |
| | E | 883 | ► Pump speed max | | 100% | |
| | E | 888 | ► Curve readj. at 50% speed | | 33% | |
| | E | 889 | ► Filter time const speed ctrl | | 5 min | |
| | E | 890 | ► Flow setp readj speed ctrl | <ul style="list-style-type: none"> • No • Yes | Yes | |
| | E | 898 | ► Operating level changeover | <ul style="list-style-type: none"> • Frost protection • Reduced • Comfort | Reduced | |
| | E | 900 | ► Optg mode changeover | <ul style="list-style-type: none"> • None • Protection • Reduced • Comfort • Automatic | Protection | |
| Boiler | Eu | 2214 | ► Setpoint manual control | | 60°C | |
| Fault | Eu | 6705 | ► SW Diagnostic code | | | |
| | Eu | 6706 | ► Burn ctrl phase lockout pos | | | |
| Service/special operation | Eu | 7130 | ► Chimney sweep function | <ul style="list-style-type: none"> • Off • On | Off | |
| | Eu | 7131 | ► Burner output | <ul style="list-style-type: none"> • Partial load • Full load • Max heating load | Max heating load | |
| | Eu | 7140 | ► Manual control | <ul style="list-style-type: none"> • Off • On | Off | |
| Diagnostics heat generation | Eu | 8338 | ► Hours run heating mode | | | |
| | Eu | 8339 | ► Hours run DHW | | | |
| | Eu | 8378 | ► Total gas energy heating | | | |
| | Eu | 8379 | ► Total gas energy DHW | | | |
| | Eu | 8380 | ► Total gas energy | | | |
| | Eu | 8381 | ► Gas energy heating Reset? | <ul style="list-style-type: none"> • Yes • No | | |
| | Eu | 8382 | ► Gas energy DHW Reset? | <ul style="list-style-type: none"> • Yes • No | | |
| | Eu | 8383 | ► Gas energy | | | |
| | Eu | 8526 | ► 24-Hour yield solar energy | | | |
| | Eu | 8527 | ► Total yield solar energy | | | |
| | Eu | 8530 | ► Hours run solar yield | | | |
| | Eu | 8532 | ► Hours run collector pump | | | |
| Diagnostics consumers | Eu | 8700 | ► Outside temp | | | |
| | Eu | 8701 | ► Outside temp min Reset? | | | |
| | Eu | 8702 | ► Outside temp max Reset? | | | |

ADDITIONAL INFORMATION FOR THE INSTALLER



Error Codes and Solutions

| Error code | Fault description | Explanation | Action(s) |
|------------|--|---|---|
| 10 | Outside temperature sensor error | | Check connection and/or sensor. Replace as required. Emergency operation Contact AIC technical support. |
| 20 | Boiler temperature 1, sensor error | Short circuit or Open circuit boiler flow sensor. | Check connection and sensor. Replace as required. |
| 26 | Common flow temperature, sensor error | Short circuit or Open circuit common flow temperature sensor. | Check connection and sensor. Replace as required. |
| 28 | Flue gas temperature sensor error | Short circuit or Open circuit flue gas sensor. | Check connection and sensor. Replace as required. |
| 30 | Flow temperature 1, sensor error | Short circuit or Open circuit flow sensor. | Check connection and sensor. Replace as required. |
| 32 | Flow temperature 2, sensor error | Short circuit or Open circuit boiler flow sensor. | Check connection and sensor. Replace as required. |
| 38 | Flow temperature, primary controller, sensor error | | Check connection and sensor. Replace as required. |
| 40 | Return temperature 1, sensor error | Short circuit or Open circuit boiler return sensor. | Check connection and sensor. Replace as required. |
| 46 | Cascade return temperature, sensor error | | Check connection and sensor. Replace as required. |
| 47 | Common return temperature, sensor error | | Check connection and sensor. Replace as required. |
| 50 | DHW temperature 1 sensor error | | Check connection and sensor. Replace as required. |
| 52 | DHW temperature 2, sensor error | | Check connection and sensor. Replace as required. |
| 54 | Flow temperature DHW, sensor error | Short circuit or Open circuit DHW flow sensor. | Check connection and sensor. Replace as required. |
| 57 | DHW circulation, sensor error | | Check connection and sensor. Replace as required. |
| 60 | Room temperature 1, sensor error | | Check connection and sensor. Replace as required. |
| 65 | Room temperature 2, sensor error | | Check connection and sensor. Replace as required. |
| 68 | Room temperature 3, sensor error | | Check connection and sensor. Replace as required. |
| 70 | Storage tank temperature 1 (top), sensor error | | Check connection and sensor. Replace as required. |
| 71 | Storage tank temperature 2 (bottom), sensor error | | Check connection and sensor. Replace as required. |
| 72 | Storage tank temperature 3 (center), sensor error | | Check connection and sensor. Replace as required. |
| 78 | Water pressure, sensor error | | Check connection and sensor. Replace as required. |

| Error code | Fault description | Explanation | Action(s) |
|------------|--|--|---|
| 81 | LPB short circuit or no bus power supply | | Check LPB connections and bus power supply. |
| 82 | LPB address collision | | Check addresses of connected control modules |
| 83 | BSB wire cross-sectional/ no communication | | Check connection of the room units |
| 84 | BSB wire address collision | 2 room devices have the same assignment (prog.no. 42) | Correct device address. |
| 85 | BSB RF communication error | | Check bus connection and components. |
| 91 | Data overrun in EEPROM | Internal fault in controller, process sensor | Contact AIC technical support. |
| 98 | Extension module 1, error | | Check extension module connections. |
| 99 | Extension module 2, error | | Check extension module connections. |
| 100 | 2 clock time masters | | Check time master |
| 102 | Clock time master without backup | | Check clock |
| 103 | Communication error | | Check connection and components |
| 105 | Maintenance message | | See maintenance code (press information button once) for detailed information |
| 109 | Supervision boiler temperature | | Contact AIC technical support. |
| 110 | STB (SLT) lockout | No heat removal, STB interruption, possible short-circuit in the gas valve, internal fuse faulty; Internal pump malfunction | Allow device to cool down and carry out reset; if the fault occurs several times inform AIC technical support Check the internal pump, water cooled burner plate not properly air-vented |
| 111 | Temperature limiter safety shutdown | | Contact AIC technical support. |
| 117 | Water pressure too high | | Release the water to a suitable pressure |
| 118 | Water pressure too low | | Top up the system with water to reach a suitable pressure |
| 121 | Flow temperature heating circuit 1 not reached | Heat losses in circuit | Check the circuit for fault insulation and heat losses. |
| 122 | Flow temperature heating circuit 2 not reached | Heat losses in circuit | Check the circuit for fault insulation and heat losses. |
| 125 | Maximum boiler temperature exceeded | | Contact AIC technical support. |
| 126 | DHW charging temperature not reached | | Check operation and heat up times for DHW |
| 127 | DHW legionella temperature not reached | | Check operation of appliance |
| 128 | Loss of flame during operation | Ionization current lost after successful ignition | Check electric supply, polarity and ionization electrode, as well as ignition components/parameters. |
| 129 | Wrong air supply | | Check air supply |

ADDITIONAL INFORMATION FOR THE INSTALLER

| Error code | Fault description | Explanation | Action(s) |
|------------|---|--|--|
| 130 | Flue gas temperature limit exceeded | Heat engine is overheating | Check causes of high temps Check connection and sensor. Replace as required Check connection and chimney. |
| 132 | Gas pressure switch safety shut down | Lack of gas | Check gas supply and pressure Check connection and component |
| 133 | Safety time for establishment of flame exceeded | Lack of gas, Polarity of mains connection, safety period, | Reset, if the fault re-occurs more than 3 times, contact AIC technical support. Check ignition electrode and ionization current |
| 146 | Configuration error sensor/controlling elements | | Check sensor configuration or replace component |
| 151 | LMS14... error, internally | | Check parameters (see adjustment table installer and/or call-up values) Reset controller and/or replace as required, Check electrode wiring Contact AIC technical support. |
| 152 | Parameterization error | Incorrect / Conflicting parameters input. | Verify parameters or reset to default parameters |
| 153 | Unit manually locked | Reset button stuck in | Check reset button |
| 160 | Fan speed threshold not reached | Fan/relay possibly defective, speed threshold set wrongly. | Check parameters, connections and component. Replace as required |
| 162 | Air pressure switch error | Air pressure switch/Flue pressure switch does not close | 1. Check flue path for obstructions. Unblock as required 2. Check connection/wiring and pressure switch. Replace as required. Floor appliances (from 120 kW): 3. Check air intake for obstructions. Unblock as required. |
| 164 | Flow/pressure switch, heating circuit error | No flow detected | Remove the air from the circuit; Update the parameter set. Check connection and switches in HC. Replace as required |
| 166 | Air pressure switch error | Air pressure switch does not open | Check connection and adjustments on air pressure switch. Replace as required. |
| 170 | Error water pressure sensor, primary side | | Check connection and sensor. Replace as required. |
| 171 | Alarm contact 1 active | | Correct the active fault |
| 172 | Alarm contact 2 active | | |
| 173 | Alarm contact 3 active | | |
| 174 | Alarm contact 4 active | | |
| 176 | Water pressure 2 too high | | Release the water to a suitable pressure. |
| 177 | Water pressure 2 too low | | Top up the system with water to reach a suitable pressure. |

| Error code | Fault description | Explanation | Action(s) |
|---|--|---|--|
| 178 | Temperature limiter heating circuit 1 | | Allow the circuit to cool down and carry out reset; if the fault occurs several times inform AIC technical support. |
| 179 | Temperature limiter heating circuit 2 | | Allow the circuit to cool down and carry out reset; if the fault occurs several times inform AIC technical support. |
| 183 | Unit in parametrization mode | | Wait until parametrization process is complete |
| 193 | Start prevention signal input | <p>Short circuit or Open circuit According to appliance model, can apply to the following :</p> <ul style="list-style-type: none"> ➤ air pressure switch ➤ flue pressure switch ➤ condensate level switch ➤ burner plate temp. limit switch ➤ Additional external max. temp limit switch ➤ Additional external max. pressure limit switch | <ol style="list-style-type: none"> 1. Check flue path for obstructions. Unblock as required 2. Check connection/wiring and pressure switch. Replace as required. <p>Floor appliances (120 to 280 kW):</p> <ol style="list-style-type: none"> 1. Check connection/wiring and condensate level switch. Replace as required 2. Check connection/wiring and burner plate temp. limit switch. Replace as required <p>Floor appliances >300 kW Same as 120 to 280 kW appliances and</p> <ol style="list-style-type: none"> 3. Also check additional external max temp limit switch and additional external max pressure limit switch and connection. Replace as required |
| 195 | Maximum duration of the refill per charging exceeded | | Check automatic refill system. |
|  <i>The use of an automatic refill system is not recommended</i> | | | |
| 196 | Maximum duration of the refill per week exceeded | | Check automatic refill system. |
|  <i>The use of an automatic refill system is not recommended</i> | | | |
| 209 | Fault heating circuit | | Check the heating circuit configuration. Reset to default parameters |
| 216 | Fault boiler | | Check the heating circuit configuration. Reset to default parameters |
| 217 | Sensor error | | Check connection and sensor. Replace as required. |
| 218 | Pressure supervision | | Check system pressure. |
| 243 | Swimming pool sensor, error | | Check connection and sensor. Replace as required. |
| 260 | Flow temperature 3, sensor error | | Check connection and sensor. Replace as required. |

ADDITIONAL INFORMATION FOR THE INSTALLER

| Error code | Fault description | Explanation | Action(s) |
|------------|--|----------------------------|--|
| 270 | Temperature difference, heat exchanger too large | | Check the heating system external hydraulic components. |
| 317 | Mains frequency outside permissible range | | Check correct electric supply in boiler terminals. |
| 320 | DHW charging temperature, sensor error | | Check connection and sensor. Replace as required. |
| 321 | DHW outlet temperature, sensor error | | Check connection and sensor. Replace as required. |
| 322 | Water pressure 3 too high | | Release the water to a suitable pressure. |
| 323 | Water pressure 3 too low | | Top up the system with water to reach a suitable pressure. |
| 324 | Input BX, same sensors | | Check configuration in parameters list |
| 325 | Input BX/extension module, same sensors | | Check configuration in parameters list. |
| 326 | Input BX/mixing group, same sensors | | Check configuration in parameters list. |
| 327 | Extension module, same function | | Check configuration in parameters list. |
| 328 | Mixing group, same function | | Check configuration in parameters list. |
| 329 | Extension module/mixing group same function | | Check configuration in parameters list. |
| 330 | Sensor input BX1 without function | | Connect temperature sensor in BX terminal |
| 331 | Sensor input BX2 without function | | Connect temperature sensor in BX terminal |
| 332 | Sensor input BX3 without function | | Connect temperature sensor in BX terminal |
| 333 | Sensor input BX4 without function | | Connect temperature sensor in BX terminal |
| 335 | Sensor input BX21 without function | | Connect temperature sensor in BX terminal |
| 336 | Sensor input BX22 without function | | Connect temperature sensor in BX terminal |
| 341 | Sensor B6 missing | Solar sensor missing | Check parameters, connection and component. |
| 349 | Buffer storage tank return valve Y15 missing | | Check connection of return valve Y15. Replace as required. |
| 350 | Buffer storage tank address error | | Correct device address. |
| 351 | Primary controller/ system pump, address error | | Correct device address. |
| 352 | Pressureless header, address error | | Correct device address. |
| 353 | Sensor B10 missing | Common flow sensor missing | Check parameters, connection and component |

| Error code | Fault description | Explanation | Action(s) |
|------------|---|-----------------------------|---|
| 371 | Flow temperature heating circuit 3 | | Check the circuit for fault insulation and heat losses. |
| 372 | Temperature limiter heating circuit 3 | | Allow the circuit to cool down and carry out reset; if the fault occurs several times inform AIC technical support. |
| 378 | Internal repetition | | Contact AIC technical support |
| 382 | Repetition speed | | Contact AIC technical support |
| 384 | Extraneous light | | Shut off gas supply and contact AIC technical support |
| 385 | Mains undervoltage | | Check electric supply in boiler terminals |
| 386 | Fan speed tolerance | | Check air supply |
| 388 | DHW sensor no function | | Check connection and sensor. Replace as required. |
| 391 | Room controller 1 | | Check addresses and parameters |
| 392 | Room controller 2 | | |
| 393 | Room controller 3 | | |
| 426 | Feedback flue gas damper | | Check the connection and component |
| 427 | Configuration flue gas damper | | Check configuration parameters |
| 429 | Dynamic water pressure too high | Expansion tank is defective | Verify pump Replace expansion tank |
| 430 | Dynamic water pressure too low | | Verify pump |
| 431 | Sensor primary heat exchanger | | Check connection and sensor. Replace as required. |
| 432 | Function ground not connected | | Check ground connection and install as required |
| 433 | Temperature primary heat exchanger too high | | Check the heating system external hydraulic components. |

Maintenance Messages

| Code | Meaning | Action |
|------|---|---|
| 1 | Number of burner hours run exceeded | Contact Maintenance service |
| 2 | Number of burner starts exceeded | |
| 3 | Maintenance interval exceeded | |
| 5 | Water pressure 1 heating circuit too low | Fill the circuit to reach acceptable pressure. |
| 18 | Water pressure 2 heating circuit too low (dropped below lower pressure limit 2) | |

ADDITIONAL INFORMATION FOR THE INSTALLER

Troubleshooting

| Problem | Cause(s) | Solution(s) |
|---------------------------------|---|---|
| Boiler does not start | No power supply | <ol style="list-style-type: none"> 1. Check that the power button is in ON position (pushed in and illuminated) 2. Make sure the power supply cable is connected to the mains 3. Check the external power supply box (circuit breaker) and reset it as required. |
| Boiler display remains blank | No power supply | <ol style="list-style-type: none"> 1. Check wiring connection. 2. Check wiring continuity. 3. Replace wiring. |
| | Main board fuse(s) blown | Replace blown fuse(s) on electronic board (T6 3AH 250V). |
| Circulating pump does not start | Pump power supply | <ol style="list-style-type: none"> 1. Check wiring connection. 2. Check wiring continuity. 3. Replace wiring. |
| | Relay malfunction | <ol style="list-style-type: none"> 1. Check the relay. 2. Replace the electronic board. |
| | Pump malfunction | <ol style="list-style-type: none"> 1. Reset the pump. 2. Check if there is voltage at the pump. If there is, replace the pump. |
| Gas smell | Leak in gas circuit | <ol style="list-style-type: none"> 1. Check tightness of connections and circuit. 2. Check that pressure measuring points are closed. |
| Unburned gas smell | Leak in flue gas circuit | <ol style="list-style-type: none"> 1. Check tightness of connections. 2. Check there are no obstructions in the flue system. 3. Check the quality of combustion. |
| Irregular combustion | Wrong combustion settings | Check the values with a gas analyser and readjust as required. |
| | Combustion air circulation | Check that the air openings are not blocked. |
| | Burner and combustion chamber condition | Check if they are clean. |
| | Heat exchanger fire tubes are blocked | Check if condensate outlets are not obstructed. Clean as required. |
| | Fan malfunction | <ol style="list-style-type: none"> 1. Check if fan is working. 2. Check wiring connections 3. Check wiring continuity 4. Check if there is voltage at the fan. If there is, replace the fan. 5. Verify signal cable connection |
| Hard ignition | Wrong size of flue and/or combustion air ducts. | Check duct sizes and correct as required |
| | Wrong combustion settings | Check the values with a gas analyser and readjust as required. |
| | Ignition electrode malfunction | Check the condition and distance at stem tips (refer to Electrode Removal procedure) |

| Problem | Cause(s) | Solution(s) |
|---|---|---|
| Burner does not start after receiving signal from boiler controller | Gas valve malfunction | <ol style="list-style-type: none"> 1. Check wiring connections 2. Check components |
| | Fan malfunction | |
| | Ignition/ionization electrode malfunction | |
| Combustion chamber gets dirty | Wrong combustion settings | Check the values with a gas analyser and readjust as required. |
| Boiler does not reach working temperature | Boiler controller | <ol style="list-style-type: none"> 1. Adjust temperature setpoint. 2. Check controller operation. 3. Replace controller. |
| | Poor heat transfer | Clean combustion chamber |
| | Insufficient burner power | Check combustion settings |
| | Dirty burner | Clean burner |
| | Wrong chimney pressure drop | Check chimney pressure drop |
| Temperature too high compared to setpoint | Boiler controller malfunction | <ol style="list-style-type: none"> 1. Check temperature setpoint. 2. Check controller operation. 3. Check position of temperature sensors. |
| Heat exchanger reaches temperature setpoint but radiators are cold | Radiator valves closed | Open radiator valves |
| | Air in the system | Bleed the air present in the heating system |
| | Circulating pump malfunction | <ol style="list-style-type: none"> 1. Check if circulating pump is running 2. Check pump wiring connection and continuity. |
| | | <ol style="list-style-type: none"> 3. Reset pump 4. Check if there is voltage at the pump. If there is, replace the pump. |
| Safety valve opens frequently | System safety valve | Check pressure rating of the safety valve (suitable to the system pressure). |
| | Pressure in the heating system | Check the pressure in the system (max. 6 bar). |
| | Expansion tank | Check the expansion tank size and operation. |

ADDITIONAL INFORMATION FOR THE INSTALLER

Installation Checklist

| | Unit | Values/Comments |
|--|----------------------------|-----------------|
| General/heating system | | |
| Type of building/system | | |
| Commercial purpose (Y/N) ? | | |
| Year of manufacture | | |
| Output of system | kW | |
| Heated surface | m ² | |
| Number of heating circuits: | | |
| • Floor heating | | |
| • Radiators | | |
| • Other | | |
| Cascade (Y/N)? Number of appliances? | | |
| Water | | |
| Water hardness at start up | mol/m ³ or mg/l | |
| System volume | L | |
| Additive(s)/Antifreeze (Y/N)? | | |
| • Type | | |
| • Quantity | % | |
| Gas | | |
| Type? | | |
| Heating value | kWh/m ³ | |
| Gas pressure regulator installed (Y/N)? Type ? | | |
| Hydraulics | | |
| Heating circuit normal pressure | bar | |
| Air purged from the system (Y/N)? | | |
| Safety valve installed (Y/N)? rating? | bar or kW | |
| Expansion tank(s) installed (Y/N)? | | |
| Type(s) ? | | |
| • Size? | L | |
| • Precharged pressure ? | bar | |
| • Number | | |

| | Unit | Values/Comments |
|--|-----------------|-----------------|
| Plate heat exchanger in the system (Y/N)? Type? | | |
| Low loss header in system (Y/N)? Type ? | | |
| Number of mixers ? | | |
| Buffer tank (Y/N)? Size? | L | |
| DHW tank (Y/N)? Type? | L | |
| Pump(s) (Y/N)? Type? | | |
| <ul style="list-style-type: none"> In which circuit(s) Chosen according to requirements for the appliance? | | |
| Flue gas | | |
| Open or closed system? | | |
| Dimensions of combustion air openings if closed system | cm ² | |
| Material of flue piping | | |
| Diameter and length of piping system | mm / m | |
| Chimney system engineered by? | | |
| Calculated pressure drop, including maximum wind condition (<200 Pa)? | Pa | |
| Cascade (Y/N)? | | |
| Back-flow preventer or non-return valve installed (Y/N)? Type? | | |
| Condensates | | |
| Condensate discharge slope | ° or cm/m | |
| Condensate trap filled (Y/N)? | | |
| Neutralisation system installed (Y/N)? Type ? | | |
| Condensate pump installed (Y/N)? | | |
| Condensate pump control line connected (Y/N)? | | |

ADDITIONAL INFORMATION FOR THE INSTALLER

[illegible]

Combustion Parameters - Log Sheet

ADDITIONAL INFORMATION FOR THE INSTALLER

Water Parameters - Log Sheet

Recommended parameters to be checked during installation and operation of the boiler:

Meter reading before initial filling: Z=..... m³

| Date | Meter reading Z _{new} in m ³ | Quantity of Water V=Z _{new} -Z in m ³ | Total alkaline earths or total hardness in mol/m ³ or °d | pH value | Conductivity in µS/cm | System pressure p _{inst} in bar | Addition | Signature |
|------|--|---|--|-------------|--------------------------|---|----------|-----------|
| | | | | | | | | |

| Water Filling Date | Water Top-up Date | Water Quality | Water Treatment | Remarks | Name & signature |
|--------------------------|-------------------------|------------------|--------------------|---------|---------------------|
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

Gas conversion - Log Sheet

This appliance was converted on ____/____/20____ (dd/mm/yyyy)
 from gas _____ to gas _____ (Gas Type: Natural gas G20/G20Y20, G25, G25.3/ Propane G31)
 with Kit _____ (fill in with kit name or number (if required) or cross it out)
 by: _____ (name and address of organization making this conversion, who accepts responsibility for the correctness of this conversion)

This appliance was converted on ____/____/20____ (dd/mm/yyyy)
 from gas _____ to gas _____ (Gas Type: Natural gas G20/G20Y20, G25, G25.3/ Propane G31)
 with Kit _____ (fill in with kit name or number (if required) or cross it out)
 by: _____ (name and address of organization making this conversion, who accepts responsibility for the correctness of this conversion)

This appliance was converted on ____/____/20____ (dd/mm/yyyy)
 from gas _____ to gas _____ (Gas Type: Natural gas G20/G20Y20, G25, G25.3/ Propane G31)
 with Kit _____ (fill in with kit name or number (if required) or cross it out)
 by: _____ (name and address of organization making this conversion, who accepts responsibility for the correctness of this conversion)

This appliance was converted on ____/____/20____ (dd/mm/yyyy)
 from gas _____ to gas _____ (Gas Type: Natural gas G20/G20Y20, G25, G25.3/ Propane G31)
 with Kit _____ (fill in with kit name or number (if required) or cross it out)
 by: _____ (name and address of organization making this conversion, who accepts responsibility for the correctness of this conversion)

DECLARATION OF CONFORMITY



EU Declaration of Conformity No. 2020/01EU/02

Product identification: **Floor-standing Condensing Boiler**
Nesta 120 (N 120 FS), Nesta 160 (N 160 FS),
Nesta 200 (N 200 FS), Nesta 250 (N 250 FS), Nesta 300 (N 300 FS)

Manufacturer: AIC EUROPE BV
Graafschap Hornelaan 163A
NL-6001 AC Weert
The Netherlands

This declaration of conformity is issued under the sole responsibility of the manufacturer. The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

GAR Gas Appliance Regulation (EU) 2016/426
BED Boiler Efficiency Directive 92/42/EEC
ErP Energy Related Products Directive 2009/125/EC
LVD Low Voltage Directive 2014/35/EU
EMC Electromagnetic Compatibility Directive 2014/30/EU
RoHS Restriction of Hazardous Substances Directive 2011/65/EU

| | |
|--|--|
| Conformity assessment procedure: | Module B + D |
| Name, address, identification number of the notified body: | Module B: SZUTEST Engineering Test Institute, Brno, Czech Republic; ID no. 1015 |
| Number EU Type Test Examination Certificate: | 1015-GAR-02338-19 / 1015-BED-02340-19 |
| Validity date: | 29.08.2029 / - |
| Product-ID-Number: | CE-1015CU0749 |
| Name, address, identification number of the notified body: | Module D: SZUTEST Engineering Test Institute, Brno, Czech Republic; ID no. 1015 |

The conformity of the product described above with the provisions of the applied Directives is demonstrated by compliance with the following standards / regulations:

| | |
|---------------------------|-----------------------|
| EN 15502-1:2021 | EN IEC 61000-6-1:2019 |
| EN 15502-2-1:2012+A1:2016 | EN IEC 61000-6-3:2021 |
| EN 60335-1:2012 | EN IEC 61000-3-2:2019 |
| EN 60335-2-102:2016 | EN 61000-3-3:2013 |
| EN 62233:2008 | |

Signed for and on behalf of AIC EUROPE B.V.
Weert, 04.11.2022


Cyril Bongaerts
Research & Development Director

NOTES

[illegible]

NOTES

AIC Europe B.V.
Graafschap Hornelaan 163A
NL-6001 AC Weert
The Netherlands

www.myaic.eu